

Niko Rocker set for double switch functions

211-56002

4 year
warranty

The Niko Rocker set contains a left and a right Rocker part. The left part clicks onto the left switch function. The right part clicks onto the right switch function. Click both Rocker parts onto the function before you click the Niko Rocker faceplate into place.

The Niko Rocker set consist of a click connector made out of high grade, durable plastic that permanently fixes the two levers. The levers are made of aluminium.

- Exclusive materials
- Metal controls
- Authentic vintage design
- Belgian design & craftsmanship
- Proven Niko quality
- Unique illuminated switch design (by adding feedback LED)



Technical data

Niko Rocker set for double switch functions.

- Number of buttons: 2
- Material finishing: aluminium
- Type of control: switch
- Number of lenses: 0
- Marking: CE