



Maestro 60-3 RCH Module











Installatiehandleiding
Instructions for installation
Installationsvorschrift
Instructions d'installation



Volg de instructies in de afbeeldingen nauwgezet.
Please observe the instructions in the figures carefully.
Bitte befolgen Sie die Anweisungen in den Bildern genau.
Suivez strictement les instructions figurant dans les illustrations.



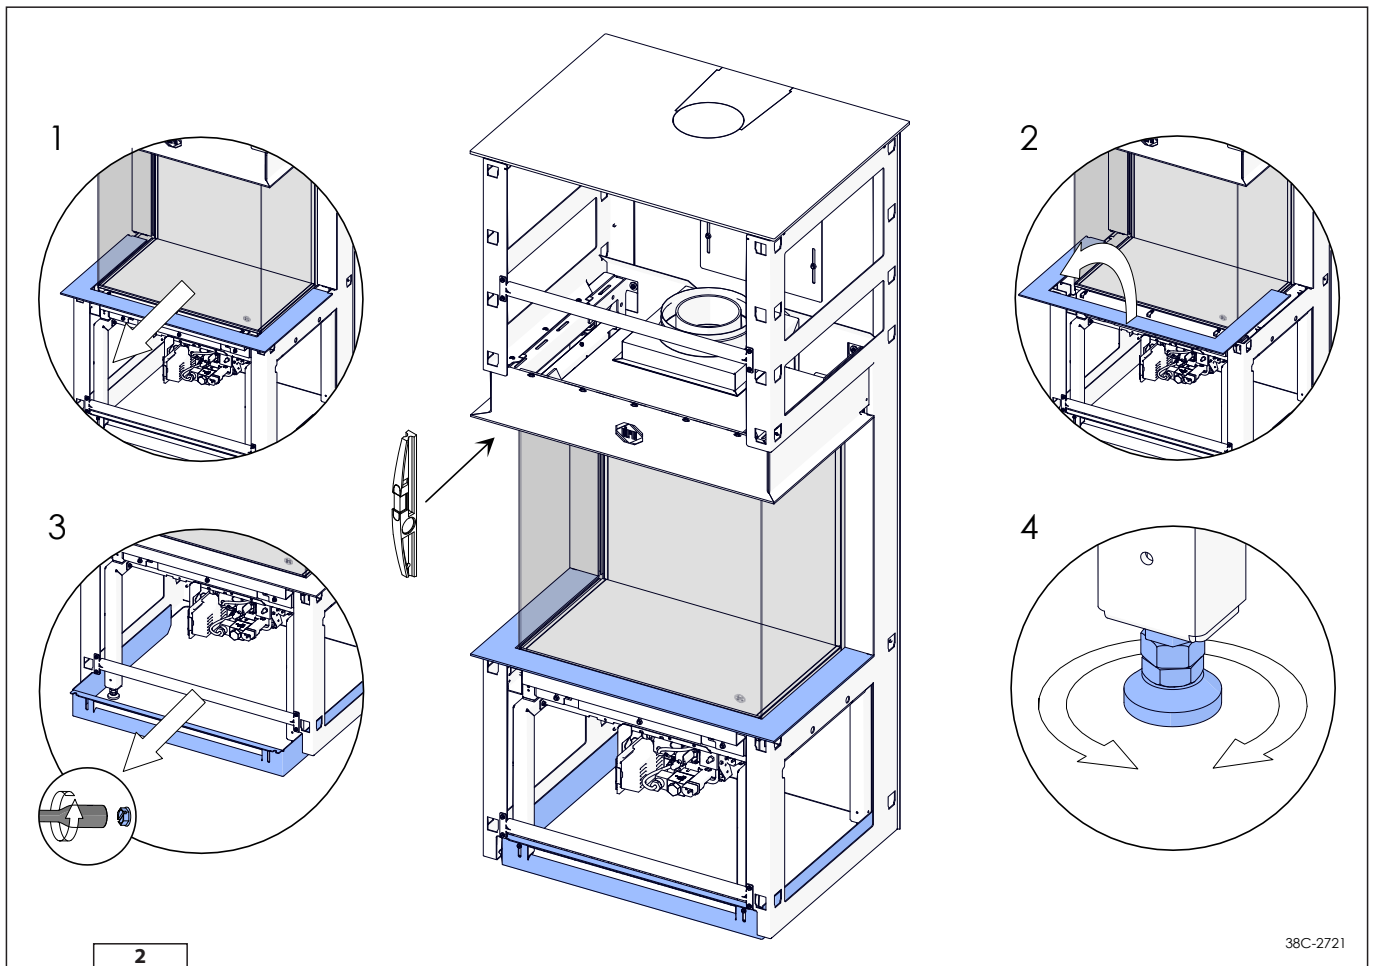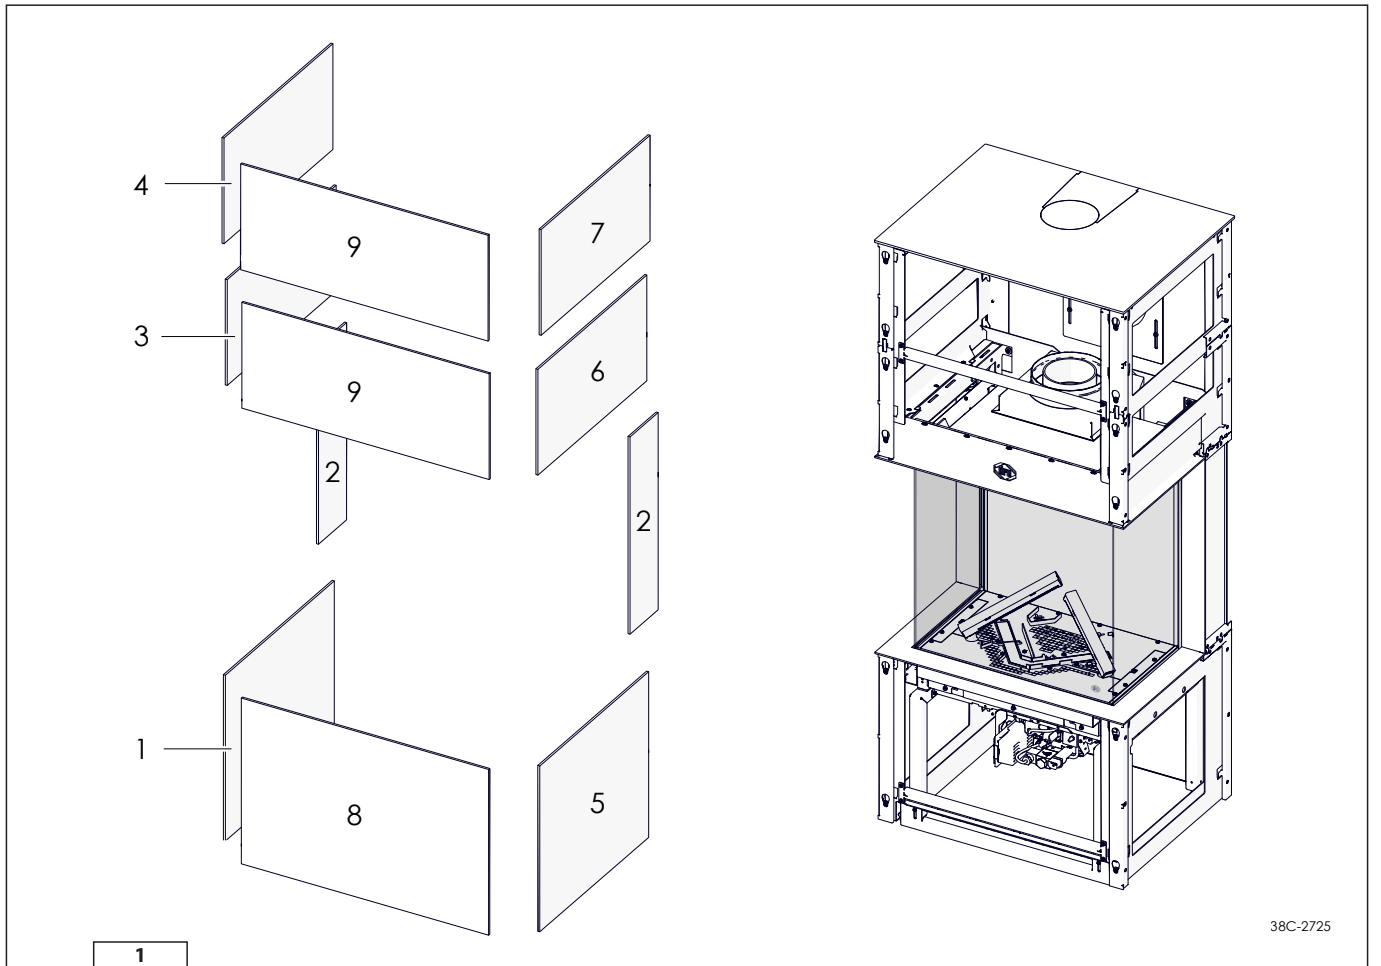

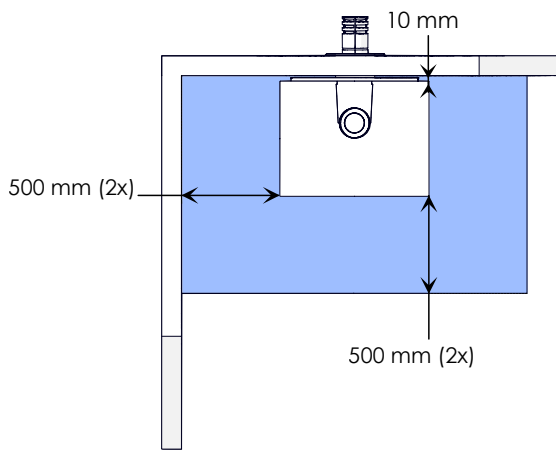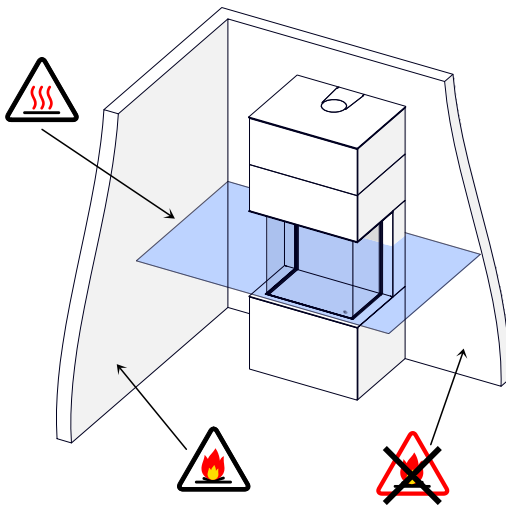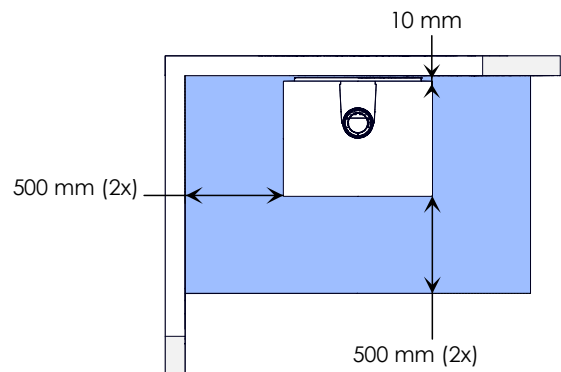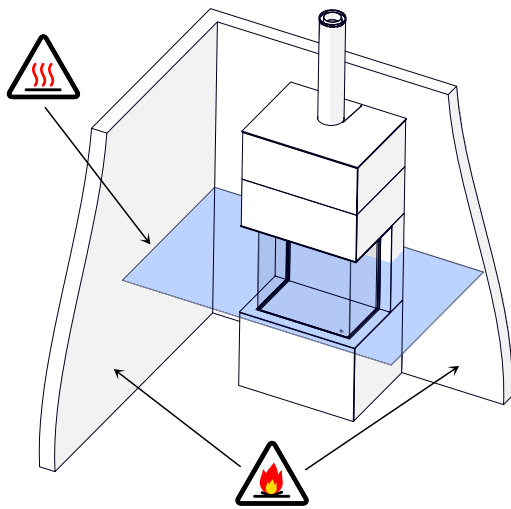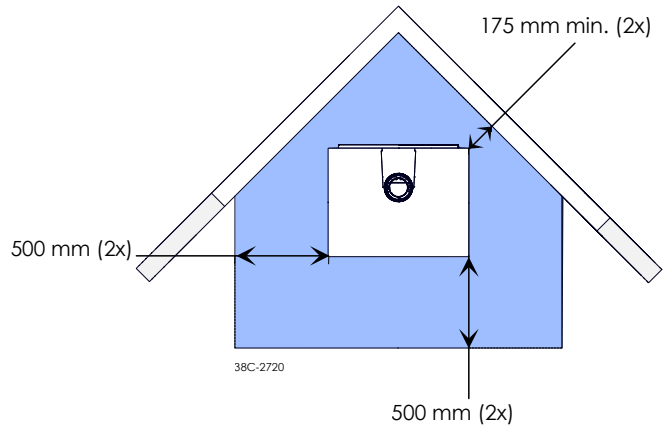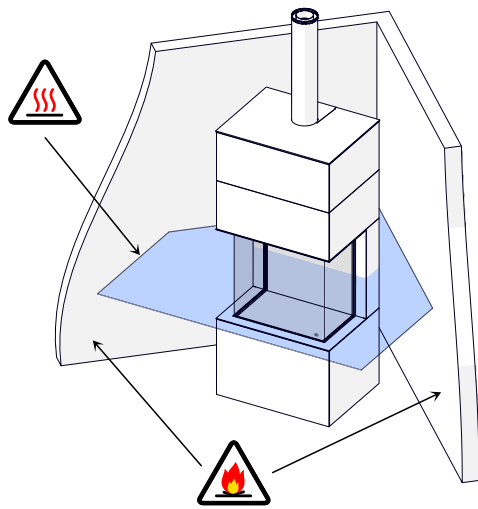

Brandbaar materiaal / Flammable material
Entzündliches Material / Matière inflammable
≤ 80°C







Onbrandbaar materiaal / Non-flammable material
Nicht brennbares Material / Matériau ininflammable
≤ 150°C



Stralingsbereik / Radiation range
Strahlungsbereich / Zone de rayonnement
≤ 80°C





Concentrisch systeem bovenzijde / Concentric system top
Konzentrisches System Oberseite / Système concentrique face supérieure

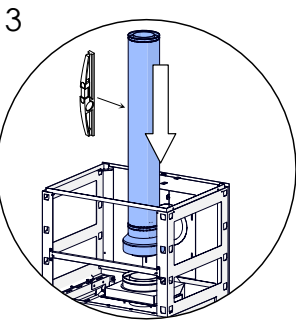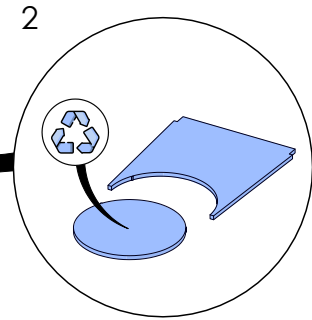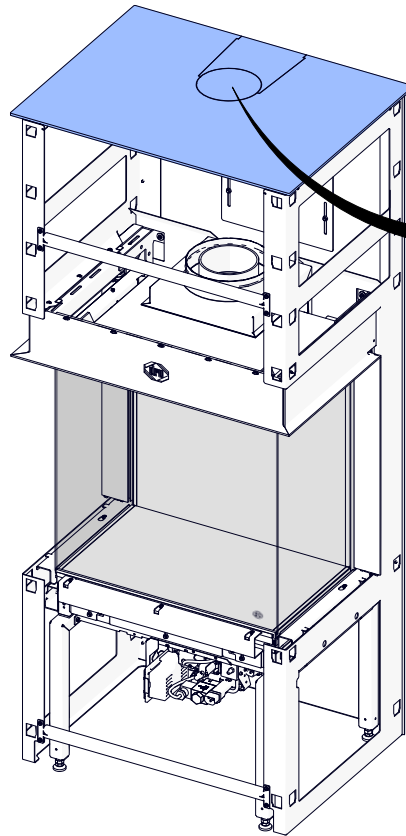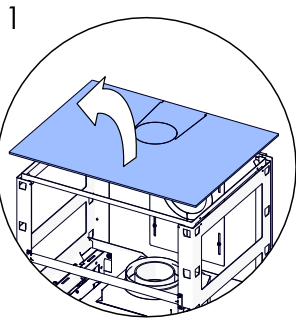

4


38C-2722

Concentrisch systeem achterzijde / Concentric system rear
Konzentrisches System Rückseite / Système concentrique arrière

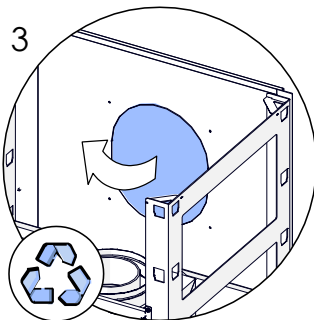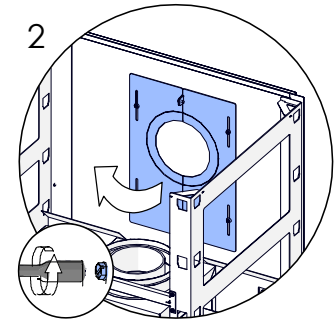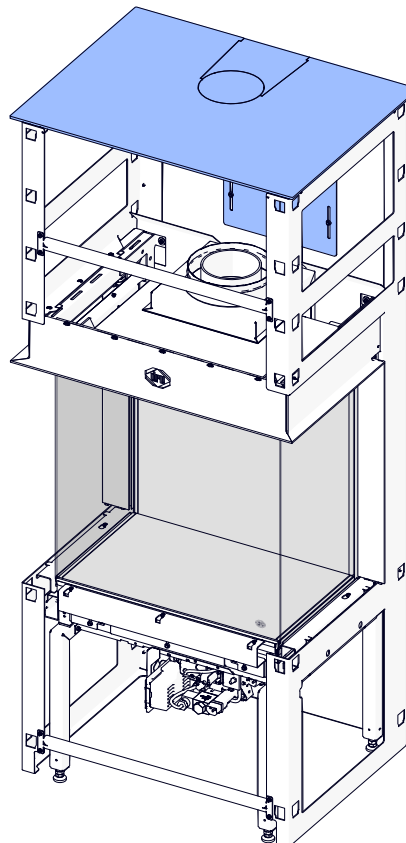
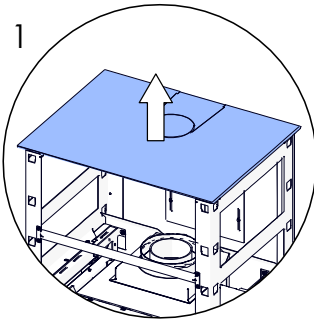


5



38C-2723

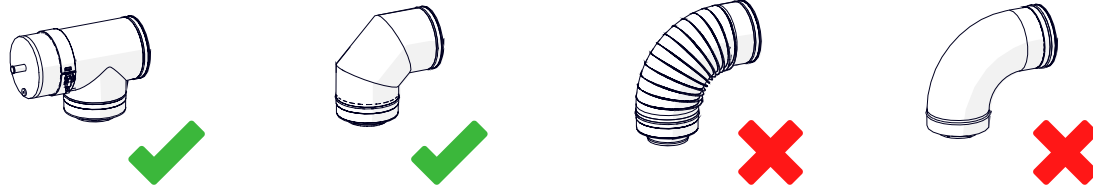



DRU LAS ES-I 150/100
DRU LAS AG-I 150/100

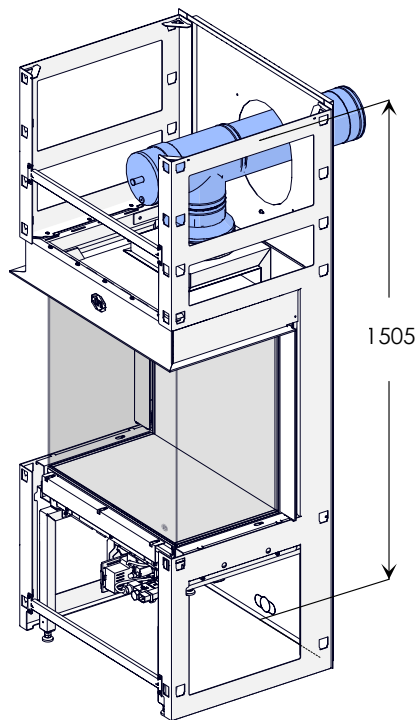
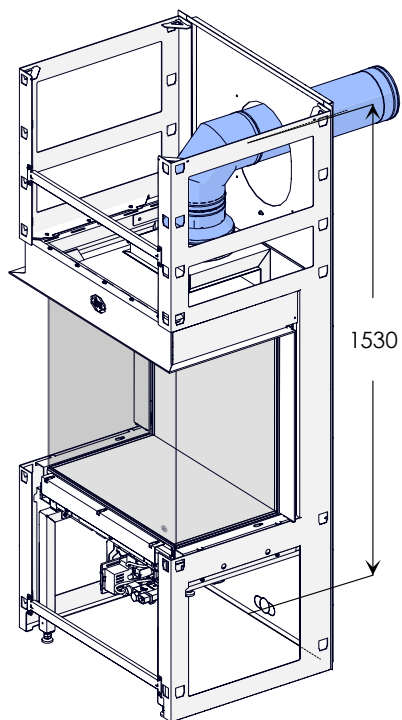




DRU LAS ES-I 200/130

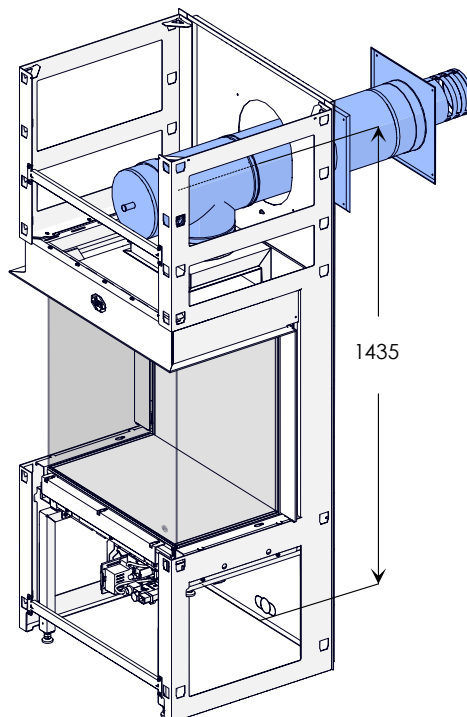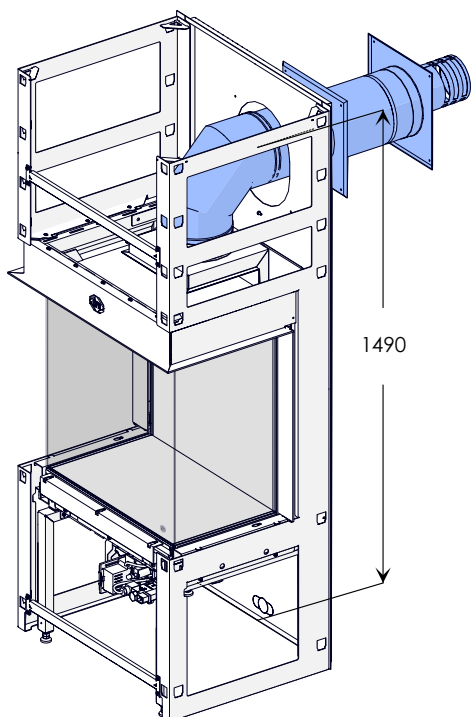





38C-2724

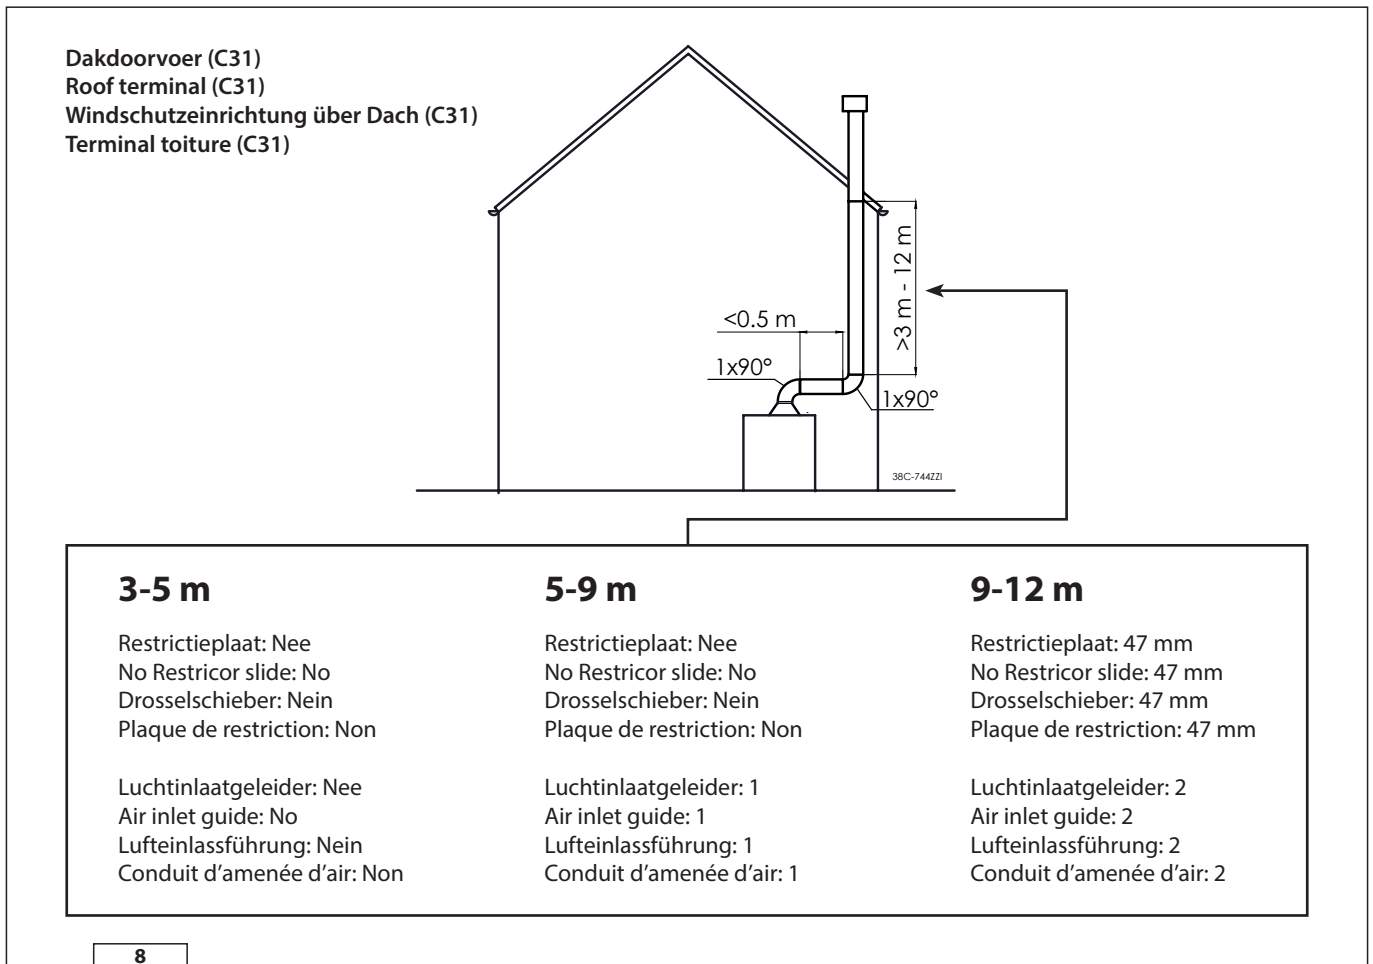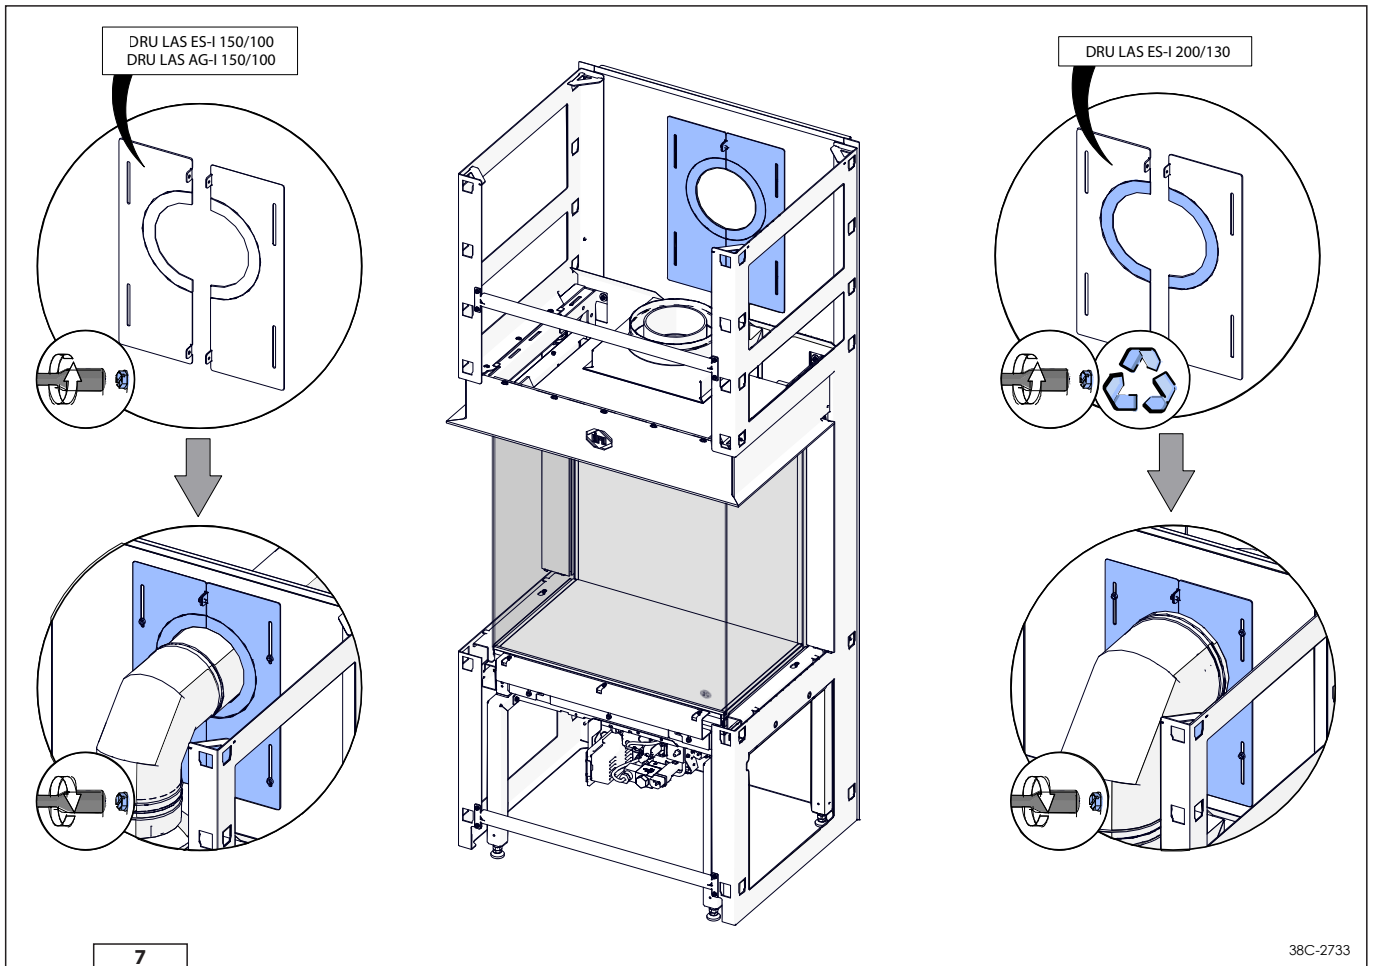

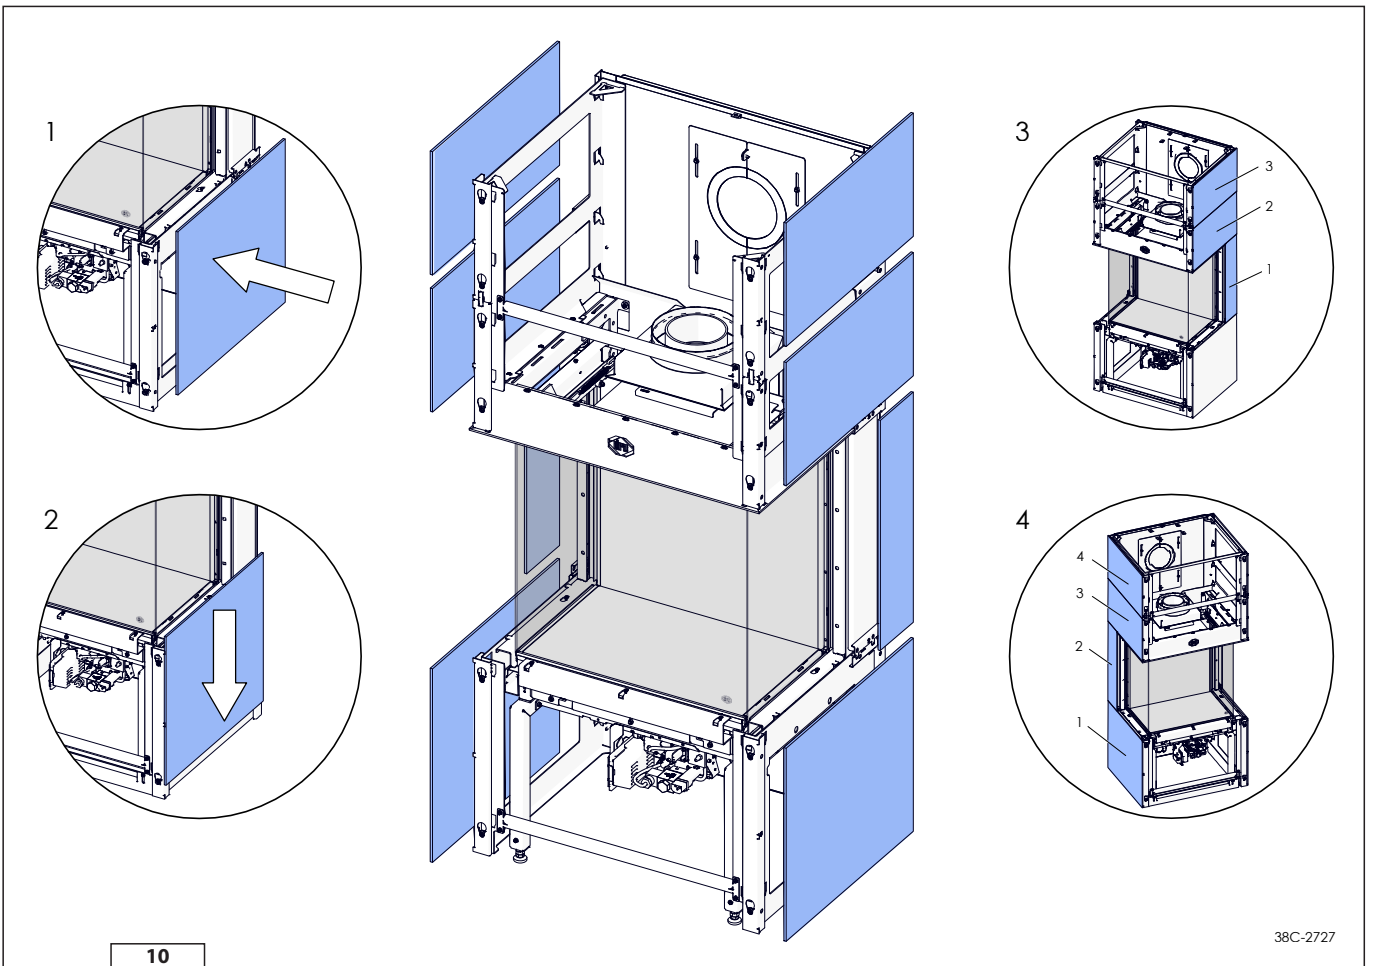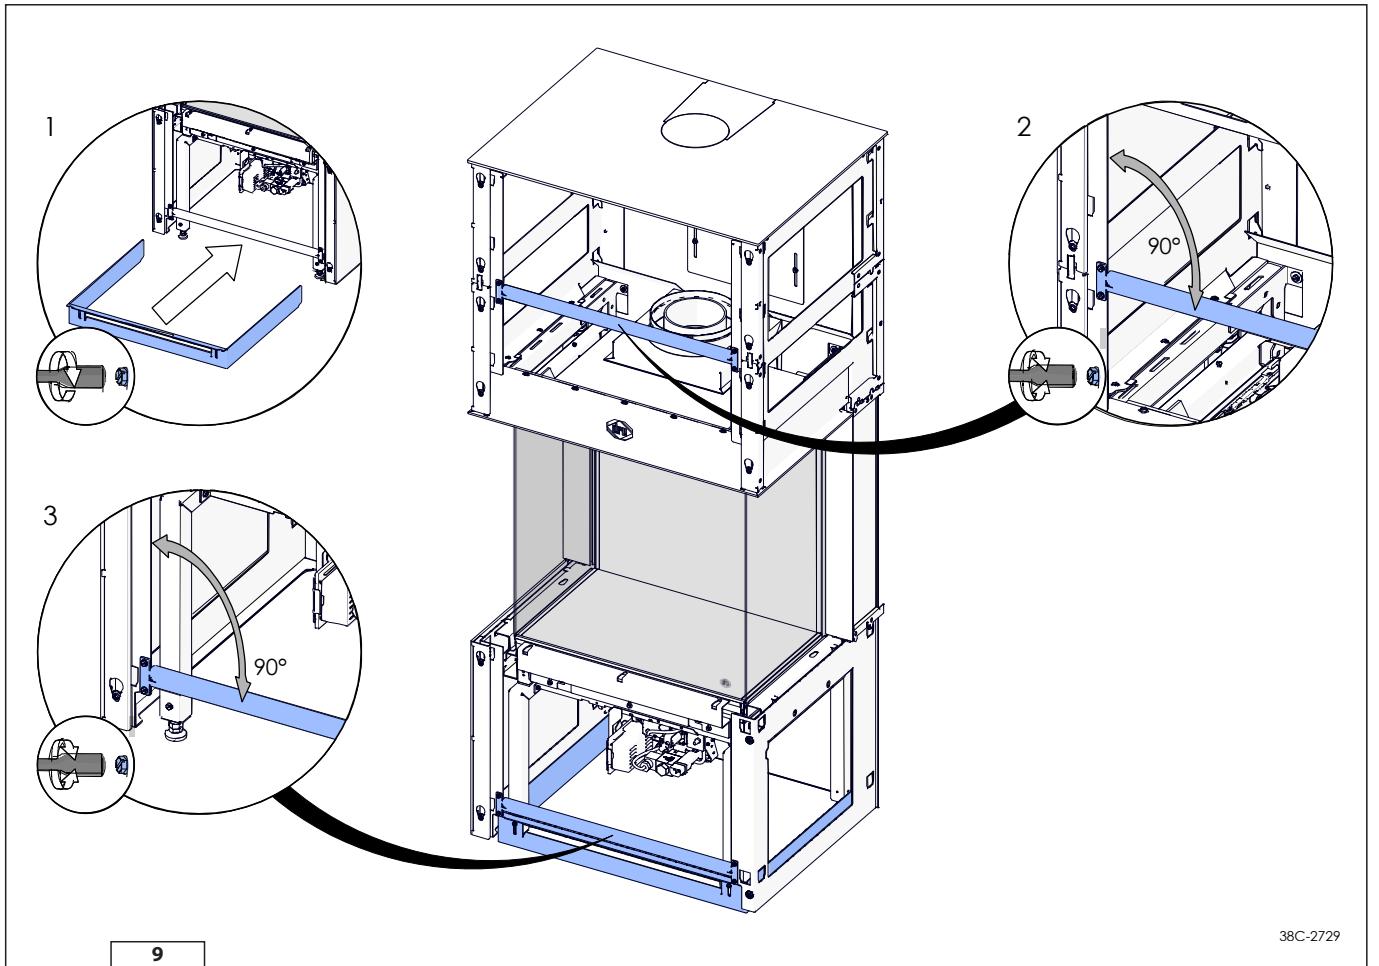

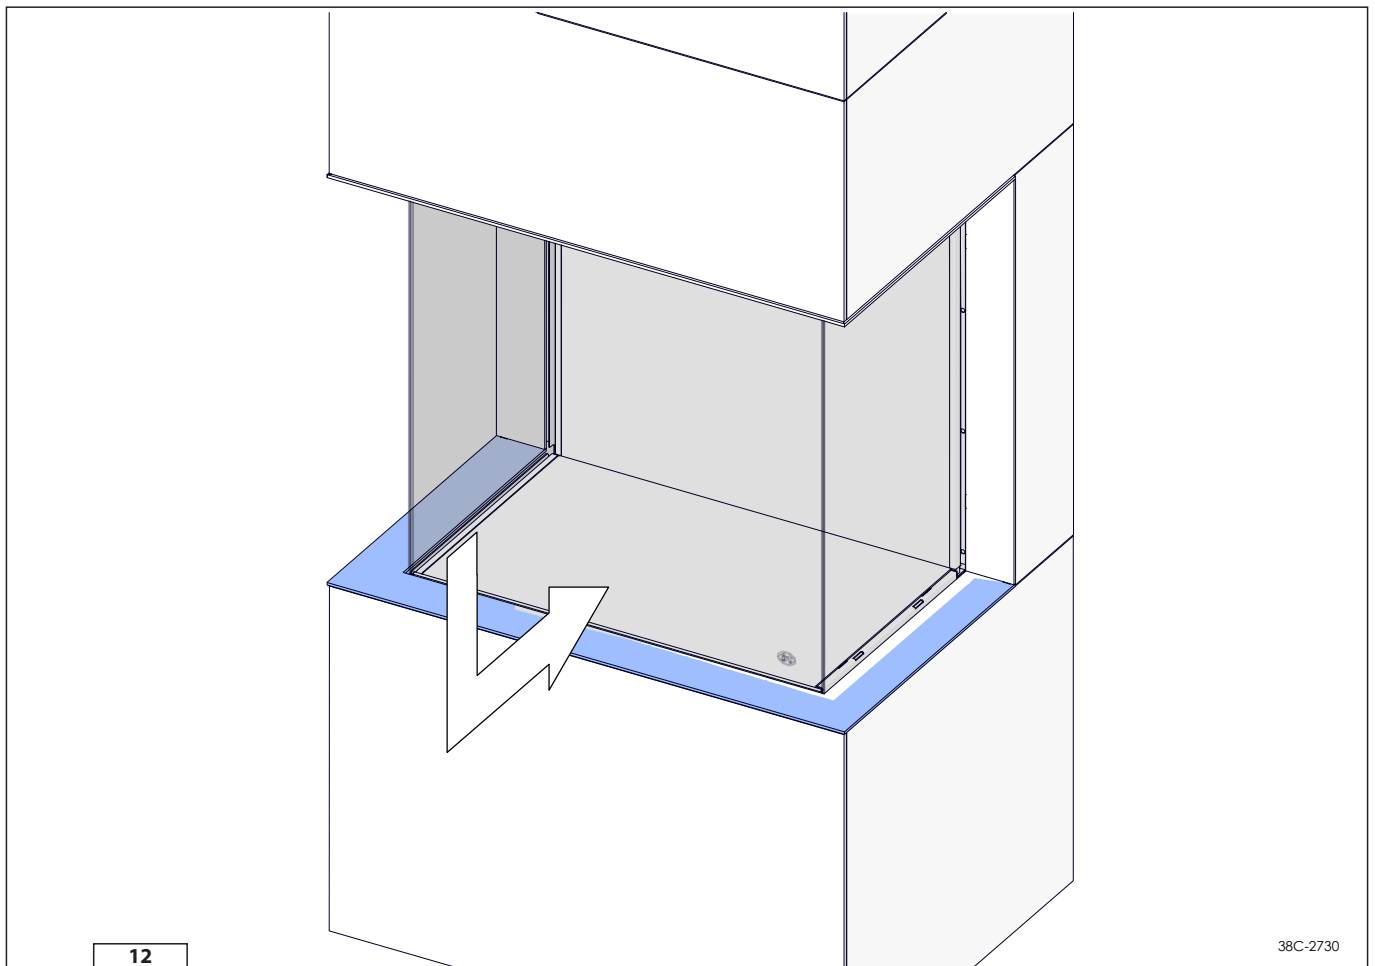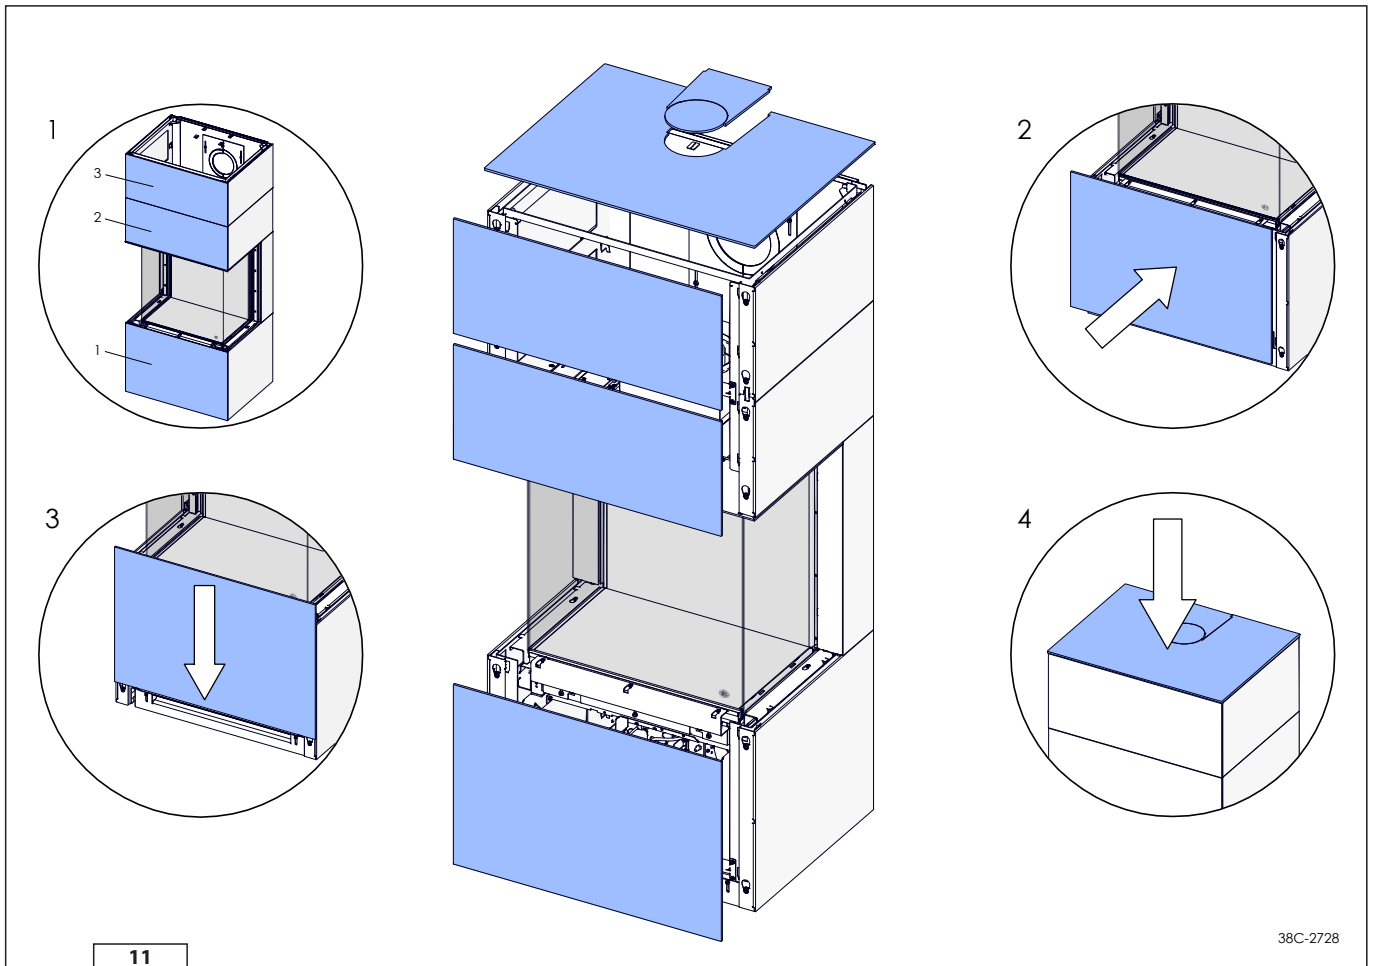

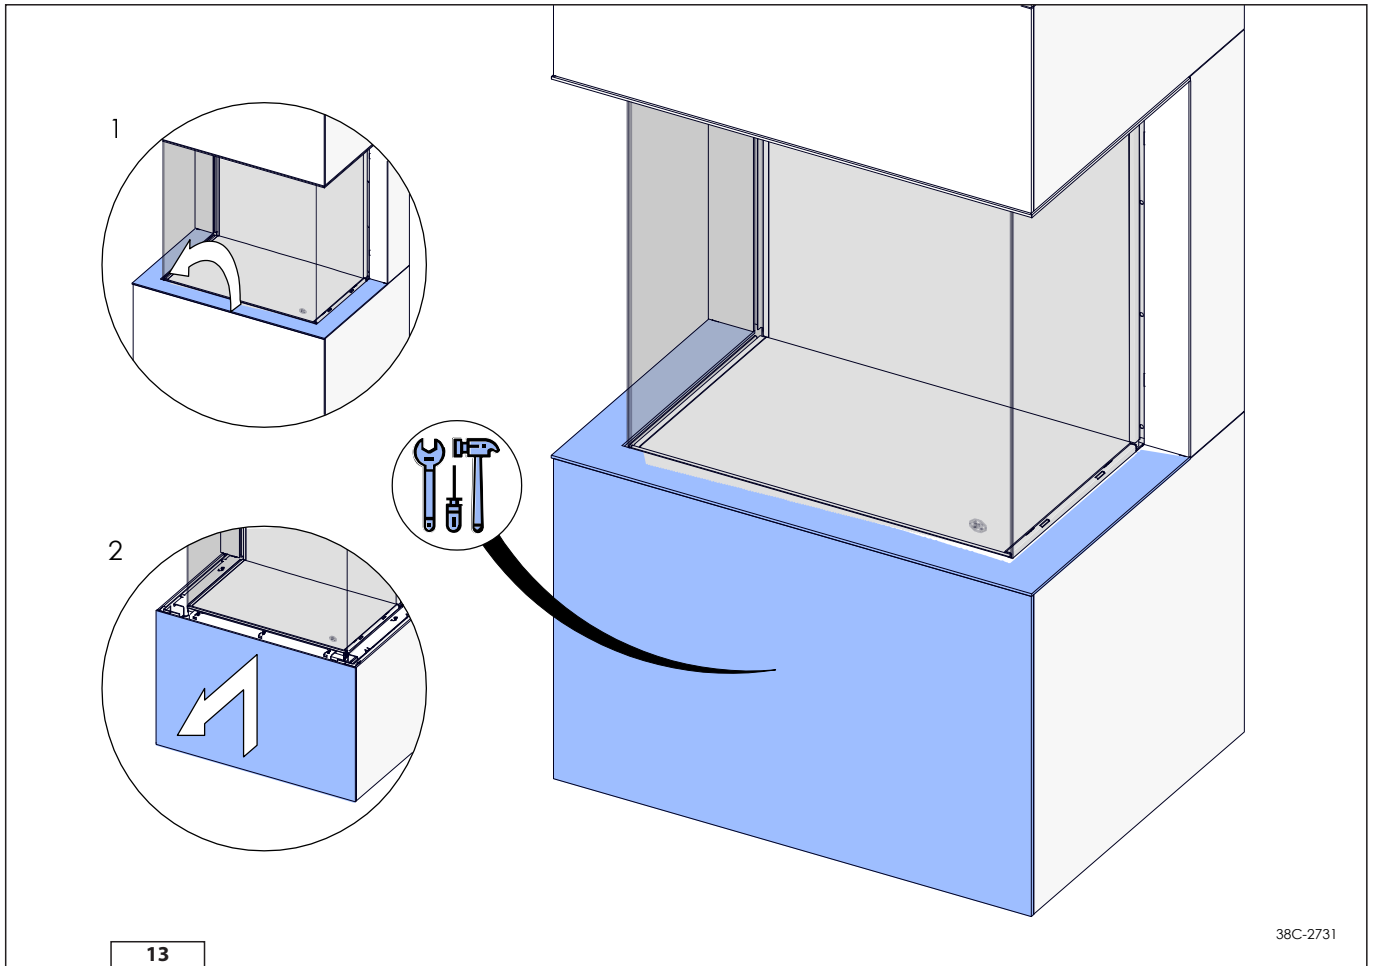

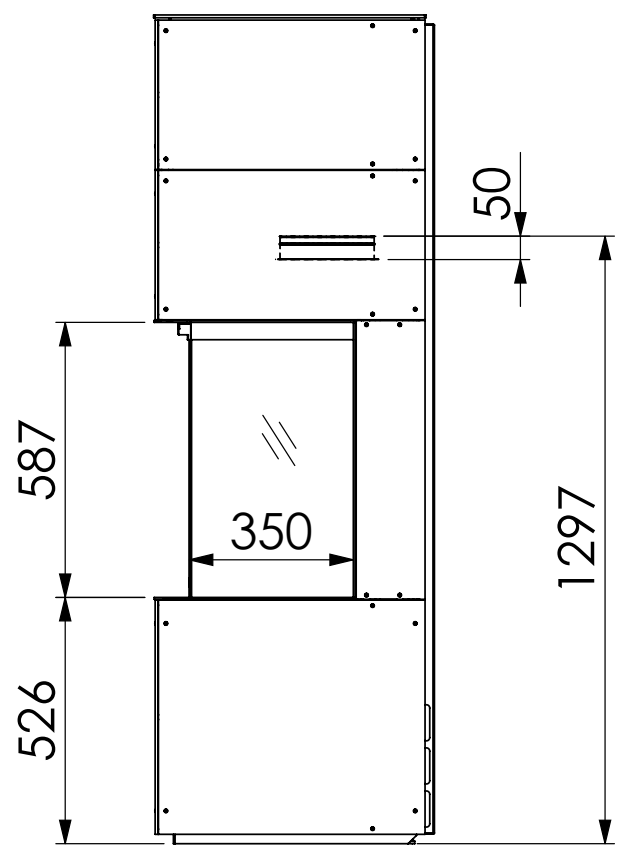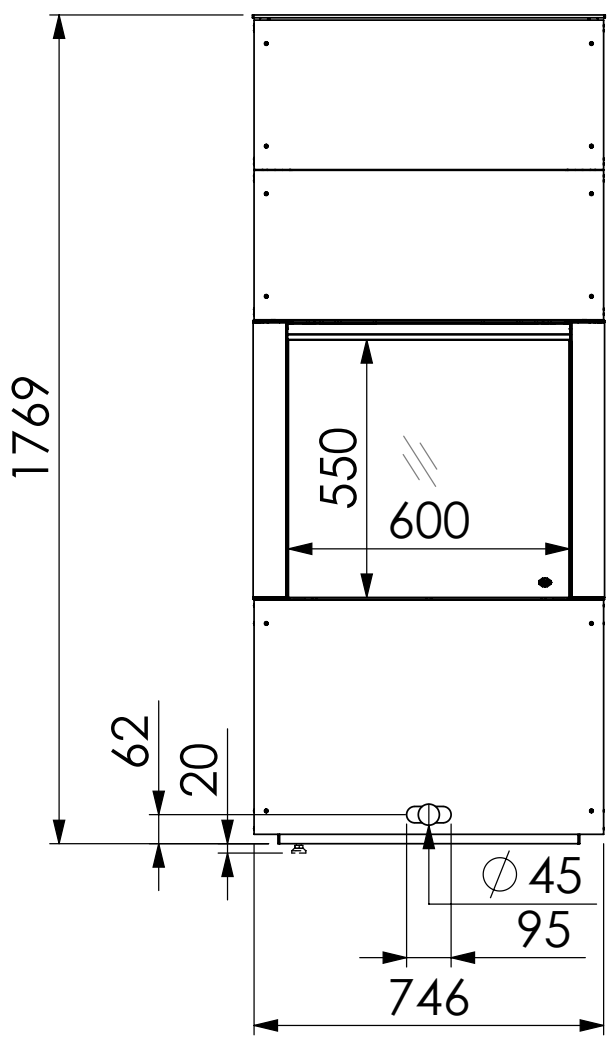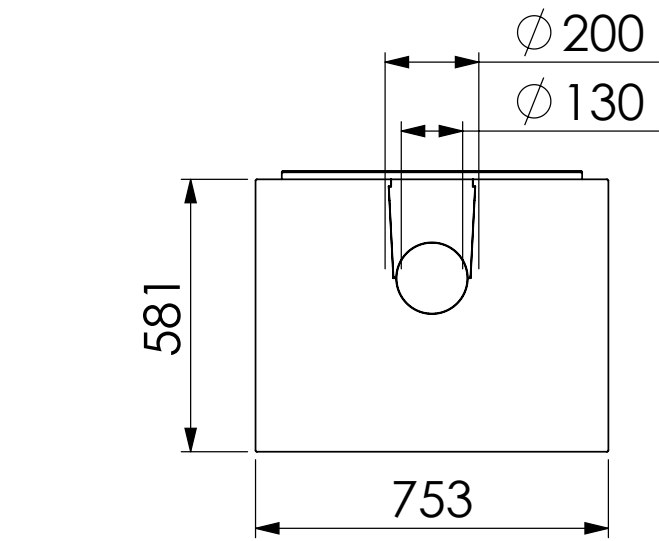



DRU Verwarming B.V.
The Netherlands

Postbus 1021, NI-6920 BA Duiven
Ratio 8, NL-6921 RW Duiven
