






INSTALLATIEHANDLEIDING
INSTRUCTIONS FOR INSTALLATION
INSTALLATIONSVORSCHRIFT
INSTRUCTIONS D'INSTALLATION

Aansluiting externe lucht Ø80 voor Ivar 10 H2O
External air connection Ø80 for Ivar 10 H2O
Außenluftanschluß Ø80 für Ivar 10 H2O
Raccordement d'air extérieur Ø80 pour Ivar 10 H2O






Volg de instructies in de afbeeldingen nauwgezet.
Please observe the instructions in the figures carefully.
Bitte befolgen Sie die Anweisungen in den Bildern genau.
Suivez strictement les instructions figurant dans les illustrations.






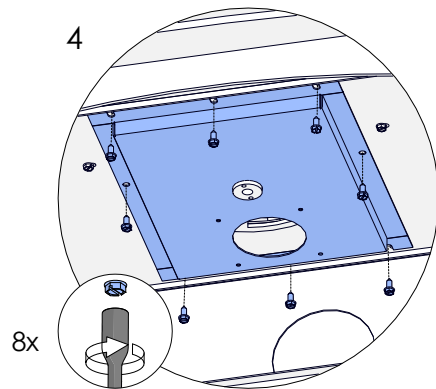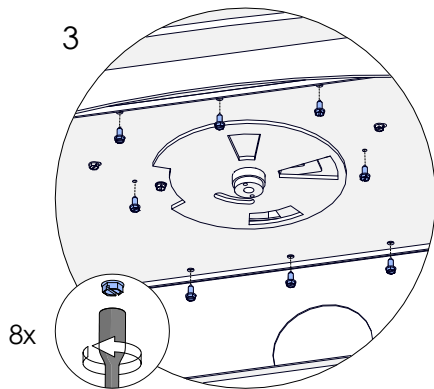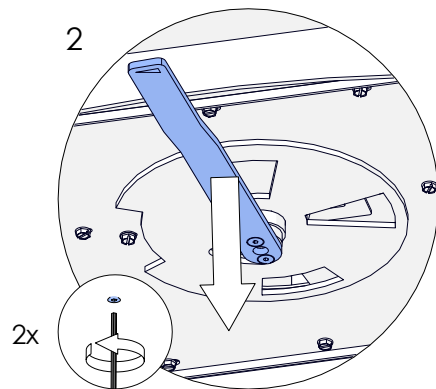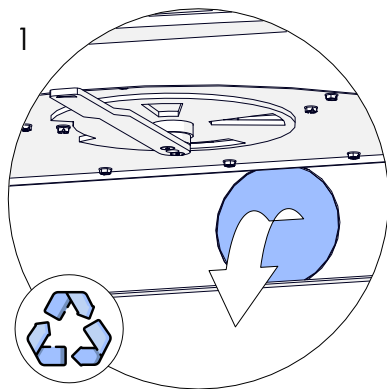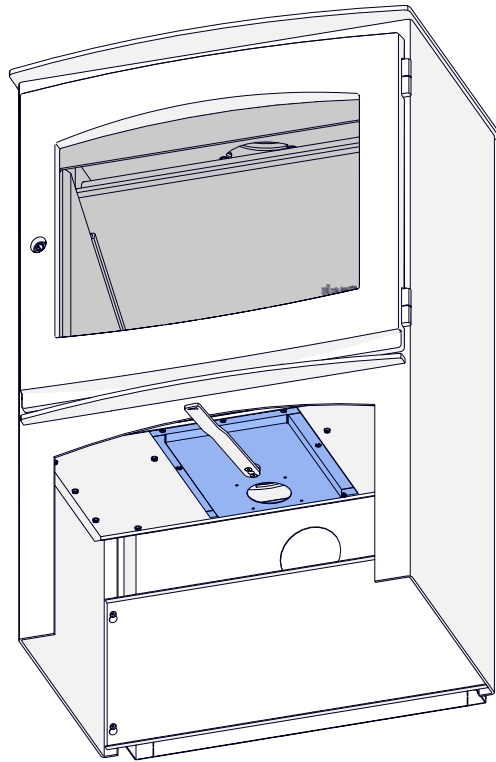

52c-0265

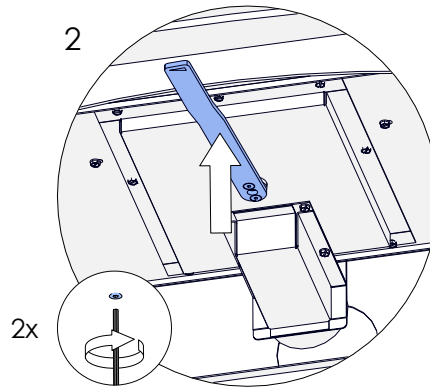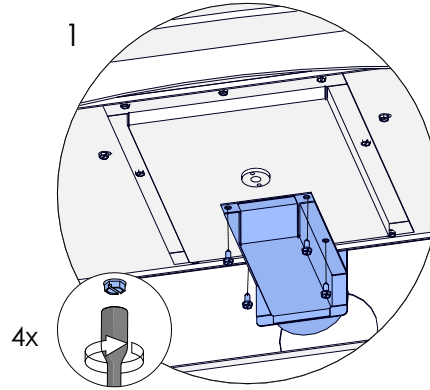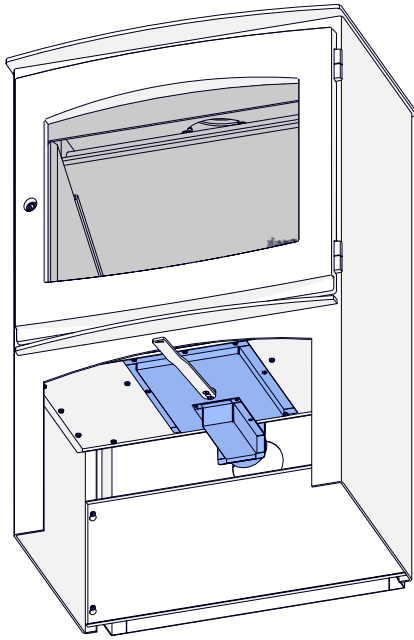

52c-0266

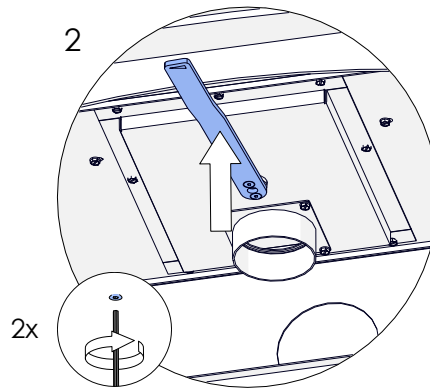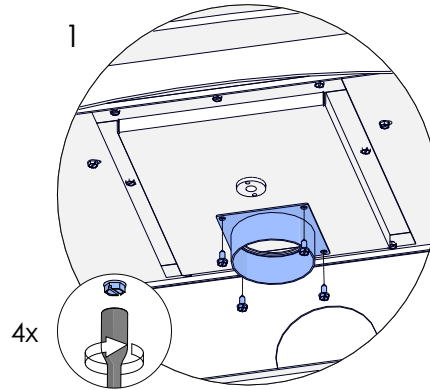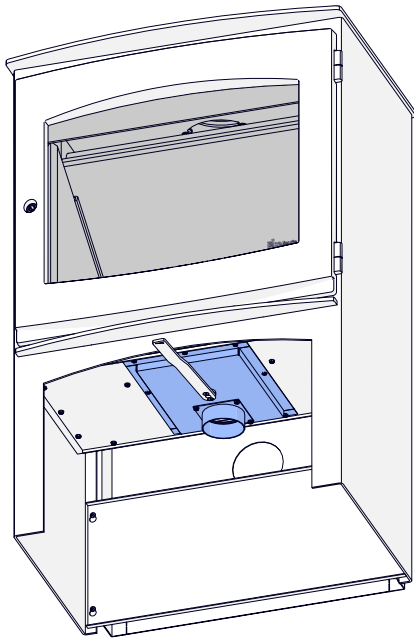



DRU Verwarming B.V.
Ratio 8, 6921 RW Duiven
Postbus 1021, 6920 BA Duiven
Nederland

DRU Belgium
Kontichsesteenweg 69/1 Unit A-6
2630 Aartselaar
Belgium

Drugasar Ltd.
Deans Road, Swinton
Manchester M27 0JH
United Kingdom