

This instruction card will provide you with information that you need for a good and safe operation of the gas stove, so that you are able to enjoy the comfortable and atmospheric heat of this DRU appliance.


Operation

The appliance can be easily operated via the control panel. This panel consists of "+" and "-" keys, a light sensor, a movement sensor and a display for feedback.

Switching on the appliance




When you approach the control panel, the following image is shown on the display.

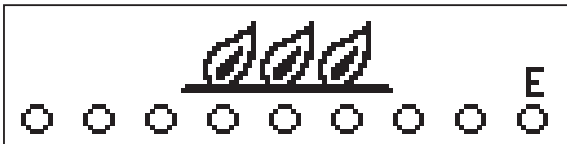

Simultaneously press "+" and "-" for at least 1 second. The appliance will switch on and the image above will appear on the display. As soon as the appliance has been ignited, it will burn with maximum power and 8 of the 9 rounds on the display of the control panel will light up. By means of the "+" and "-" keys you will now be able to adjust the flame height; there are 9 variations (8 flame heights and a DRU Eco Wave variation). If an appliance consists of two burners, a burner will switch off or on between positions 4 and 5. It is possible that you can hear a click sound.

DRU Eco Wave: not too hot and still have a lively flame effect

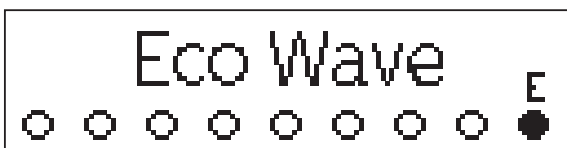

Press (assuming that the display shows 8 rounds) "+" once in order to activate the "Eco Wave". The round at the "E" lights up and "Eco Wave" appears on the display. Now, the flames will automatically

vary in height and generate heat more evenly as a result. Press "-" once to stop the "Eco Wave".

Switching off



Set the appliance to the lowest burner position. Only the first round will light. Now press "-" once more. "Off" will appear on the display, press "+" to switch off the appliance.


Movement / light sensor

If no movement is detected for one hour, the appliance will switch off. The appliance will also switch off approx. 10 minutes after the light is switched off. The appliance will continue to burn if it was switched on in the dark, and as long as there is movement.

Other Symbols



After this waiting period, the appliance can be ignited again.

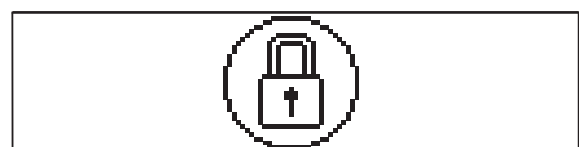

The appliance is locked and can no longer be used. Contact the supervisor.



In case of problems with igniting the appliance, an error code with reset message will appear on the control panel's display. Simultaneously press "+" and "-" on the control panel for at least 1 second in order to reset the appliance. Now try to re-ignite the appliance. The system can be reset and re-ignited two times in a row at most. After that the system will enter a failure condition.



Failure: Contact the supervisor.
No image on the control display: Contact the supervisor.

For your safety

During use, please observe the following safety instructions in order to prevent fire, personal injury or other serious damage:

- ▶▶▶▶▶ **If the appliance has a failure and/or functions poorly, immediately contact the supervisor. The appliance may not be used any more and must first be checked for reasons of safety.**
- ▶▶▶▶▶ **Do not use the appliance if a glass pane is torn or broken.**
- ▶▶▶▶▶ **Avoid contact with hot parts of this appliance in order to prevent burns.**
- ▶▶▶▶▶ **Do not leave children and persons who cannot judge the consequences of their actions alone with a burning appliance.**
- ▶▶▶▶▶ **Make sure that combustible objects and/or materials such as curtains have a distance from the appliance and/or the flues of at least 50 cm.**
- ▶▶▶▶▶ **Do not dry clothes, towels etc. on and/or near the appliance, in order to prevent fire.**