



Tuotetiedot							
Tuotekoodi	Tuotenimi	I_n Al	I_n Cu	U_n	I_{max} Al	I_{max} Cu	U_{max}
VG03-0028	Liitinkiskoadapteri OJL 400 C	380 A	425 A	1000 V	-	-	-

Asennus	
Asennustapa	Ruuvi M10


Liitinkiskoadaptoreita käytetään OJL-liittimien liittämiseksi kuparisiin tai alumiinisiin virtakiskoihin. Adapteri on valmistettu tinatusta kuparista.

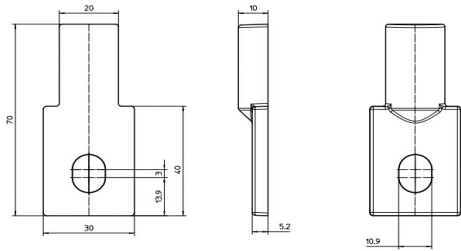


Asennus virtakiskoon pulttikiinnityksellä.
Max. Ruuvi $\varnothing$ 10

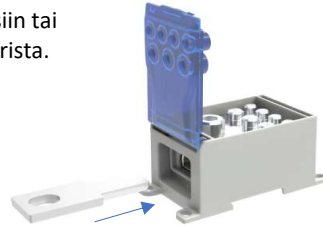


Adapterin asennus OJL 400 C.
Nosta OJL:n kansi ylös ja aseta adapteri liittimen syöttöreiän pohjaan asti.

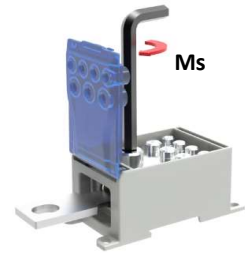

Kiinnitys momentilla **Ms**. Liitin voidaan asentaa adapterin avulla virtakiskoon.

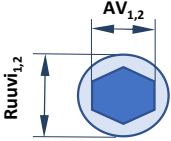Kytkeä					
Ruuvin koko 	Ruuvi 1	M16	Kiristysmomentti Ms	Adapteriin	25 Nm
	AV1	8			-
	Ruuvi 2	M10			-
	AV2	-			-
Max. Input johtimen ala (adapteriin)					240 mm²
Min. Input johtimen ala (adapteriin)					50 mm²

Adapteri kytetään liitimeen kansi auki asennossa **Input tilaan S** 25 Nm momentilla.
Kun adapteri on asennettu **kytkentätilaan S**, siihen ei saa asentaa muita johtimia.
Adapteriin voidaan liittää max. 240 mm² johdin ja min. 50 mm² johdin.

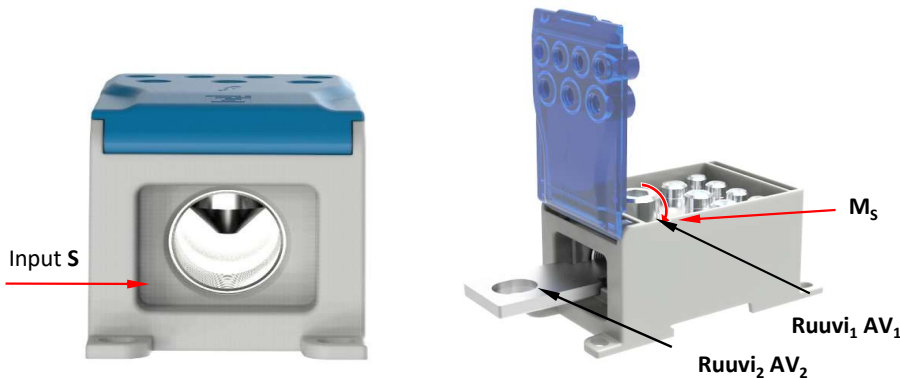

Kiristysmomentit luokan 8.8 teräsruuveille

Kierre	Kiristysmomentti (Nm)
M5	5
M6	9
M8	22
M10	44
M12	75
M14	120
M16	190
M20	370
M24	640


HUOM!
Taulukon kiristysmomentit ohjeistuksena, kun **adapteriin** liitetään kaapeli / kiinnitetään virtakiskoon.

Product data							
Product code	Product name	I_n Al	I_n Cu	U_n	I_{max} Al	I_{max} Cu	U_{max}
VG03-0028	Busbar adapter OJL 400 C	380 A	425 A	1000 V	-	-	-



Installation

Type	Screw M10
------	-----------

OJL busbar adapters are used for connecting OJL connectors to copper or aluminium busbars. Adapter is tin plated copper.

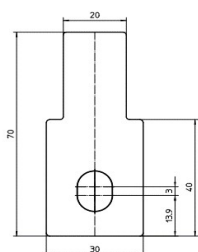

 Mounting with screw.
Max. $\varnothing$ 10

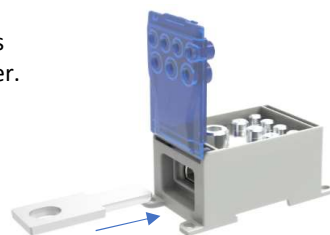


Adapter mounting to OJL 400 C.
Lift OJL cover up and insert adapter till the end of the input channel **S**.





Ms: 25 Nm

Mounting with moment **Ms**.
Distribution block can be installed to busbar by using adapter.

Connection

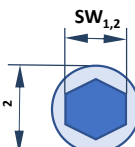Screw size 	Screw 1	M16	Tightening torque M (M _s)	To adapter	25 Nm
	SW ₁	8		-	-
	Screw 2	M10		-	-
	SW ₂	-		-	-
				Max. Input cable to adapter	240 mm ²
				Min. Input cable to adapter	50 mm ²

Connect adapter to the **input S** with 25 Nm moment when cover is open.
When adapter have been installed, you can not install other conductors to **input S**. Conductor (max. 240 mm², min. 50 mm²) can be attached to the adapter.

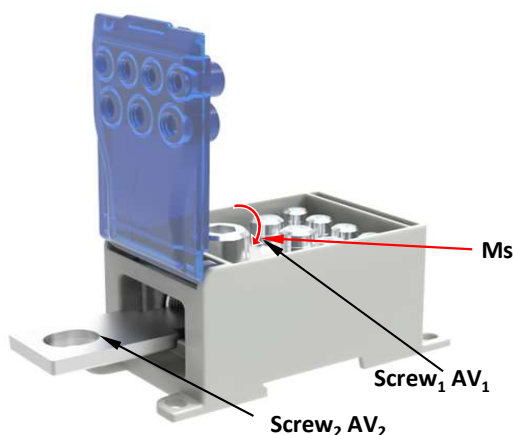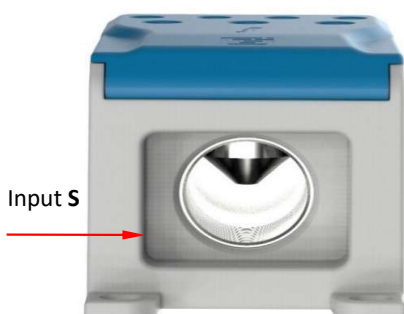

Tightening torques for 8.8 class steel screws

Thread	Tightening torque (Nm)
M5	5
M6	9
M8	22
M10	44
M12	75
M14	120
M16	190
M20	370
M24	640

NOTE!
Tightening torques in table above are instructions, when you install cable lug or busbar to the **adapter (Screw 2)**