




### Scan the qr-code

and type the article code  
'CU-6ZONERF-HC' in the search  
bar for:

- **Instruction video**
- **Written instructions**
- **Wiring schematics**

# HENCOLOGIC WATER FLOOR CONTROLLER

6-10 zones Heating & Cooling. 230V. - **CU-6ZONERF-HC** - **CU-10ZONERF-HC**

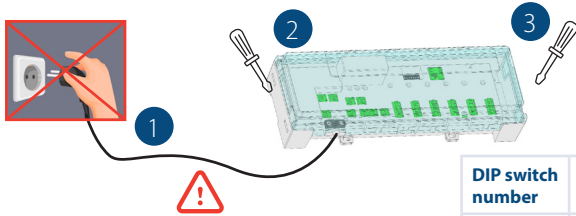

## Quick Installation Guide

The descriptions and photographs contained in this document are supplied by way of example and illustration only. Henco Industries reserves the right to carry out any technical and design improvements to its products without prior notice. Henco hereby objects to any term, different from or additional to Henco terms, contained in any buyer communication in any form, unless agreed to in a writing signed by an officer of Henco.

2012/19/EU: Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see:  
<https://www.henco.be/en/henco-logic>

| DIP switch number | Function                                    | Value (default : OFF) |     | Configuration                                       |
|-------------------|---------------------------------------------|-----------------------|-----|-----------------------------------------------------|
| 1                 | Pump configuration                          | OFF                   |     | Local (demand on the controller)                    |
|                   |                                             | ON                    |     | Global (demand from every controller in the system) |
| 2                 | Actuators type                              | OFF                   |     | Normally closed                                     |
|                   |                                             | ON                    |     | Normally opened                                     |
| 3                 | Pump start delay / last actuator stop delay | OFF                   |     | 2min / 5min                                         |
|                   |                                             | ON                    |     | 5min / 20min                                        |
| 4-5               | H&C switch control                          | OFF                   | OFF | Central                                             |
|                   |                                             | OFF                   | ON  | Thermostat                                          |
|                   |                                             | ON                    | OFF | HCM                                                 |
|                   |                                             | ON                    | ON  | Controller                                          |
| 6                 | Anti Grip                                   | OFF                   |     | Activated                                           |
|                   |                                             | ON                    |     | De activated                                        |
| 7                 | Humidity management                         | OFF                   |     | Safety                                              |
|                   |                                             | ON                    |     | Comfort                                             |
| 8                 | Humidity sensor                             | OFF                   |     | Humidity sensor                                     |
|                   |                                             | ON                    |     | Water sensor                                        |

### EN

#### ► Safety warnings and operating instructions

This product should be installed preferably by a qualified professional. All instructions in this Installation & Operation manual should be observed when working with the controller. Failures due to improper installation, improper use or poor maintenance are voiding manufacturer liability.

### FR


#### ► Avertissements de sécurité et consignes d'utilisation

 


Ce produit doit être installé de préférence par un technicien agréé. Toutes les instructions reportées dans ce manuel d'installation et d'utilisation doivent être respectées lorsque les travaux portent sur le contrôleur. Toute installation, utilisation ou entretien incorrect annule la responsabilité du fabricant

### NL

#### ► Veiligheidswaarschuwingen en gebruiksaanwijzingen

Dit product dient bij voorkeur door een erkend vakman te worden geïnstalleerd. Alle instructies in deze installatie- en bedieningshandleiding dienen te worden opgevolgd bij het werken op de regelaar. Bij storingen als gevolg van verkeerde installatie, onjuist gebruik of slecht onderhoud komt de aansprakelijkheid van de fabrikant te vervallen.

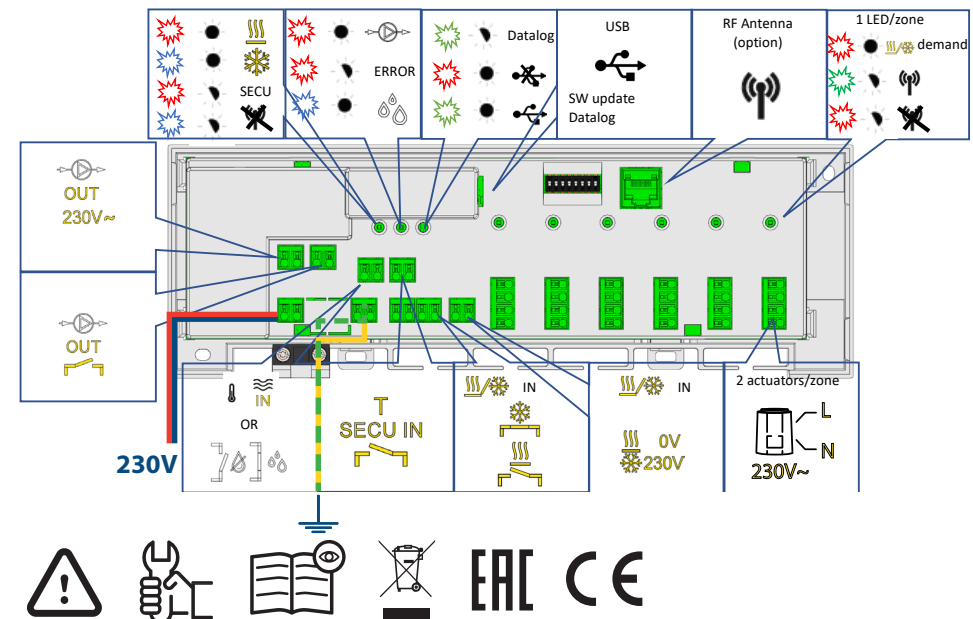

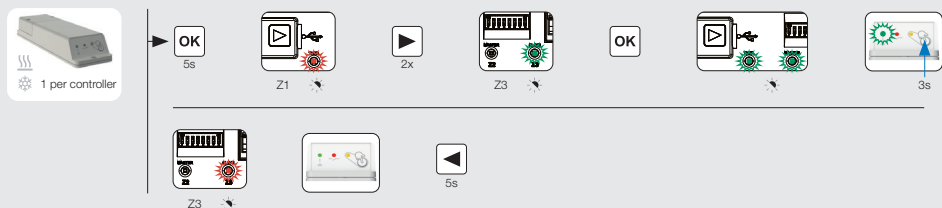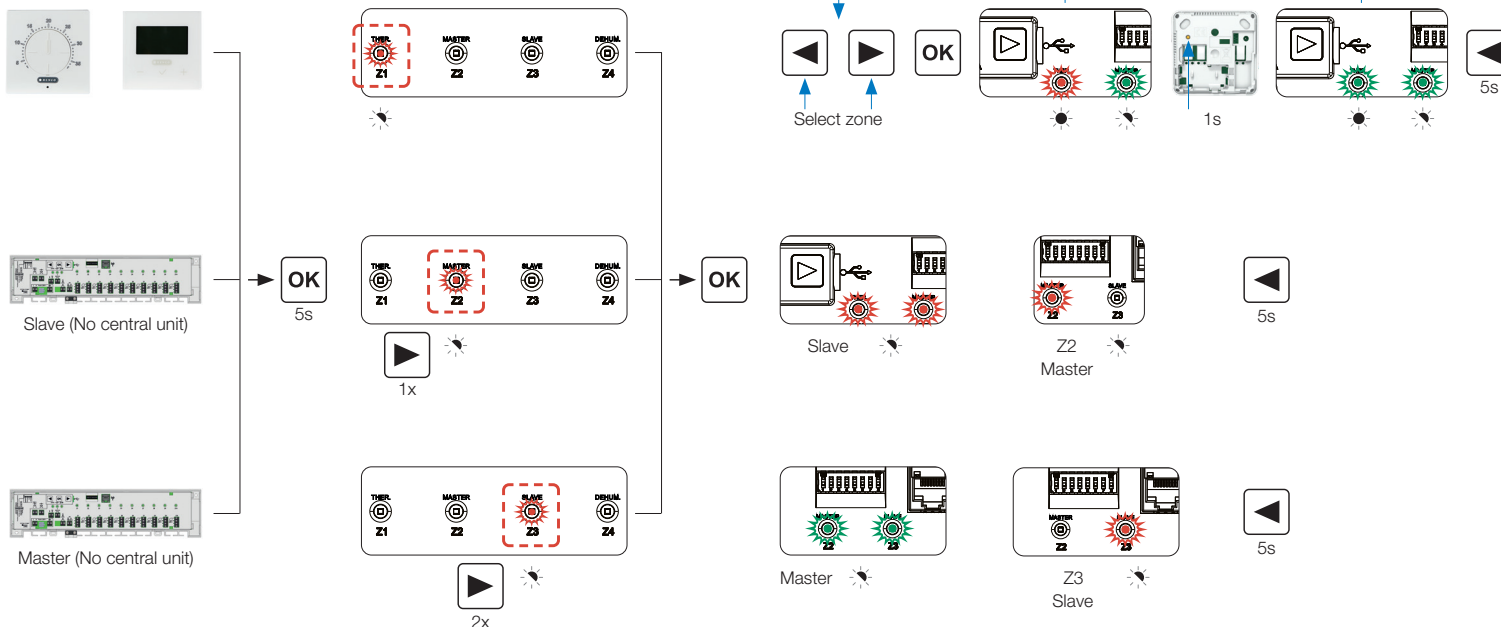

## WE CARE TO CONNECT