


# Instructions for seal replacement

Type: Glass seal  
 Model: ambiente a1 | a2 | a3 | a4 | a4 H<sub>2</sub>O  
 Linear module XS | M  
 Moro  
 Passo XS | S | L | E  
 Senso S | M H<sub>2</sub>O | L  
 Sino L  
 Sino City  
 Stovo S plus | L plus

## 1. Installation situation

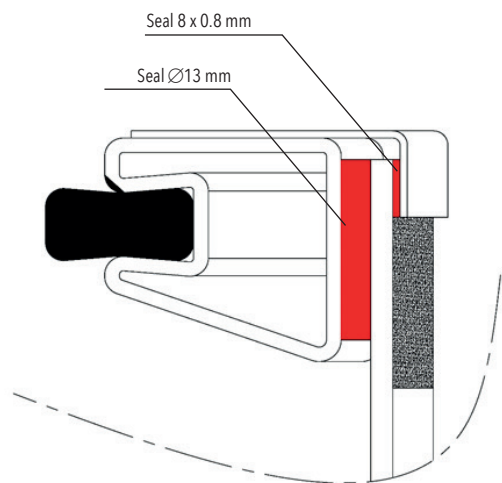

## 2. Scope of delivery

| Stove                                                                                                  | Seal            |
|--------------------------------------------------------------------------------------------------------|-----------------|
| a1<br>a2<br>a3<br>a4<br>a4 H <sub>2</sub> O<br>Linear module XS<br>Linear module M<br>Moro<br>Passo XS | Seal Ø 13 mm    |
|                                                                                                        | Seal 8 x 0.8 mm |

| Stove                                                                                                                       | Seal            |
|-----------------------------------------------------------------------------------------------------------------------------|-----------------|
| Passo S<br>Passo L<br>Senso S<br>Senso M H <sub>2</sub> O<br>Senso L<br>Sino L<br>Sino City<br>Stovo S plus<br>Stovo L plus | Seal Ø 13 mm    |
|                                                                                                                             | Seal 8 x 0.8 mm |

In addition, a suitable quantity of high-temperature adhesive and fastening screws are included in the delivery.

## 3. Replacement of glass seals

### 3.1 Disassembling the stove door

1. Open the door and remove the safety strap using a screwdriver or similar tool.




2. Then tighten the Allen screw on the bottom hinge using a 3 mm hexagon spanner.



3. Grab the door from the bottom and lift it slightly to permit access to the pins of the hinge.



4. Tilt the door up slightly so that the bottom pins pivot out of the hinge mount at the bottom.

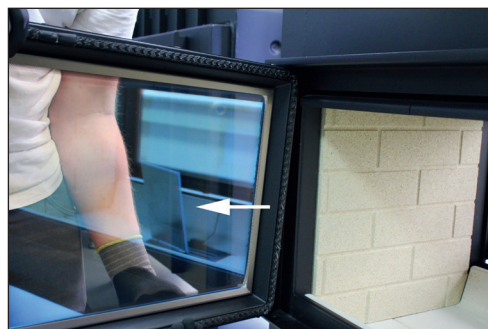

5. Now allow the door to slide down so that the pin at the top slides out of the hinge.

**i** To assemble the stove door, proceed in the reverse order.

**!** We recommend wearing gloves during installation and removal of the new seal.

### 3.2 Disassembling the glass seals

1. Deposit the door on a soft, non-sensitive surface with its rear side pointing down.



2. Remove the glass strips and handle from the door profile. To do so, undo and remove the fastening screws of the glass strips on the right and left.



3. Deposit the door on a clean, non-sensitive surface with its rear side pointing down.





- Remove the glass strips from the door profile. To do so, undo and remove the fastening screws of the glass strips at the top and bottom.




- Remove the glass pane from the door profile.



- Now remove the seals, which are now accessible, from the door profile. Also remove the adhesive residue from the door profile.

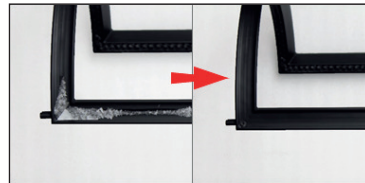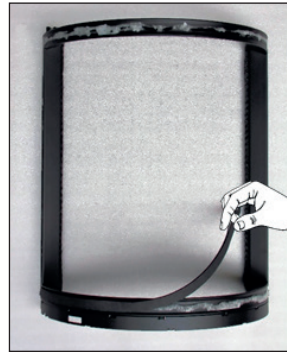


- Now pull the seal off the glass strips. Remove the adhesive residue from the door profile.

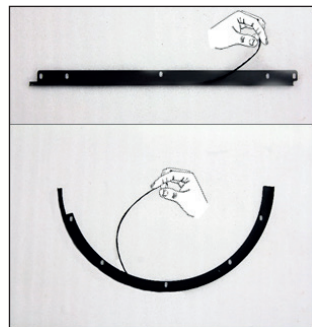

Only shorten the seal, if necessary. Do not cut the seal into separate parts unless instructed. The seal is elastic and stretches when pulled. Avoid excessively pulling the seal during installation in order to ensure optimum air tightness of your stove.

### 3.3 Assembling the new glass seals


- Deposit the door on a clean, non-sensitive surface with its rear side pointing down.
- Remove the protective paper and push the  $\varnothing 13$  mm seal onto the profile. Cut away excess material.

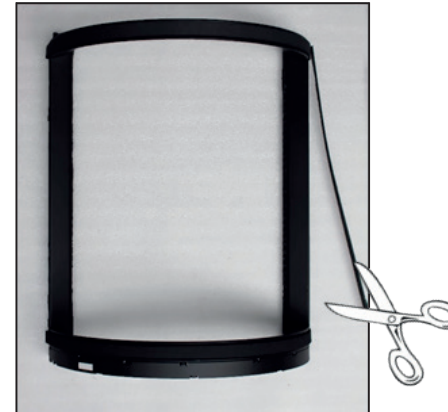

- In the corners, place the seal end-to-end. Push the seal firmly into place during this process.




- Cut the 8 x 0.8 mm seal to size based on the glass strip.

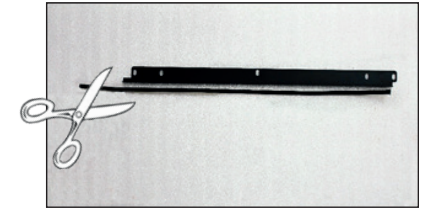

- Remove the protective paper from the seals.



- Glue the 8 x 0.8 mm seal in place on the short side along the bending edge (*see chapter 1 Installation situation*).

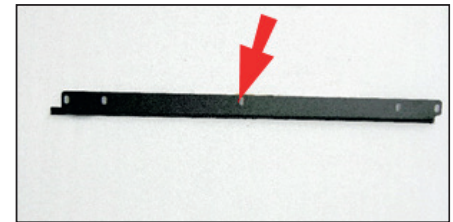

- Now perform steps 1.-3. of "3.2 Disassembling the glass seals" in the reverse order to assemble the door.

