


## Data Sheet | Item Number: 210-836

Push-button marker; for frames, to be snapped in or glued in place; 27 x 17.5 mm; silver-colored

<https://www.wago.com/210-836>

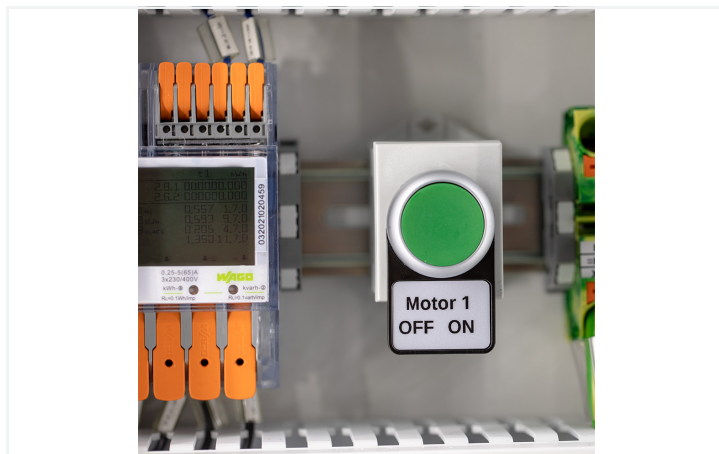

Color: ■ silver-colored

### Technical data

Suitable	for Siemens push-button frame
Marking method	Thermal transfer
Marking	plain
Delivery form	Roll
Delivery form configuration	350 markers/reel; 1 line
Printing device	Smart Printer (thermal transfer printer)

### Physical data

Height	27 mm
Width	17.5 mm
Depth	0.65 mm
Marking surface	27 x 17.5 mm

### Mechanical data

Mounting type	Snap-in or adhesive mounting
Smear resistance	in conjunction with 258-5005 Ink Ribbon

### Material data

Color	silver-colored
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	110 g
Fire load	0 MJ

### Environmental requirements

Ambient temperature (storage)	≥+22 °C
Relative humidity	40 ... 50 %

### Commercial data

PU (SPU)	1 pcs
Packaging type	Bag
Country of origin	DK
GTIN	4055143965422
Customs tariff number	39191080888

### Product Classification

UNSPSC	55121718
ETIM 9.0	EC001288
ETIM 10.0	EC001288
ECCN	NO US CLASSIFICATION

### Environmental Product Compliance

RoHS Compliance Status	Compliant, No Exemption
------------------------	-------------------------

### Downloads

#### Environmental Product Compliance

Compliance Search			
Environmental Product Compliance 210-836			

### Documentation

Operating Instructions			
210-852 Information on handling print material	1	pdf	
	28.08.2020	1004.72 KB	

### 1 Compatible Products

#### 1.1 Required Accessories

##### 1.1.1 Cover

##### 1.1.1.1 Cover



**Item No.: 210-837**  
 Cover; for frames, snap-in type, 27 x 17.5 mm; halogen-free; transparent

## Installation Notes

### Stick on frame



Remove the push-button label from the carrier film.



Stick the push-button label onto the push-button frame.



WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

### Snap into frame



Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film to do this.



Snap the push-button label, with the carrier film on the back, on to the push-button frame. Only the area of the push-button label outside the remaining carrier film is adhesive.



Optional: A cover may also be installed on a push-button frame equipped with latches.



Push-button label and cover are snapped on to the push-button frame.