

Data Sheet | Item Number: 210-842

Push-button marker; for frames, to be snapped in or glued in place; 27 x 12.5 mm; silver-colored

<https://www.wago.com/210-842>



Color: ■ silver-colored

Technical data

Suitable	for Siemens push-button frame
Marking method	Thermal transfer
Marking	plain
Delivery form	Roll
Delivery form configuration	350 markers/reel; 1 line
Printing device	Smart Printer (thermal transfer printer)

Physical data

Height	27 mm
Width	12.5 mm
Depth	0.65 mm
Marking surface	27 x 12.5 mm

Mechanical data

Mounting type	Snap-in or adhesive mounting
Smear resistance	in conjunction with 258-5005 Ink Ribbon

Material data

Color	silver-colored
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	85 g
Fire load	0 MJ

Environmental requirements

Ambient temperature (storage)	≥+22 °C
Relative humidity	40 ... 50 %

Commercial data

PU (SPU)	1 pcs
Packaging type	Bag
Country of origin	DK
GTIN	4055143965156
Customs tariff number	39191080888

Product Classification

UNSPSC	55121718
ETIM 9.0	EC001288
ETIM 10.0	EC001288
ECCN	NO US CLASSIFICATION

Environmental Product Compliance

RoHS Compliance Status	Compliant, No Exemption
------------------------	-------------------------

Downloads

Environmental Product Compliance


Compliance Search

Environmental Product
Compliance 210-842



Documentation

Operating Instructions

210-852 Information on handling print material	1 28.08.2020	pdf 1004.72 KB	
---	-----------------	-------------------	---

1 Compatible Products

1.1 Required Accessories

1.1.1 Cover

1.1.1.1 Cover



Item No.: 210-843

Cover; for frames, snap-in type, 27 x 12.5 mm; halogen-free; transparent

Installation Notes

Stick on frame



Remove the push-button label from the carrier film.



Stick the push-button label onto the push-button frame.



WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

Snap into frame



Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film to do this.



Snap the push-button label, with the carrier film on the back, on to the push-button frame. Only the area of the push-button label outside the remaining carrier film is adhesive.



Optional: A cover may also be installed on a push-button frame equipped with latches.



Push-button label and cover are snapped on to the push-button frame.