

# Double key with 'up' and 'down' arrows for wireless switch or push button with 4 control buttons, cream

100-00010



A double key with the symbols up and down, for a bus push button with 4 control buttons. Colour: cream.

## Technical data

Double key with 'up' and 'down' arrows for wireless switch or push button with 4 control buttons, cream.



- Function: finishing set for a Nikobus bus push button or a RF wall transmitter
- Number of buttons: 4
- Material finishing: polycarbonate (PC) + acrylic-styrene-acrylate (ASA)
- Type of control: push button
- Colour: cream
- Colour RAL (approximately): 1013
- Colour NCS (approximately): NCS S 1005-Y10R
- Surface treatment: coloured in mass
- Imprint indication: each key on the central plate is printed with an "up" or "down" arrow in indelible print
- Number of lenses: 0
- Dismantling method: pull the central plate off the mechanism
- Protection degree: IP41 for the combination of a mechanism, central plate and faceplate
- Impact resistance: after mounting, an impact-resistance of IK06 is guaranteed
- Fire safety:
  - all plastic components are self-extinguishing (comply with a filament test of 650°C)
  - all plastic components are halogen-free
- Dimensions of finishing: 45 x 45 mm (HxW)
- Dimensions (HxWxD): 44.5 mm x 44.5 mm x 8.6 mm
- Marking: CE