



1 Install

1.1 Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example. Please follow the instructions below:



WiFi Stick Datalogger Quick Installation Manual

Version: 3.6



Install the datalogger:

1. Install the antenna to the datalogger.
2. Match the joint, and then insert the datalogger to the inverter COM port.
3. Rotate the black ring in clockwise.



NOTE

 
Only rotate the black ring at the connection end, not rotate the sliver cover.

Delivery Content

- 1 WiFi stick
- 1 WiFi Antenna
- 1 Quick Installation Manual

1.2 Install with multiple inverters

If you need to collect data from multiple inverters, please follow the inverter user manual to establish a communication connection with the inverter using the RS485 communication cable in a "daisy chain" manner.



After the datalogger is installed on the inverter, if the inverter is powered on, you need to set the inverter slave address, the default slave address of the inverter is 01, and each inverter on the communication circuit needs to be assigned with different slave address (like 01,02,03,04...).

NOTE

The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lightning storm.

2 LED and Button

LED Lights Status:

LED indicators	Description	LED Status	Meanings
Internet Indicators (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
		ON	Successfully connected
		OFF	Abnormal connection
Inverter COM Indicators (COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator (PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
		OFF	Datalogger is powered up abnormally

Button Instruction:

The [RESET] button on the back is used for connection.

- Short press will send the data immediately.
- Long press for 5 seconds will enter into config mode for connection router.
- Long press for 10 seconds will reset the connection.


The three constantly ON LED lights indicate the datalogger is working normally.

3 WiFi Configuration


Step 1: Use your phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching "Solis Cloud".



Step 2: If it is a new datalogger, please configure it first, then click the "WiFi Configuration".

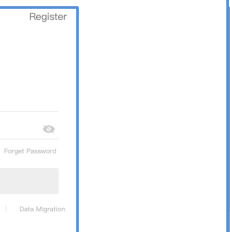

Unlogged account, click on "More Tools" and select "WiFi Configuration".

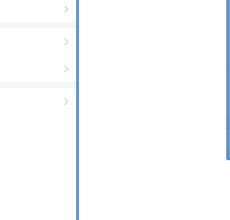


If you have logged in, please click "Tool" to enter "WiFi Configuration".



Step 3: Manually input datalogger SN or Scan the SN on the datalogger.



Step 4: Choose the configuration method, recommended click "Browser Configuration".

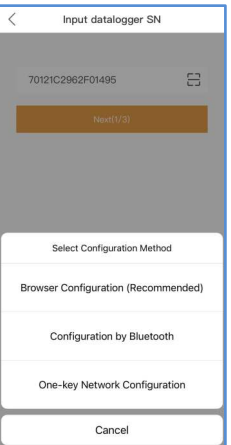



Step 5: Long press the "Reset" button for 5 seconds until the yellow and green LEDs are quickly flashing. Then click the "I'm sure it is flashing".

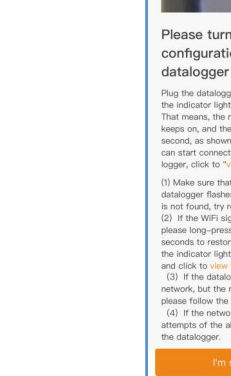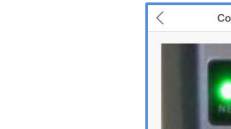

Step 6: Connect to the datalogger network Solis.






Step 7: The wireless device (mobile phone or laptop) connects to the datalogger hotspot (Solis_serial number). The default password is 123456789.

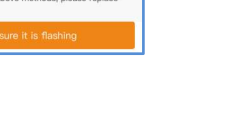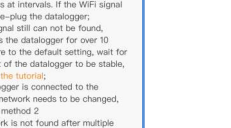


After that, return to APP.

Step 8: Click "Done", make sure the phone is connected to router WiFi and switch back to the page to fill in the WiFi password, then move to next step.

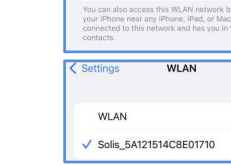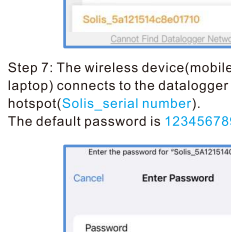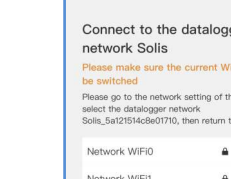

Step 9: Configuration Complete.

Step 10: The wireless device (mobile phone or laptop) connects to the datalogger hotspot (Solis_serial number). The default password is 123456789.


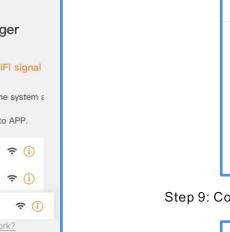


Step 11: The wireless device (mobile phone or laptop) connects to the datalogger hotspot (Solis_serial number). The default password is 123456789.




After that, return to APP.

Step 12: Click "Done", make sure the phone is connected to router WiFi and switch back to the page to fill in the WiFi password, then move to next step.

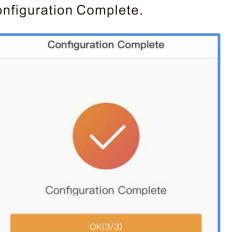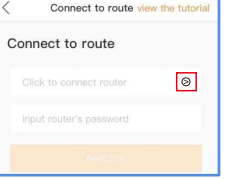



Step 13: Select Owner or Organization for email address registration.

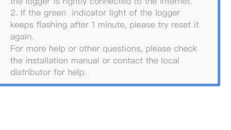

Step 14: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".



Step 15: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

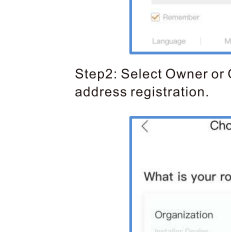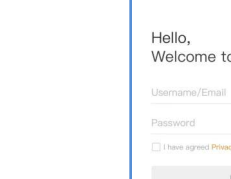

Step 16: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".




Step 17: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".




4 Create the Solis Cloud Account


Step 1: Click the "Register".

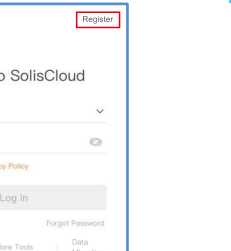


Step 2: Select Owner or Organization for email address registration.

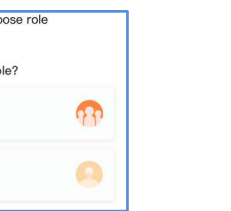


Step 3: Enter the email to get the verification code, then enter your account and password, last click the "Register".

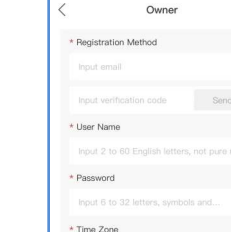


Step 4: Enter the email to get the verification code, then enter your account and password, last click the "Register".

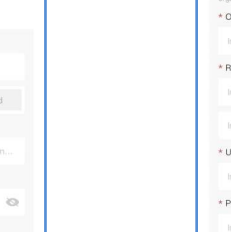


Step 5: Enter the main page of Solis Cloud APP, click "+" at the top right corner and select "Add plant".

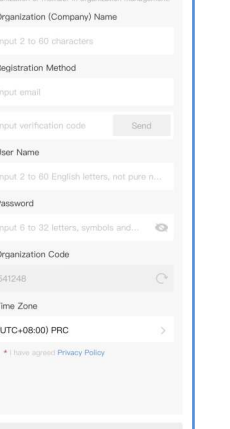


Step 6: Input the information of the plant as required. Then click "Done".

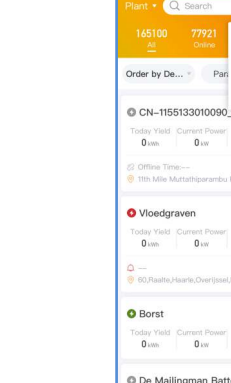


Step 7: Confirm the plant information. Click "Create plant".

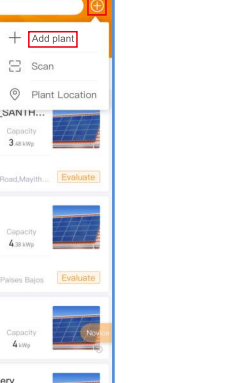

Step 8: Click "View plant" to enter the plant homepage, then add the datalogger.

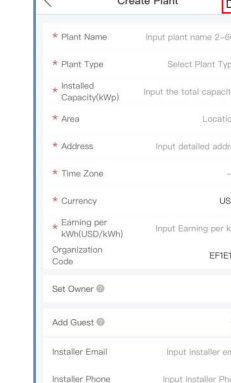

Step 9: No datalogger was added, please add a datalogger.

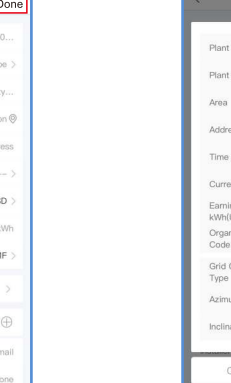

Step 10: Scan the datalogger SN QR code or manually input it.




Step 11: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".




Step 12: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".




Step 13: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

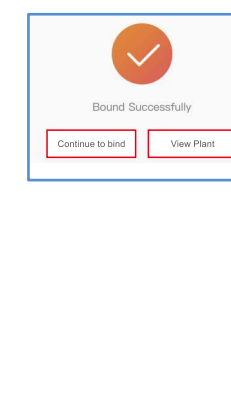

Step 14: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

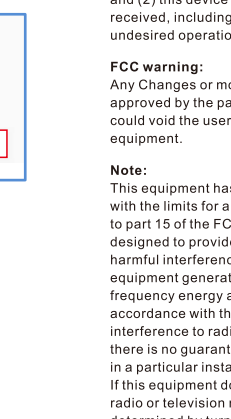

Step 15: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".

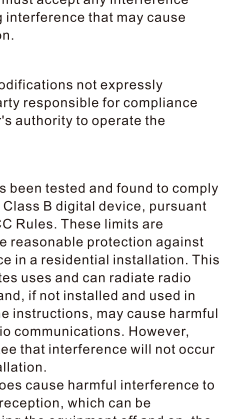

Step 16: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".



Step 17: Plant creation succeeds. Click "Continue to bind" to check the monitoring data. If the plant has multiple dataloggers, please click "View Plant".



FCC Certification

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Contact

Please contact us if you have any technical problems in terms of the product. Please provide the following information as well:

- ◆ Inverter SN
- ◆ Datalogger SN
- ◆ Problem Description

Ginlong Technologies Co., Ltd.
No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R. China.
Tel: +86 (0)574 6578 1806
Fax: +86 (0)574 6578 1606
Email: info@ginlong.com
Web: www.ginlong.com