


MIKO




黑洞 Neostar

压块安装范围扩展
Clamping Zone Extension

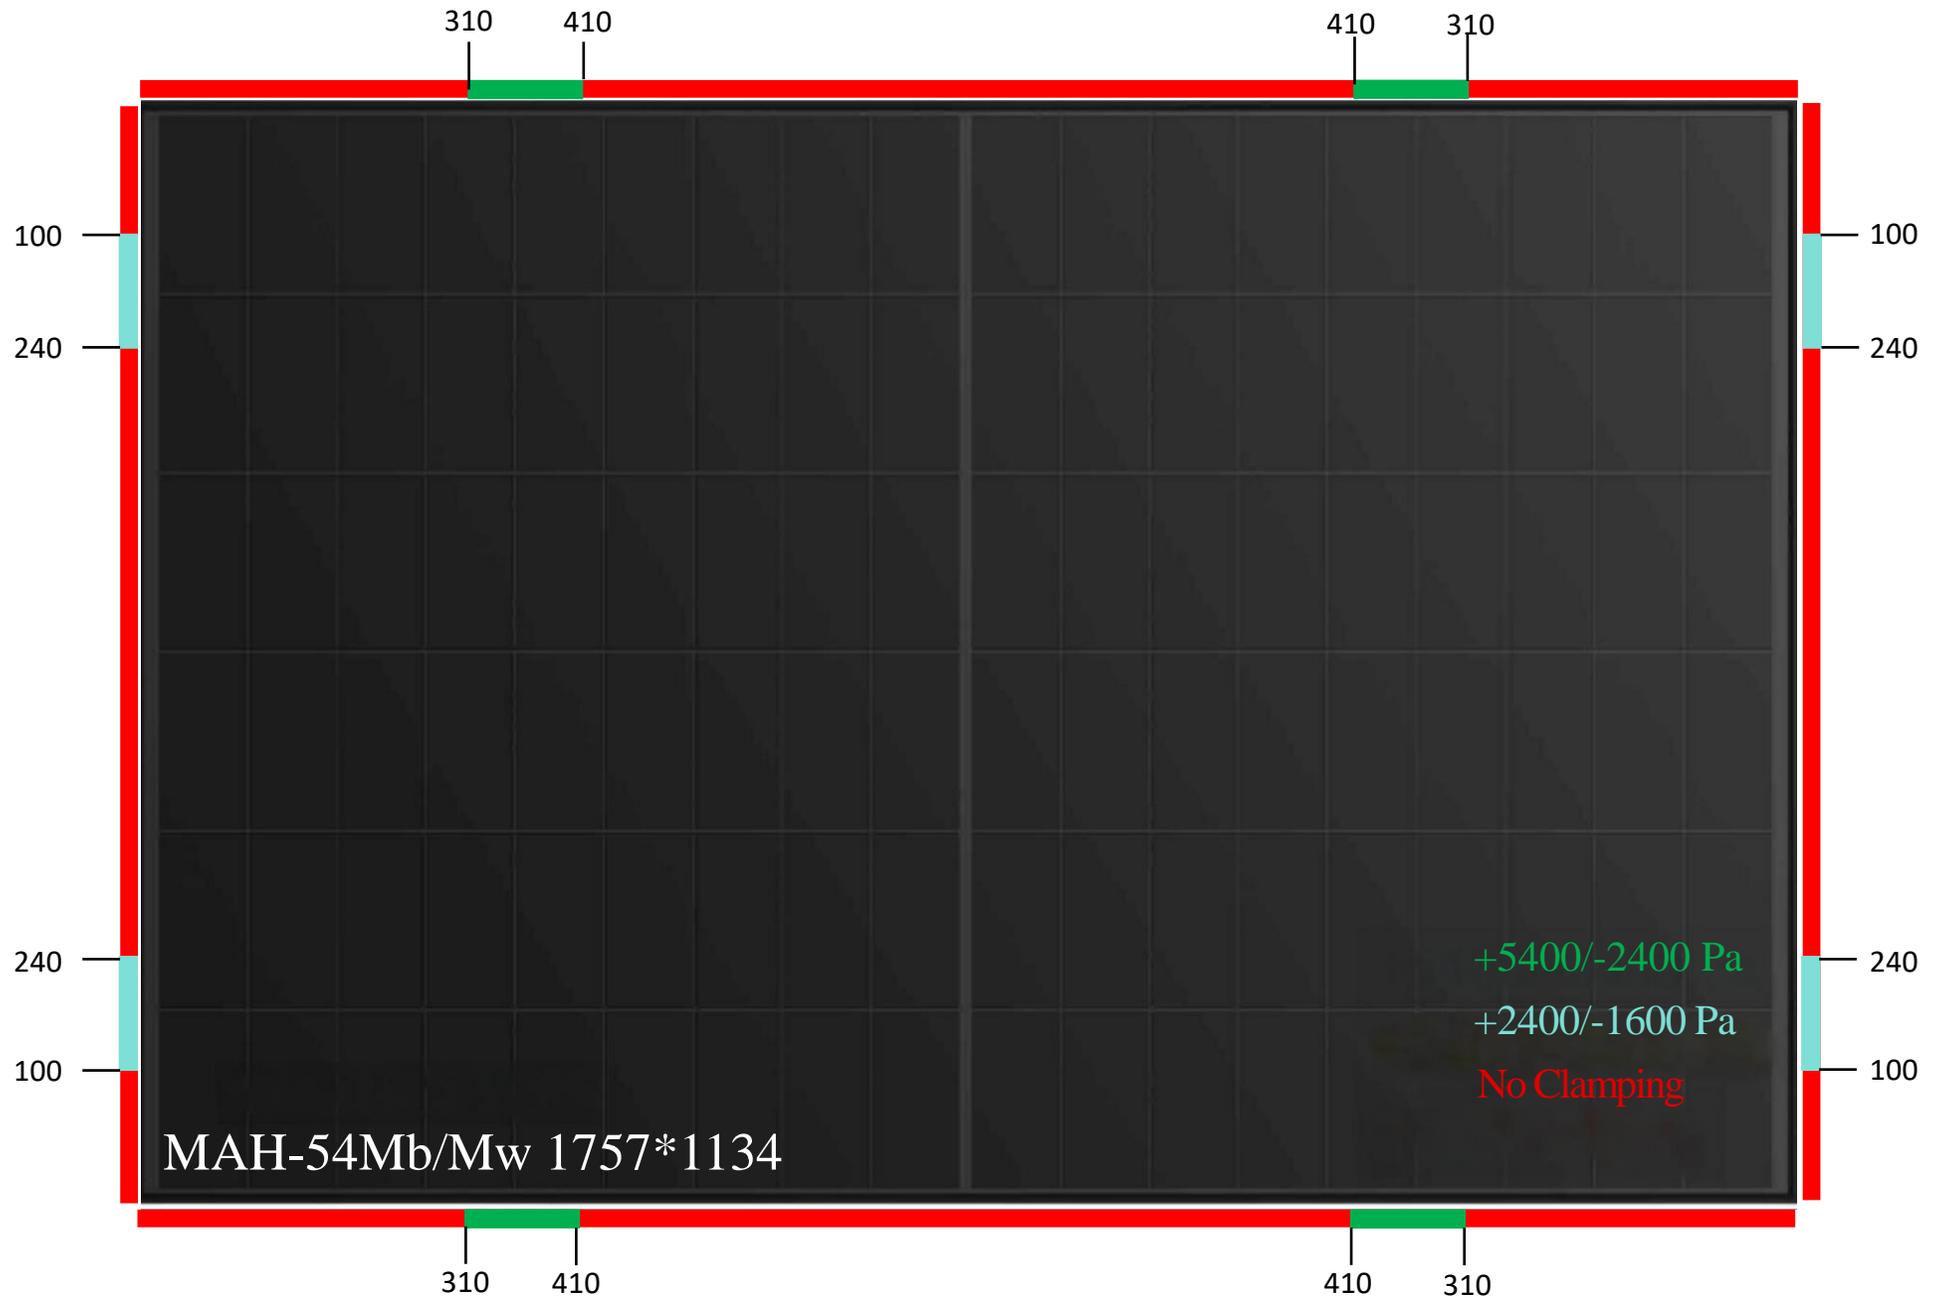


该图仅代表檩条垂直长边/短边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame/short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

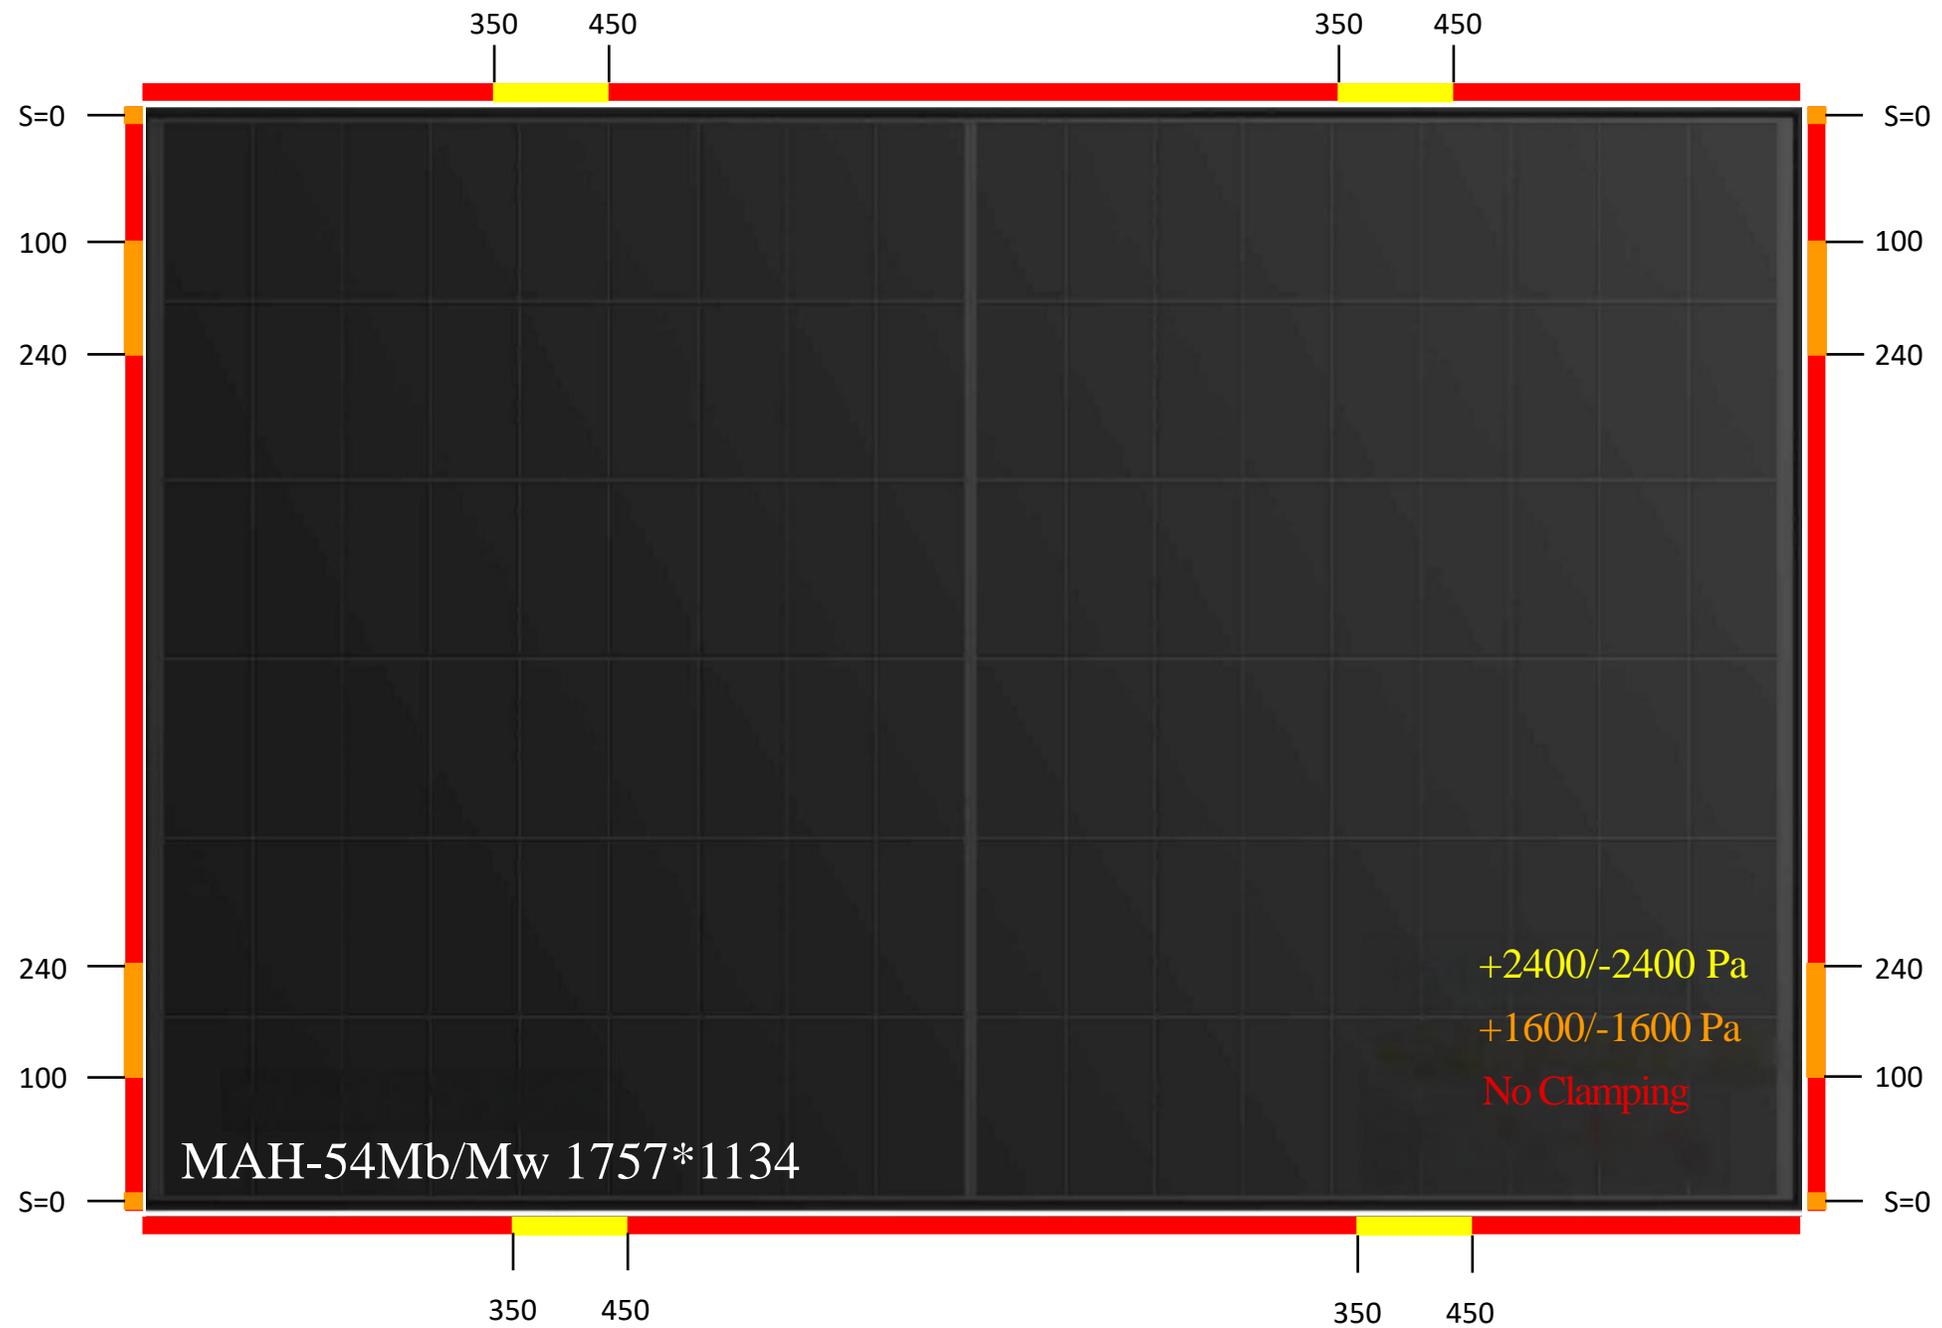


该图仅代表檩条平行于长边/短边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm


This load graph present when the purlin parallel to the long frame/short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

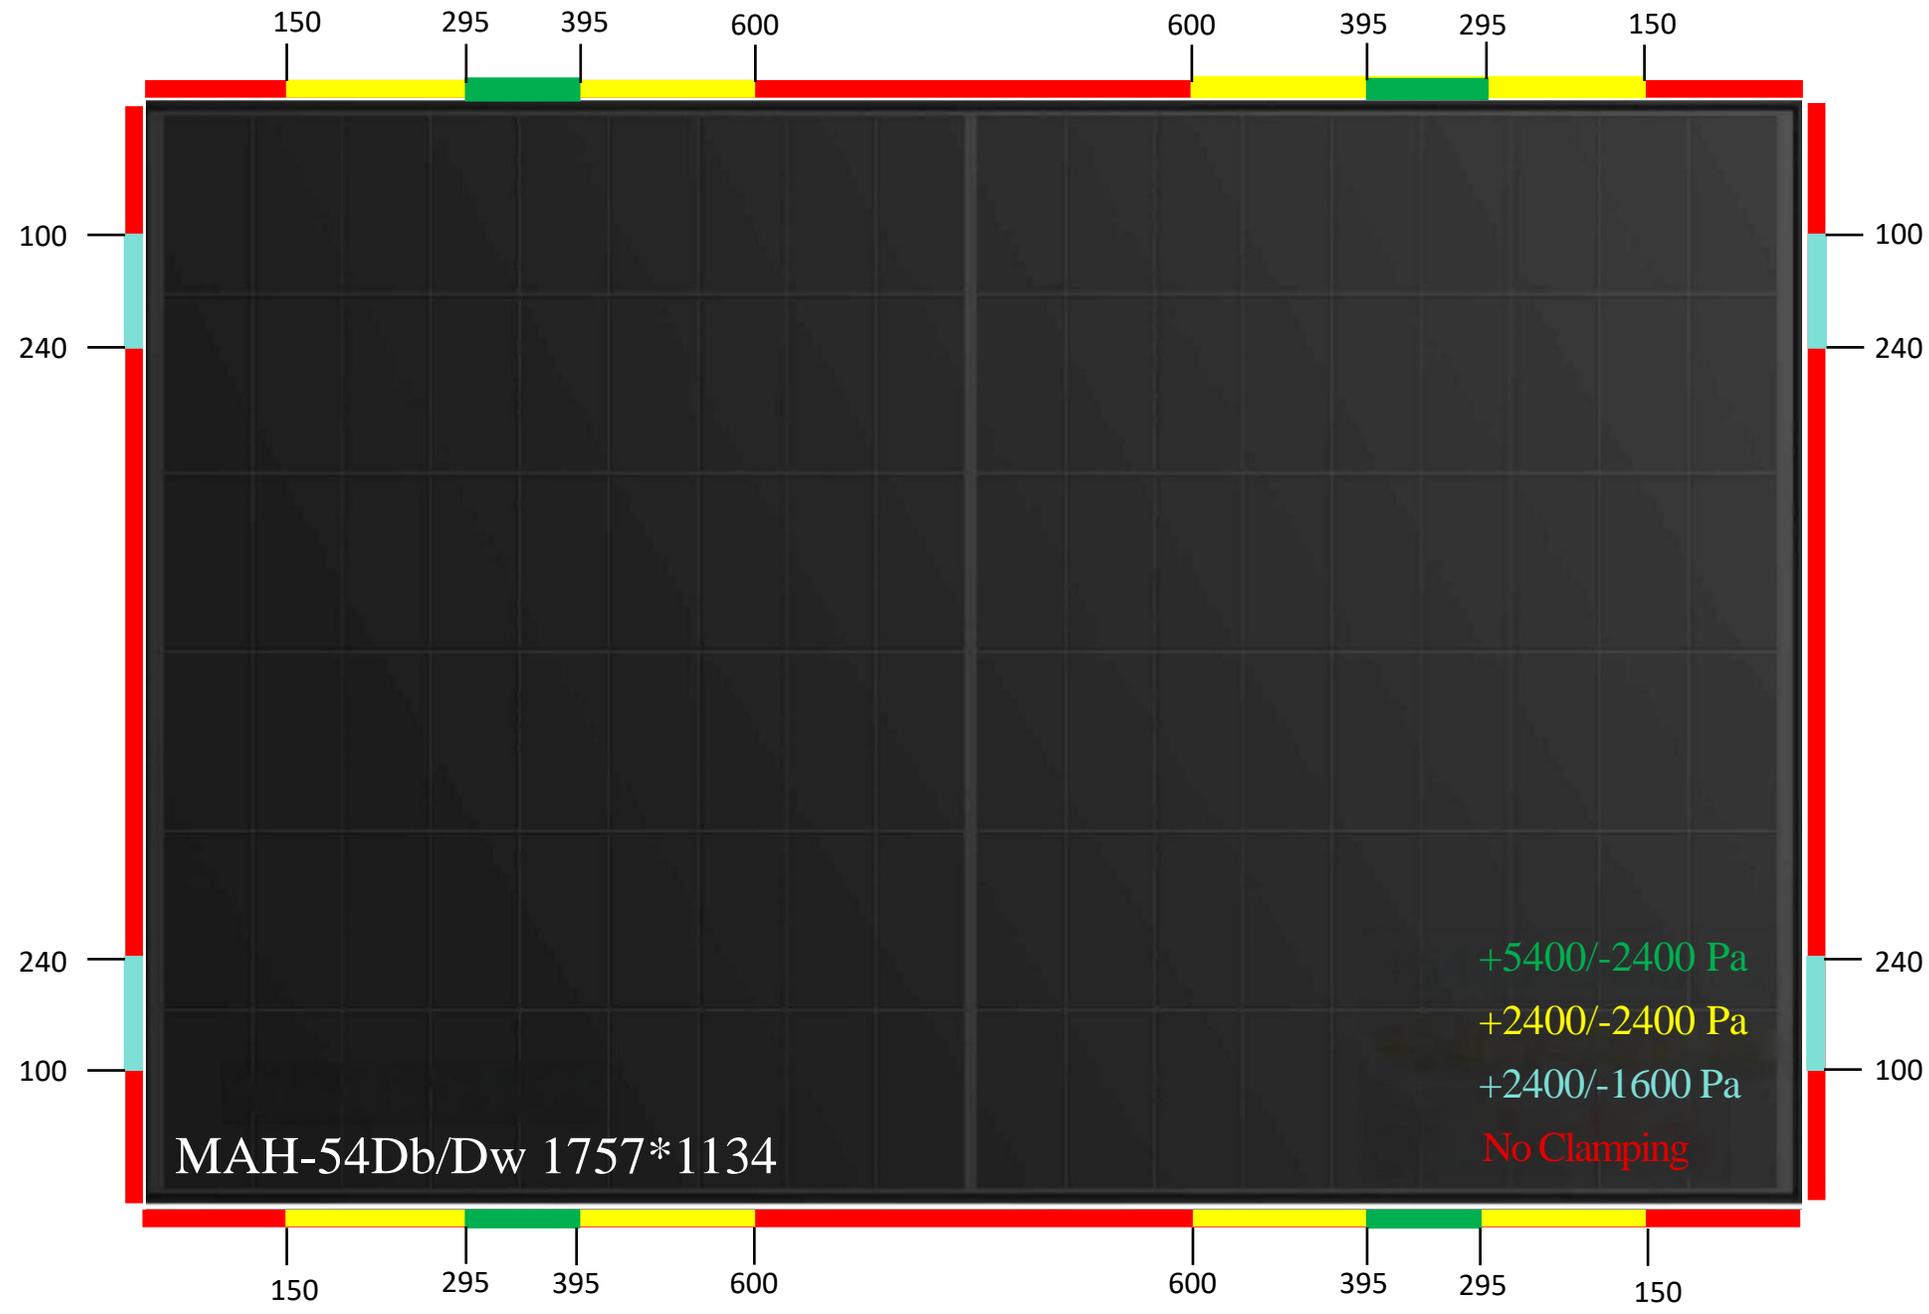


该图仅代表檩条垂直长边/短边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame/short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

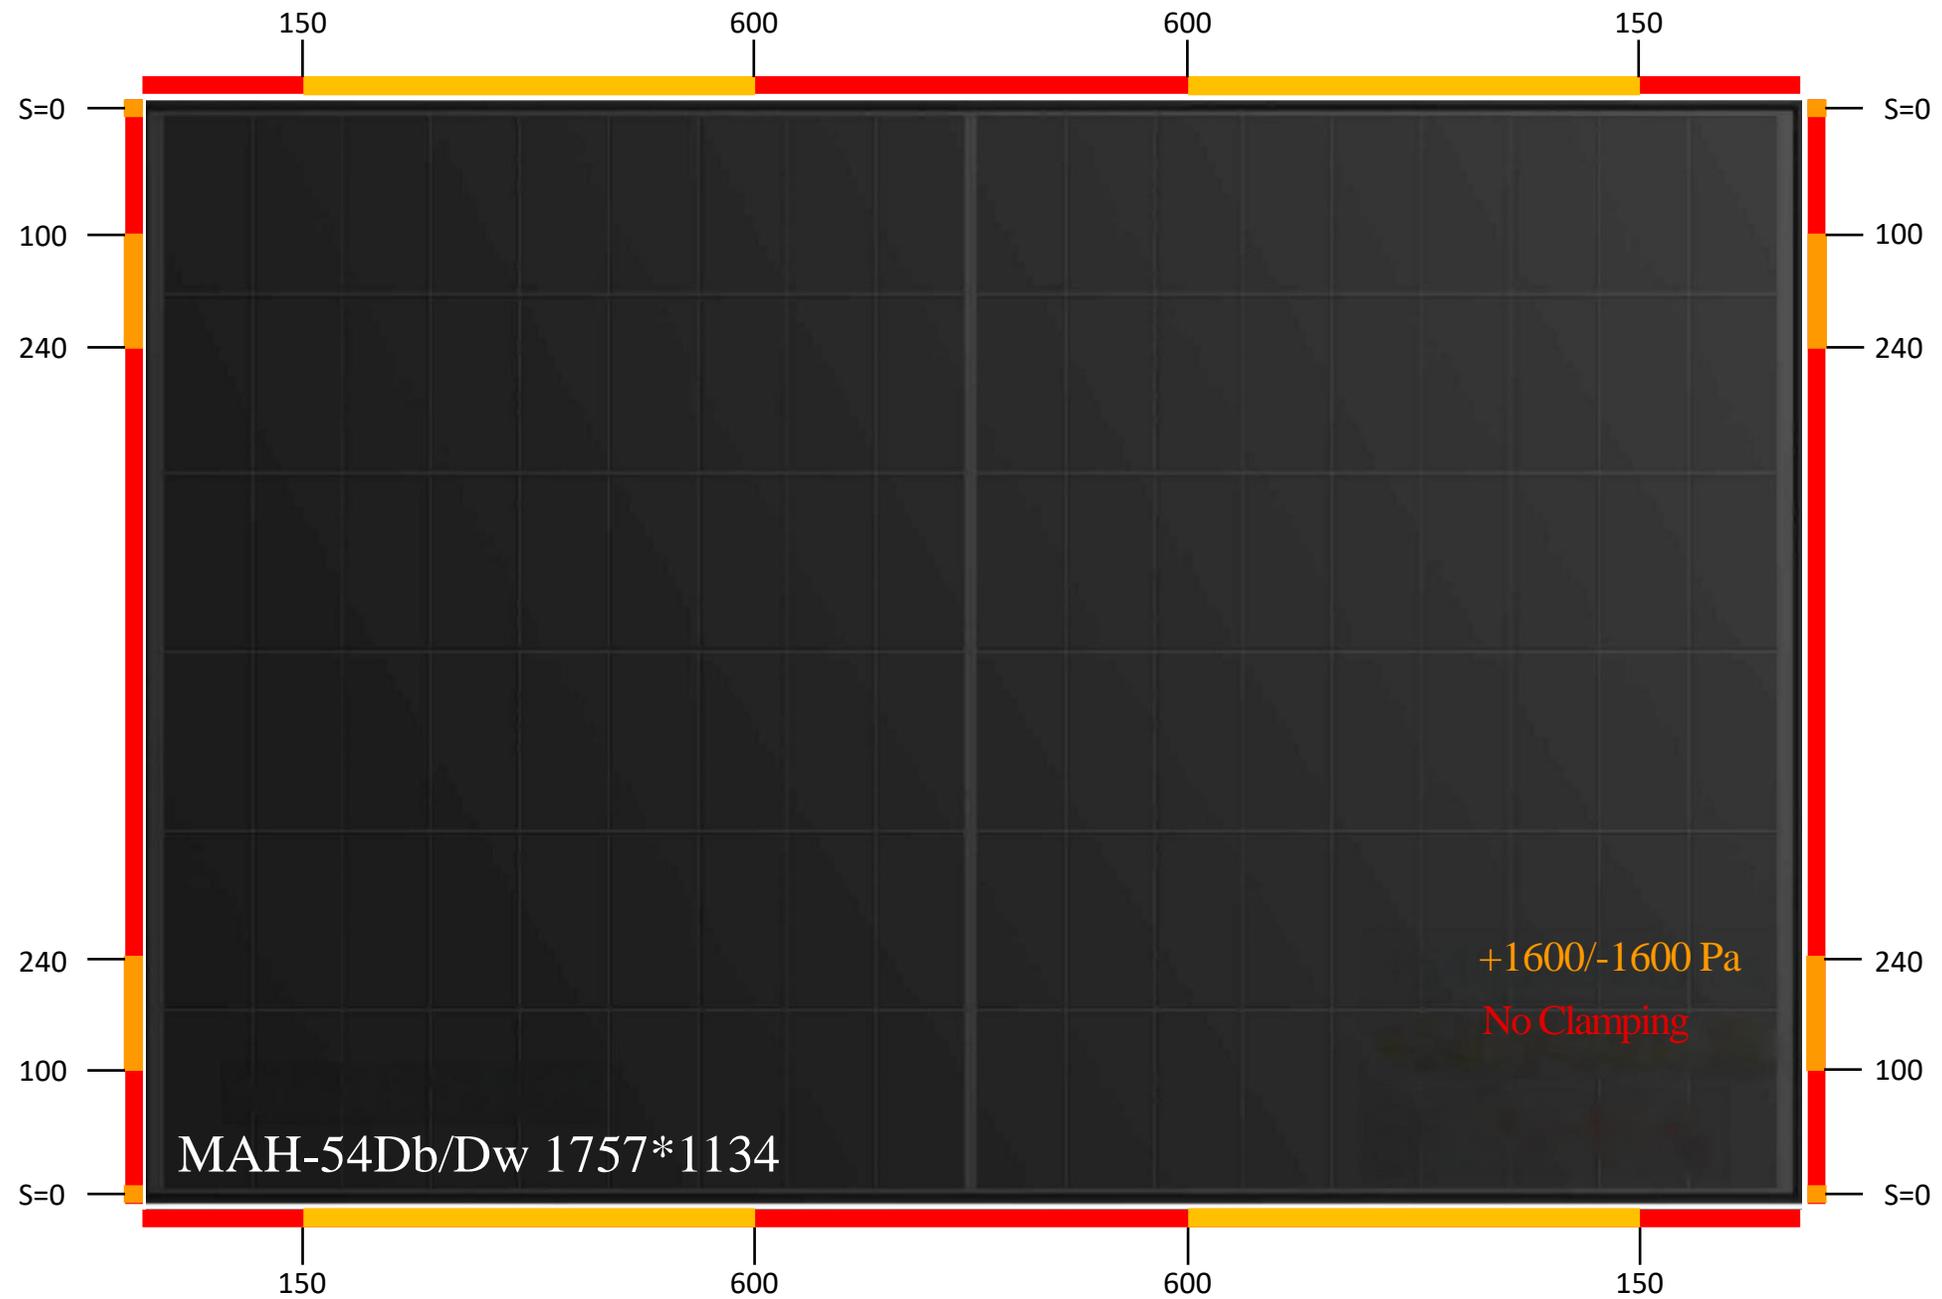

该图仅代表檩条平行于长边/短边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin parallel to the long frame/short frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

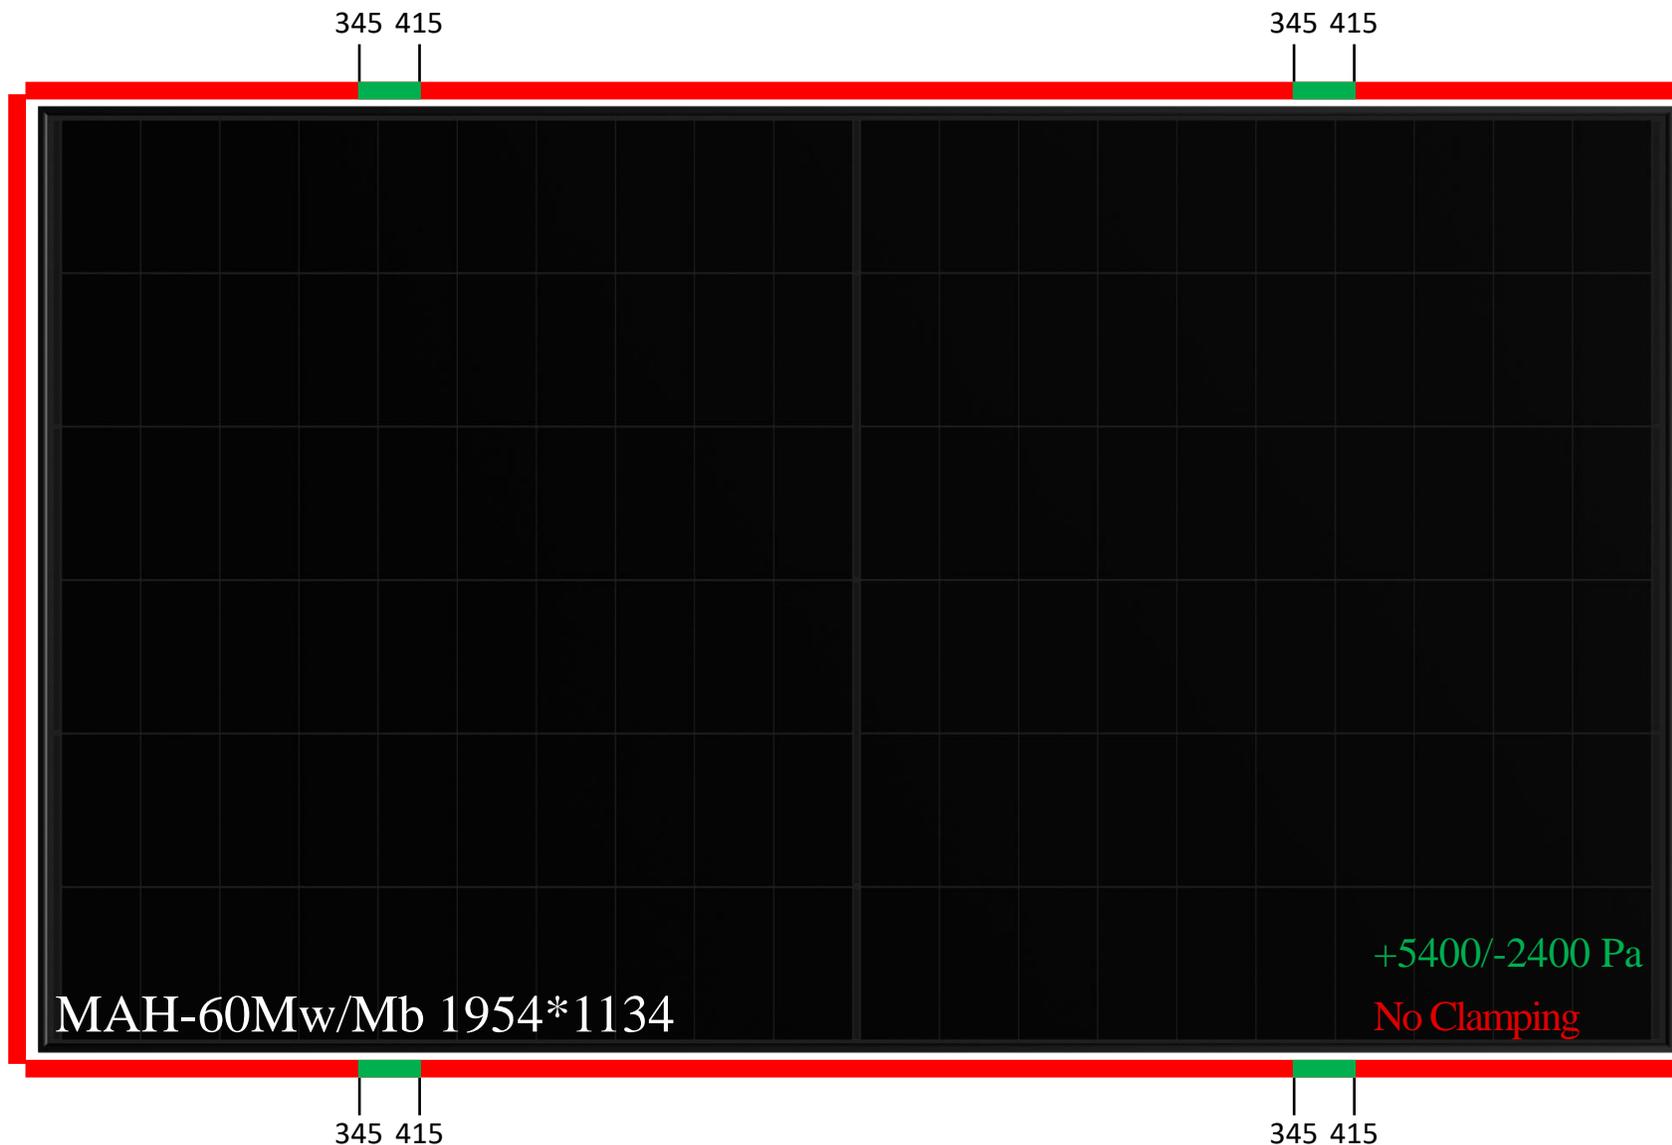

该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

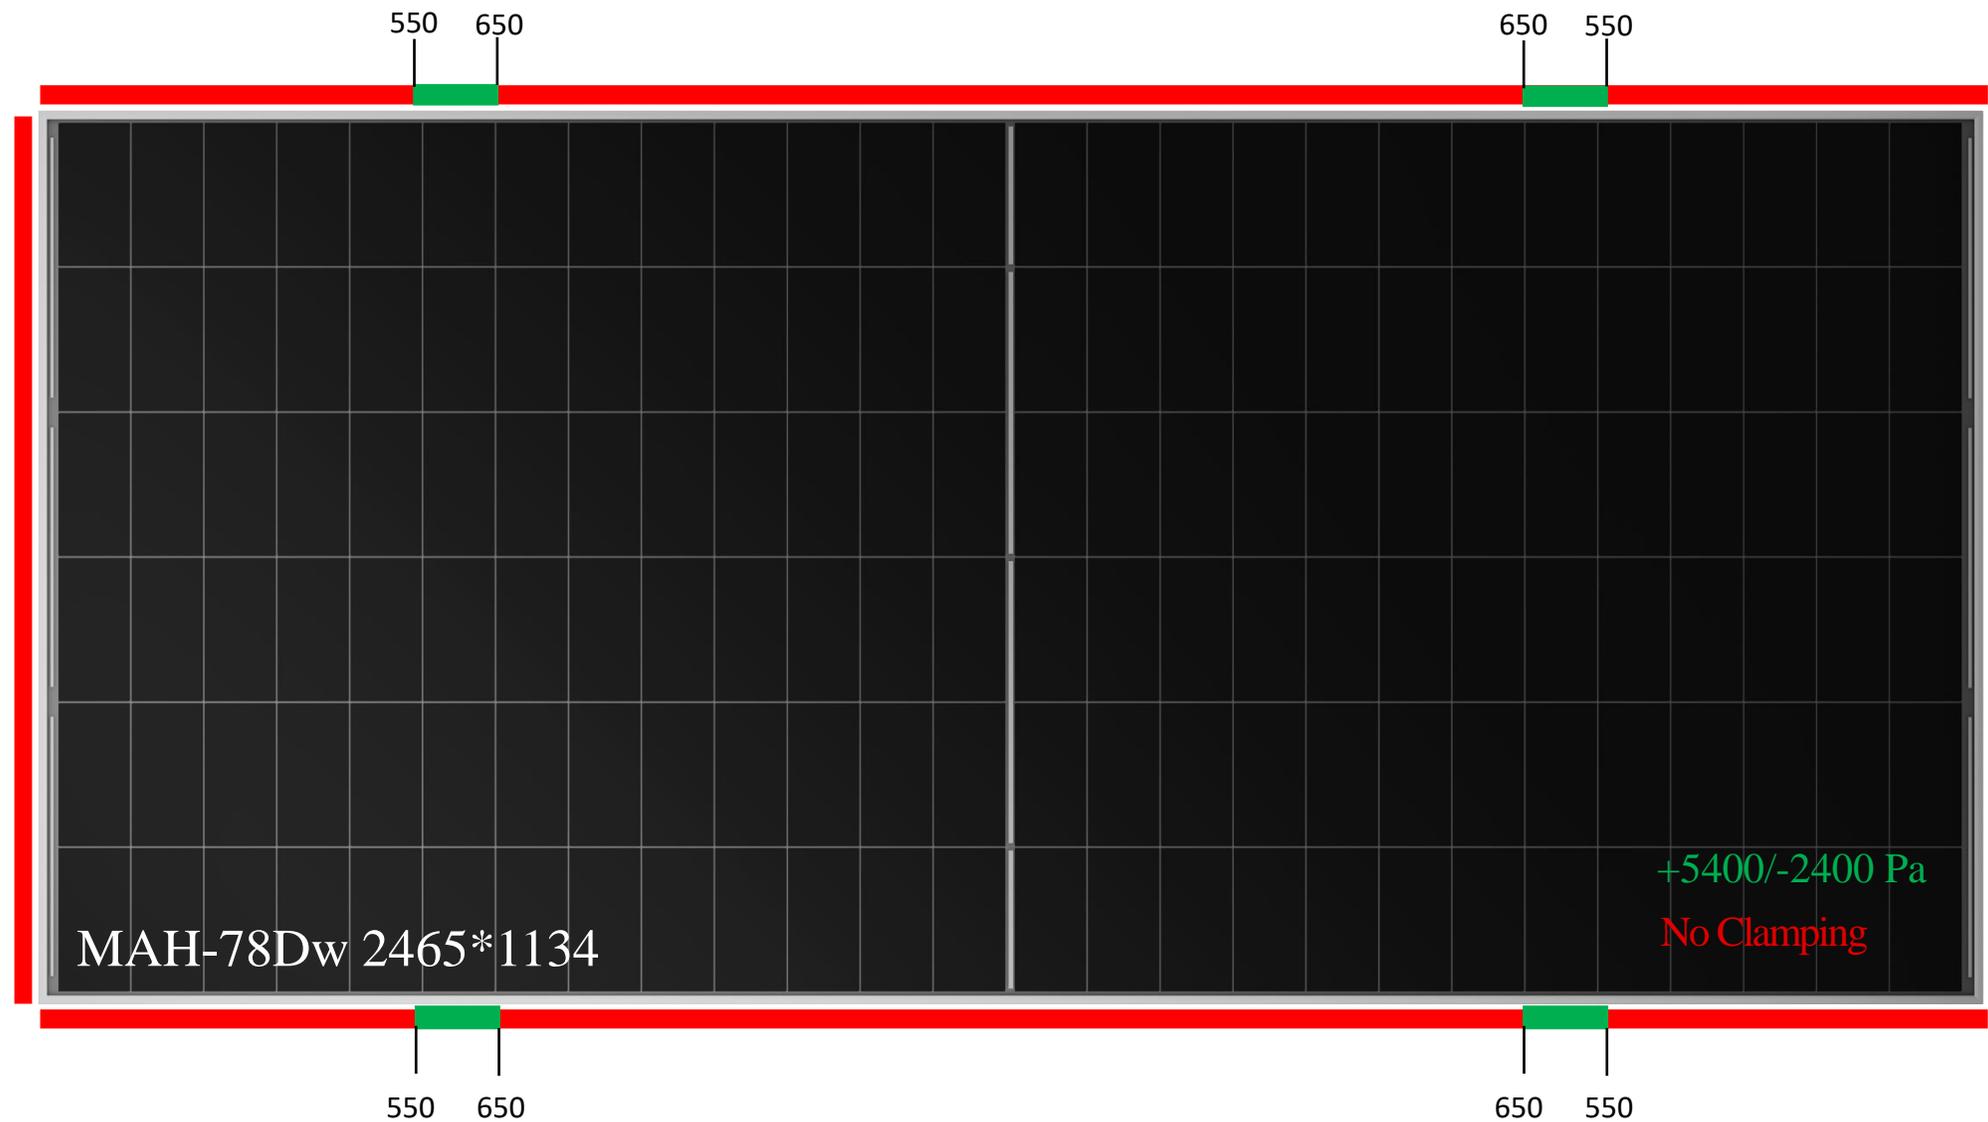


该图仅代表檩条垂直于长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

MIKO




慧星 Comet

压块安装范围扩展
Clamping Zone Extension

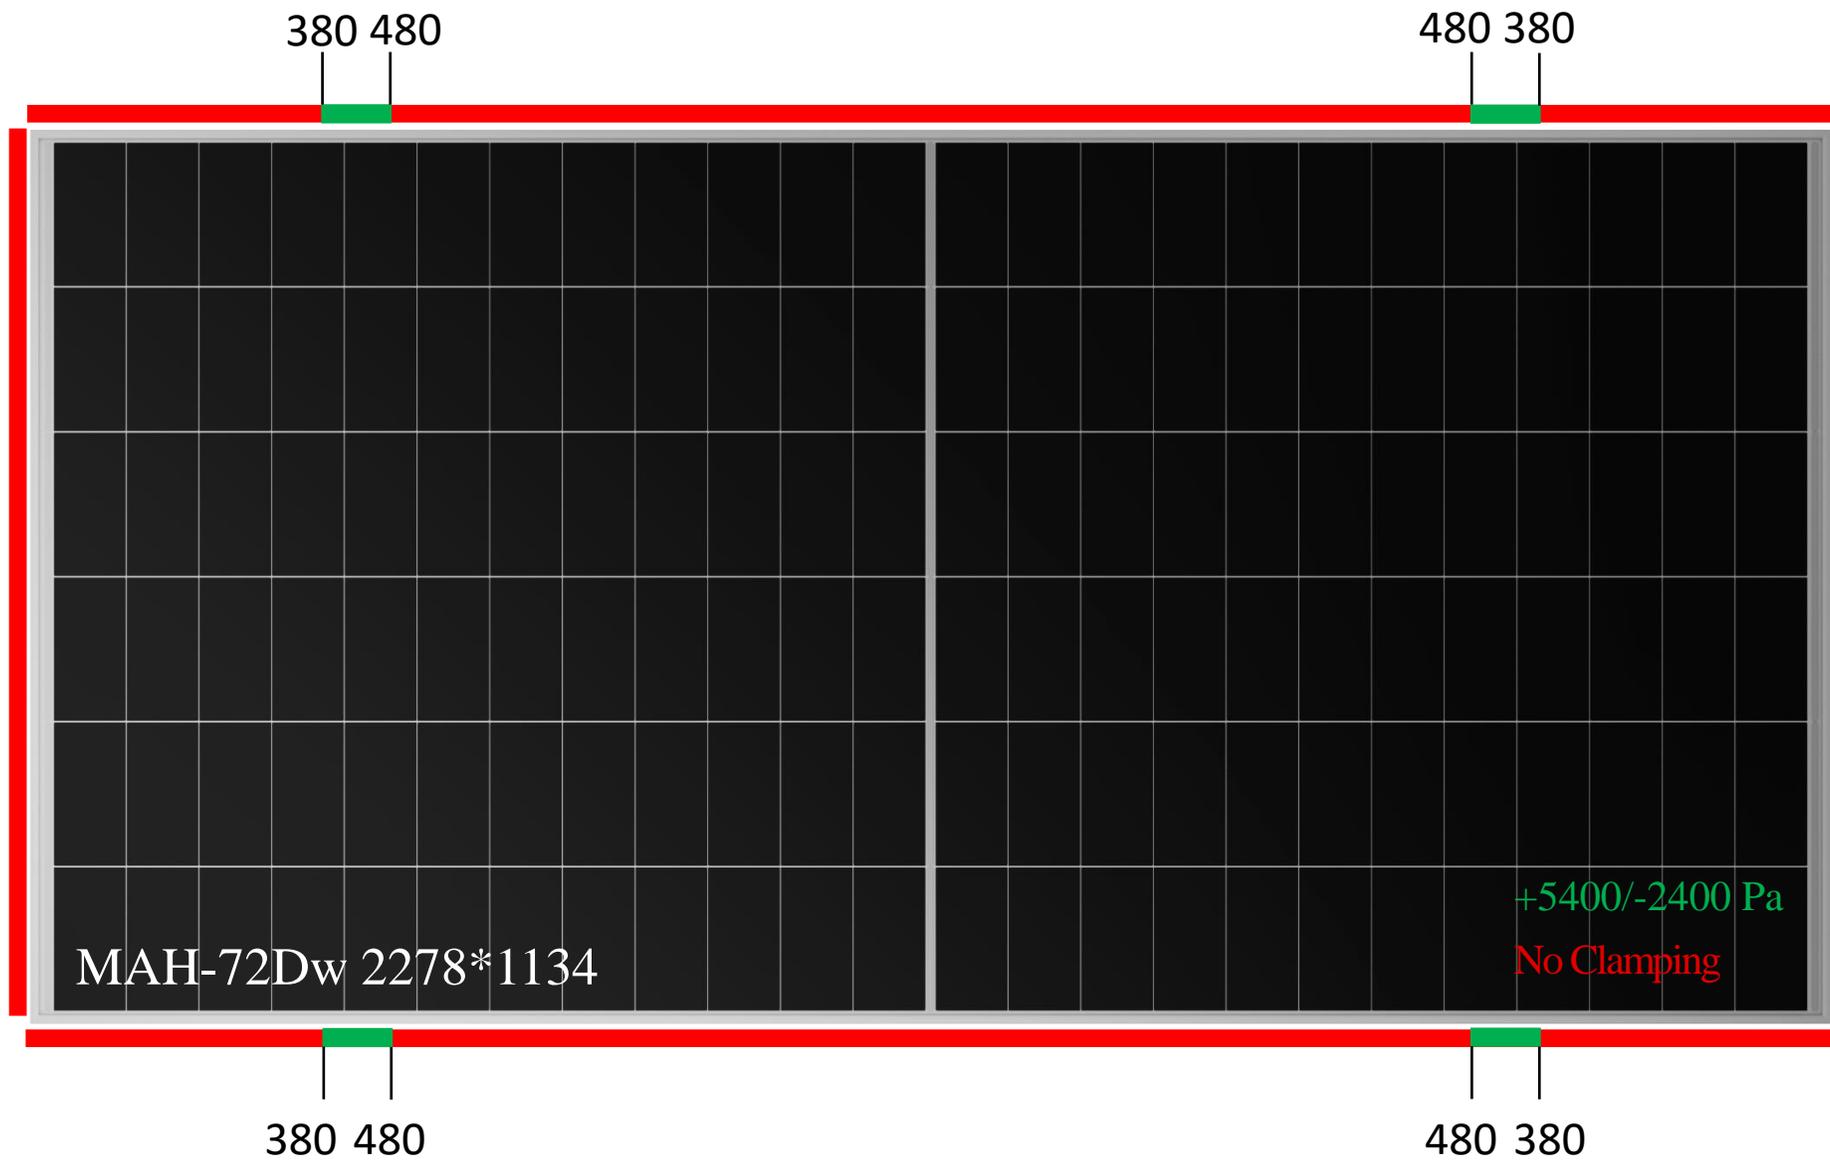


该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

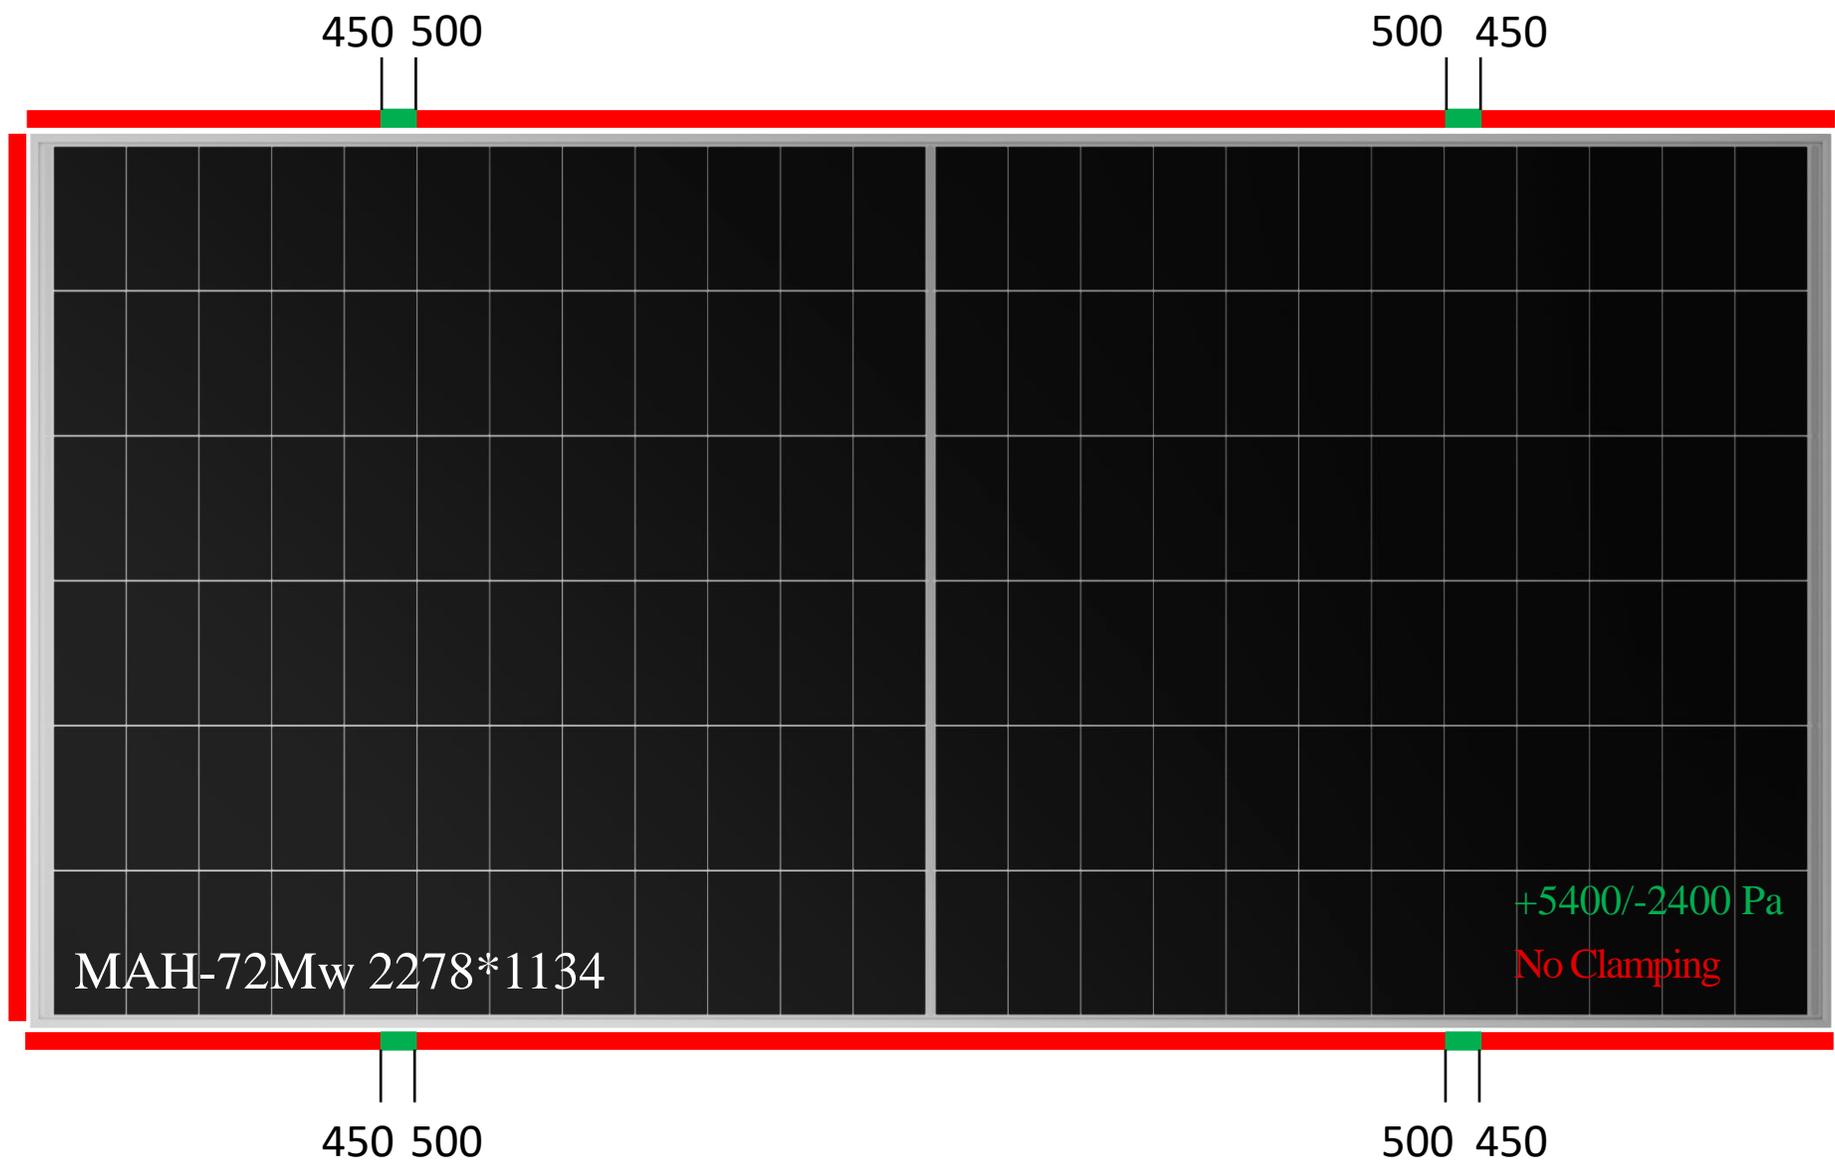


该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

33边框

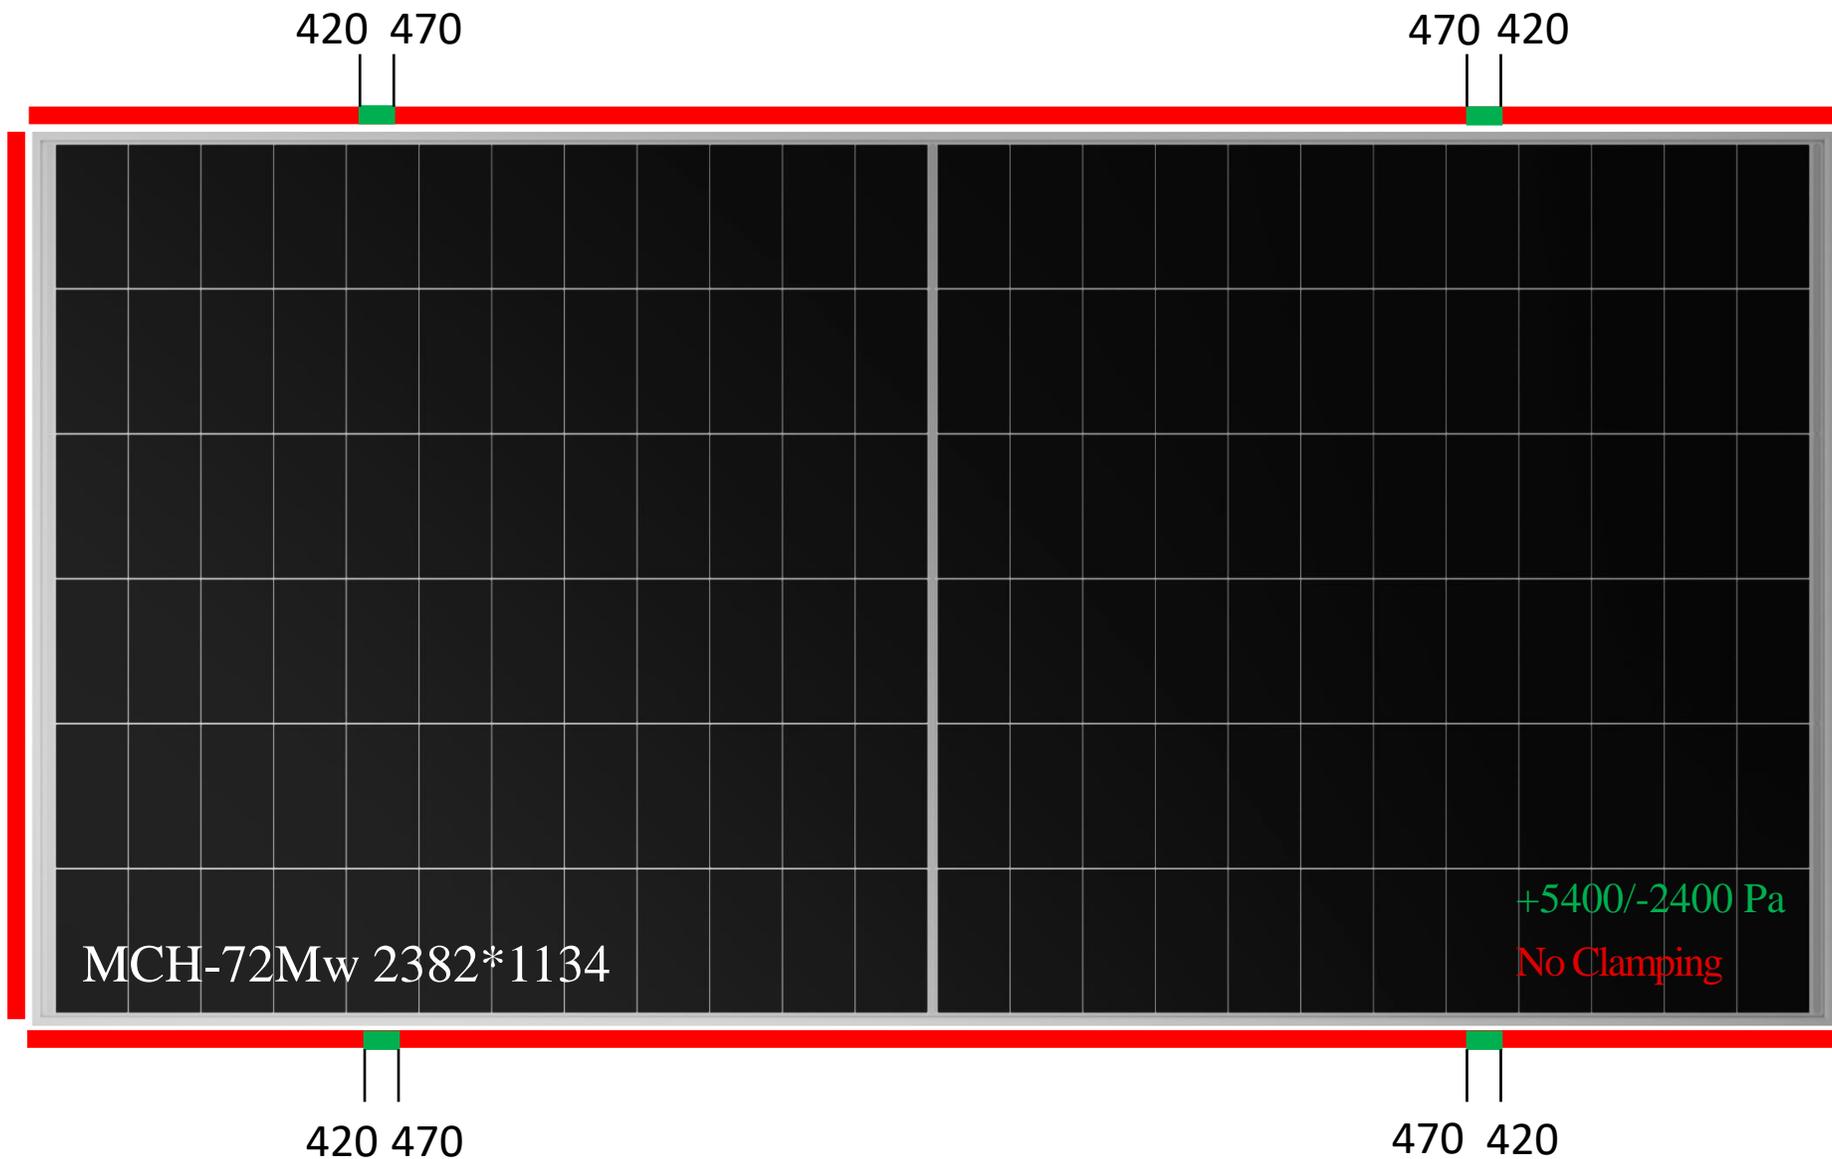


该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

30边框

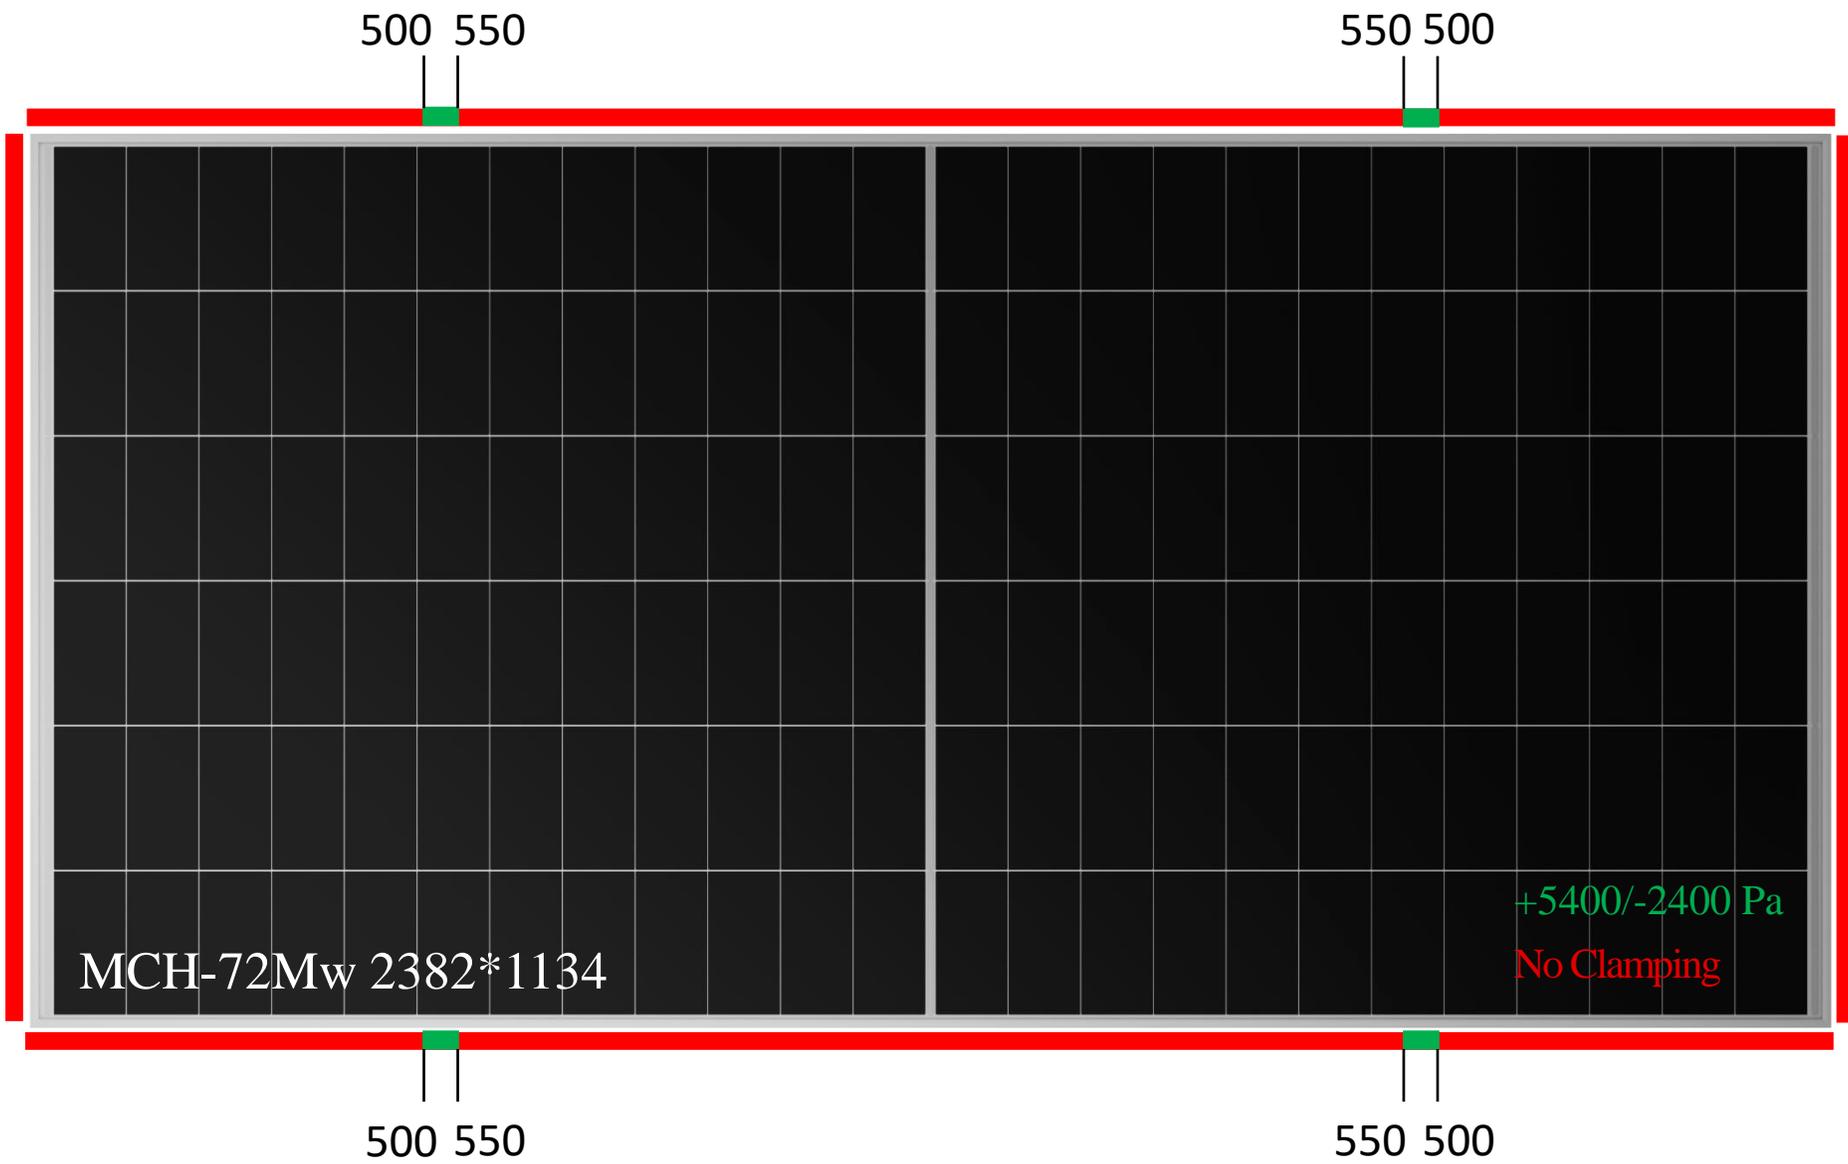


该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位： mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

MIKO

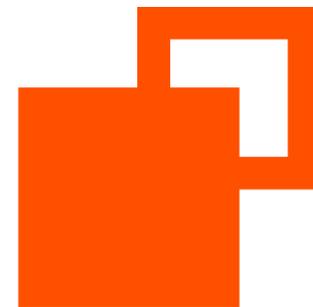

星云 Nebular


压块安装范围扩展
Clamping Zone Extension

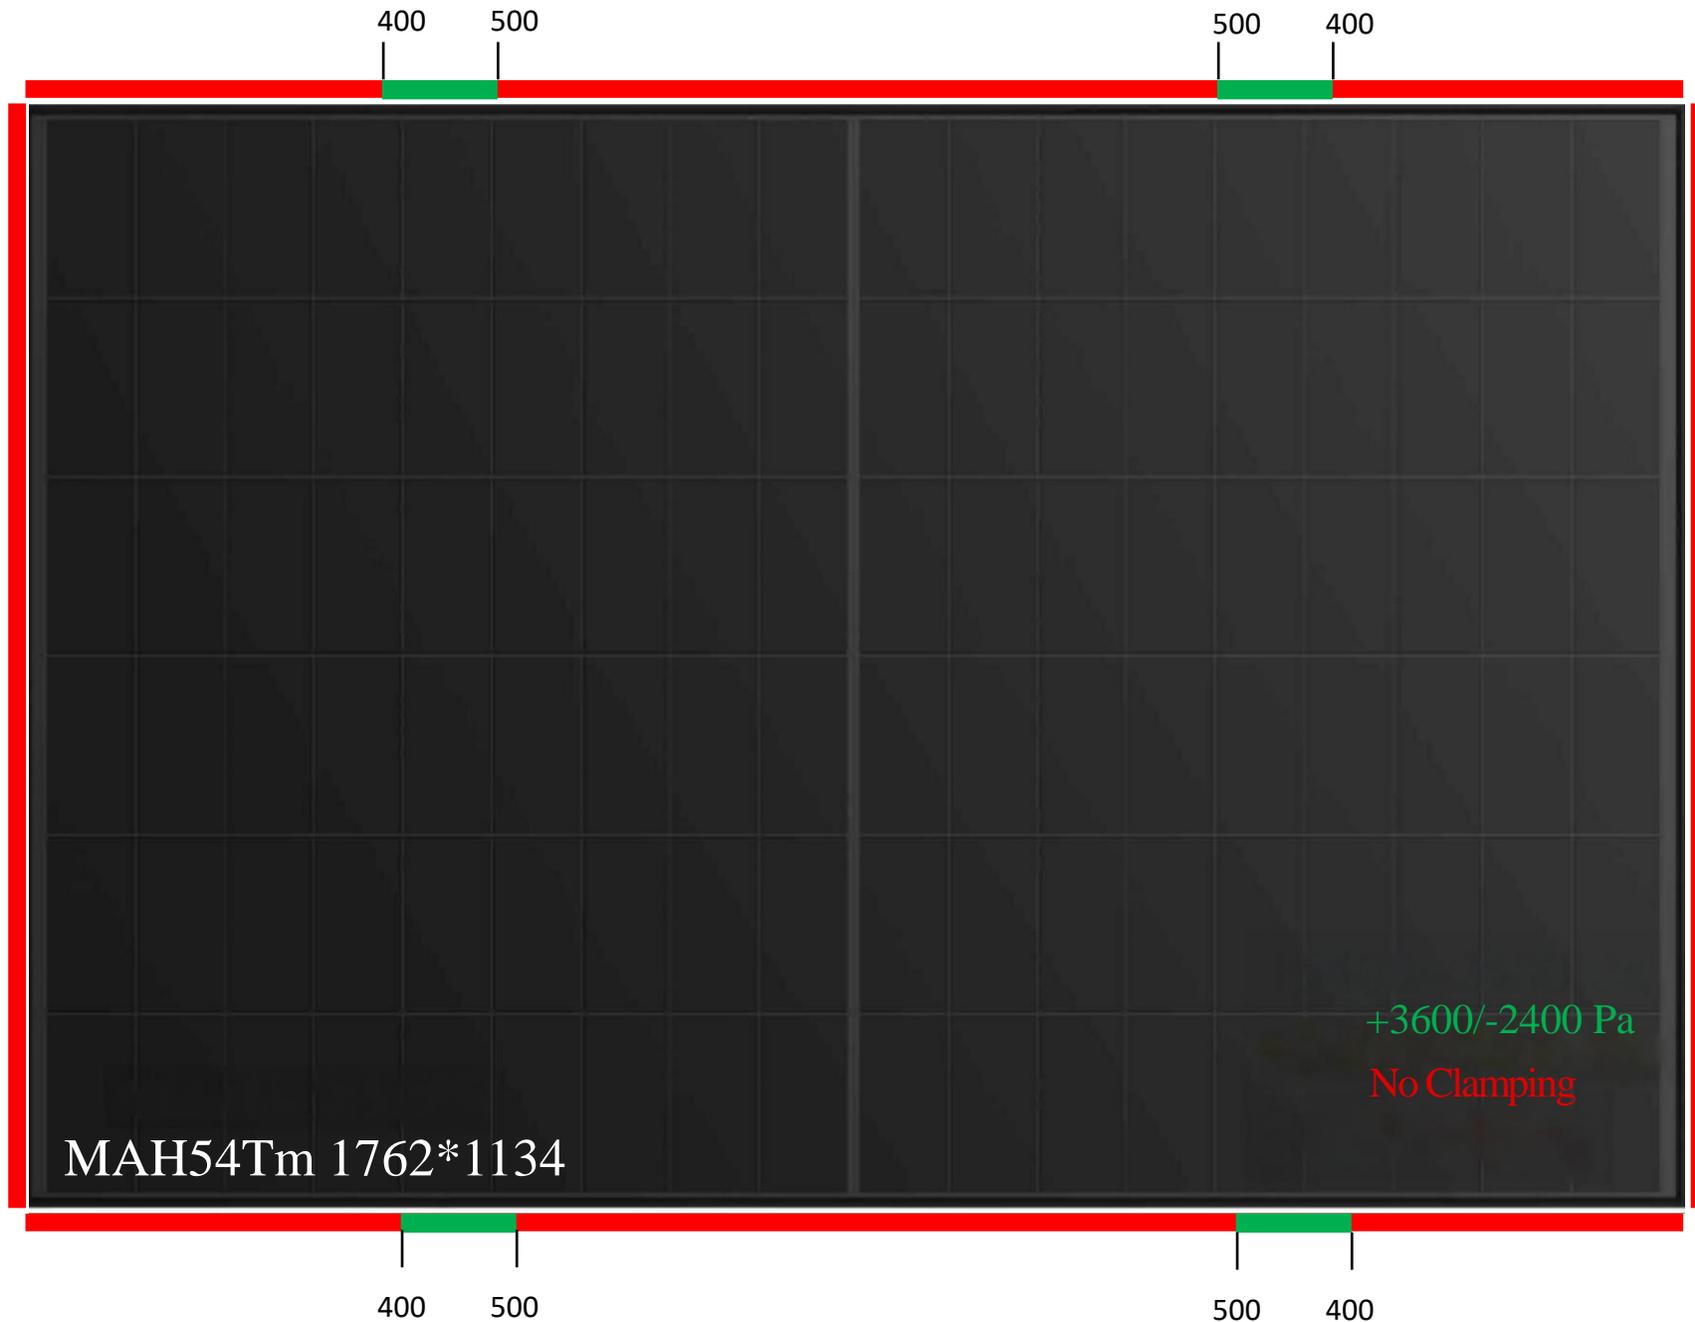

该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm


This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

MIKO

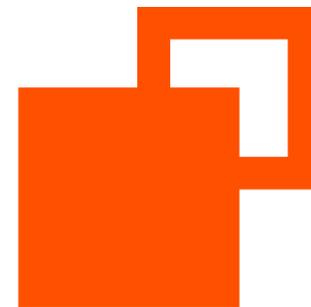


恒星 Stellar


压块安装范围扩展
Clamping Zone Extension

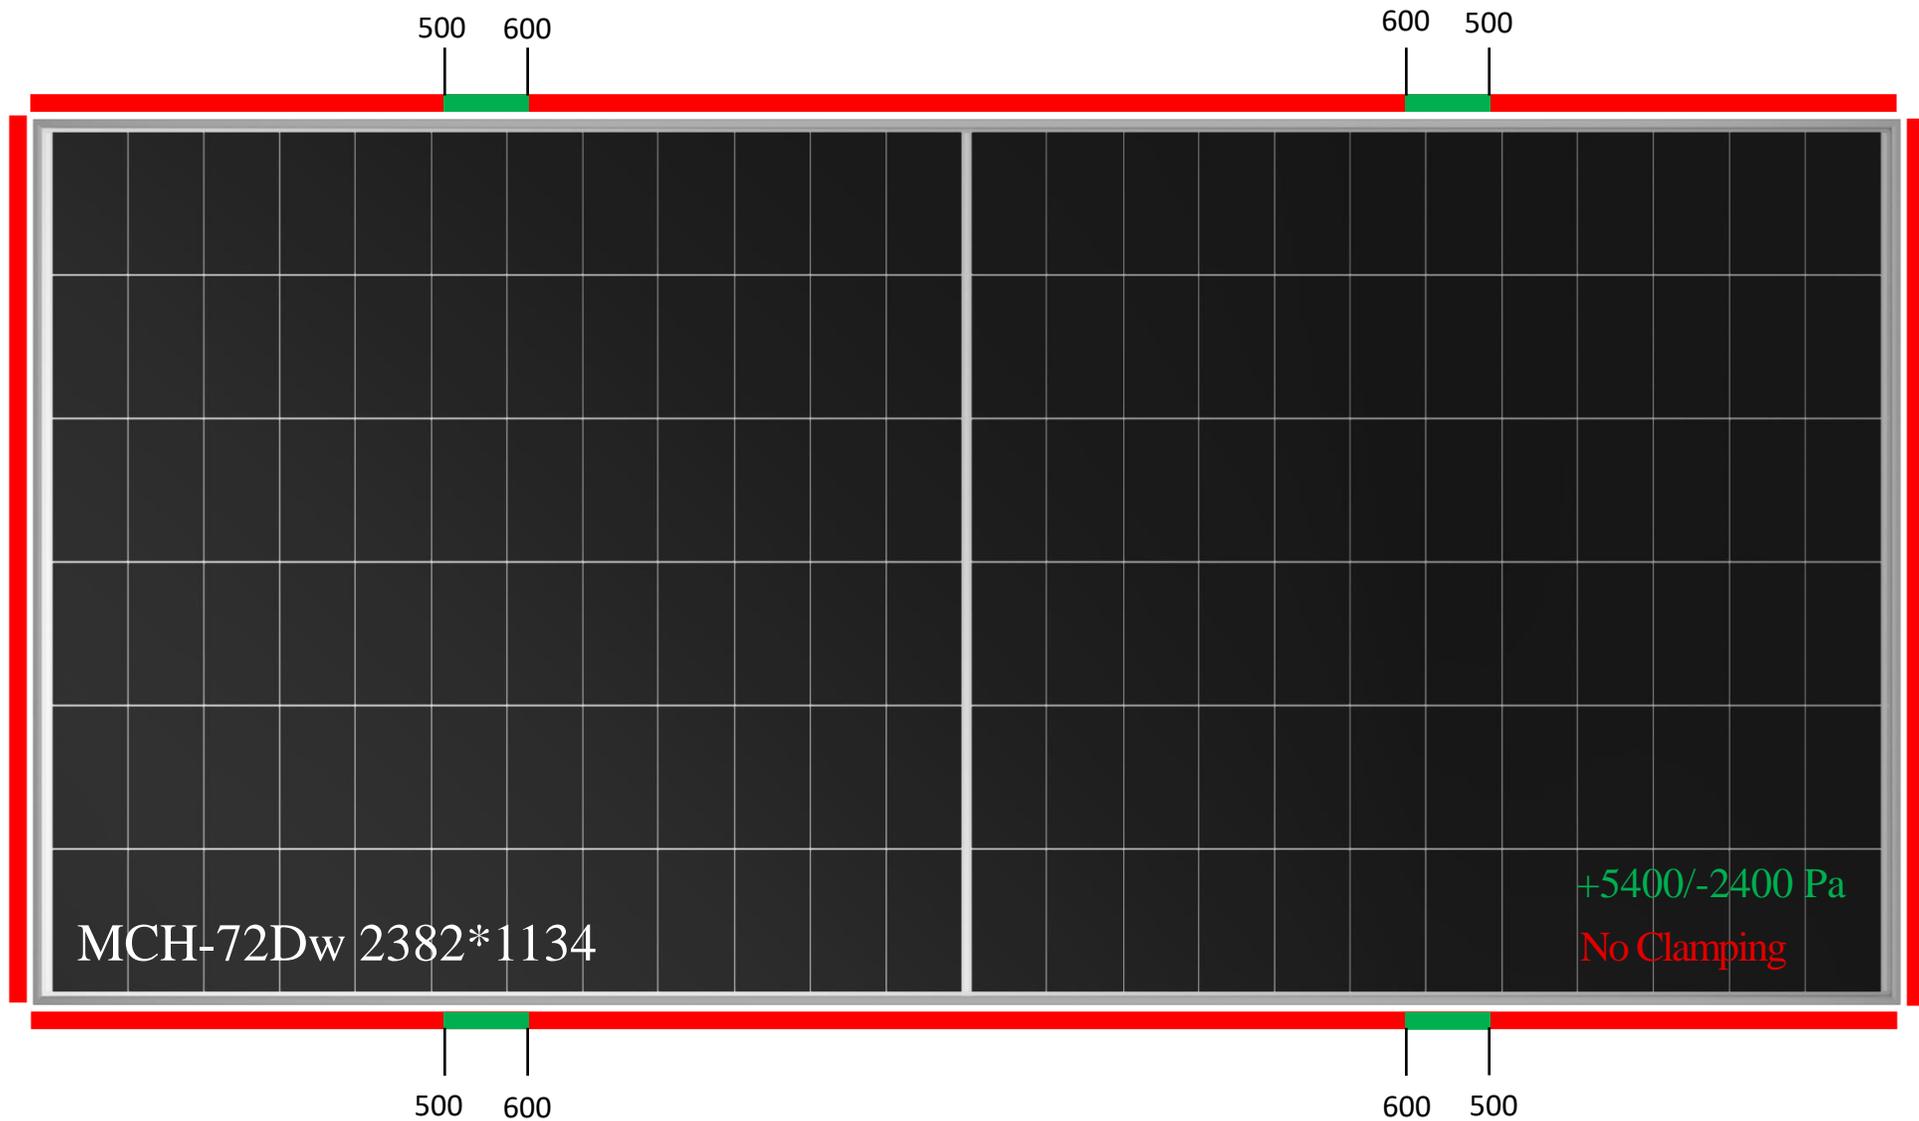


该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

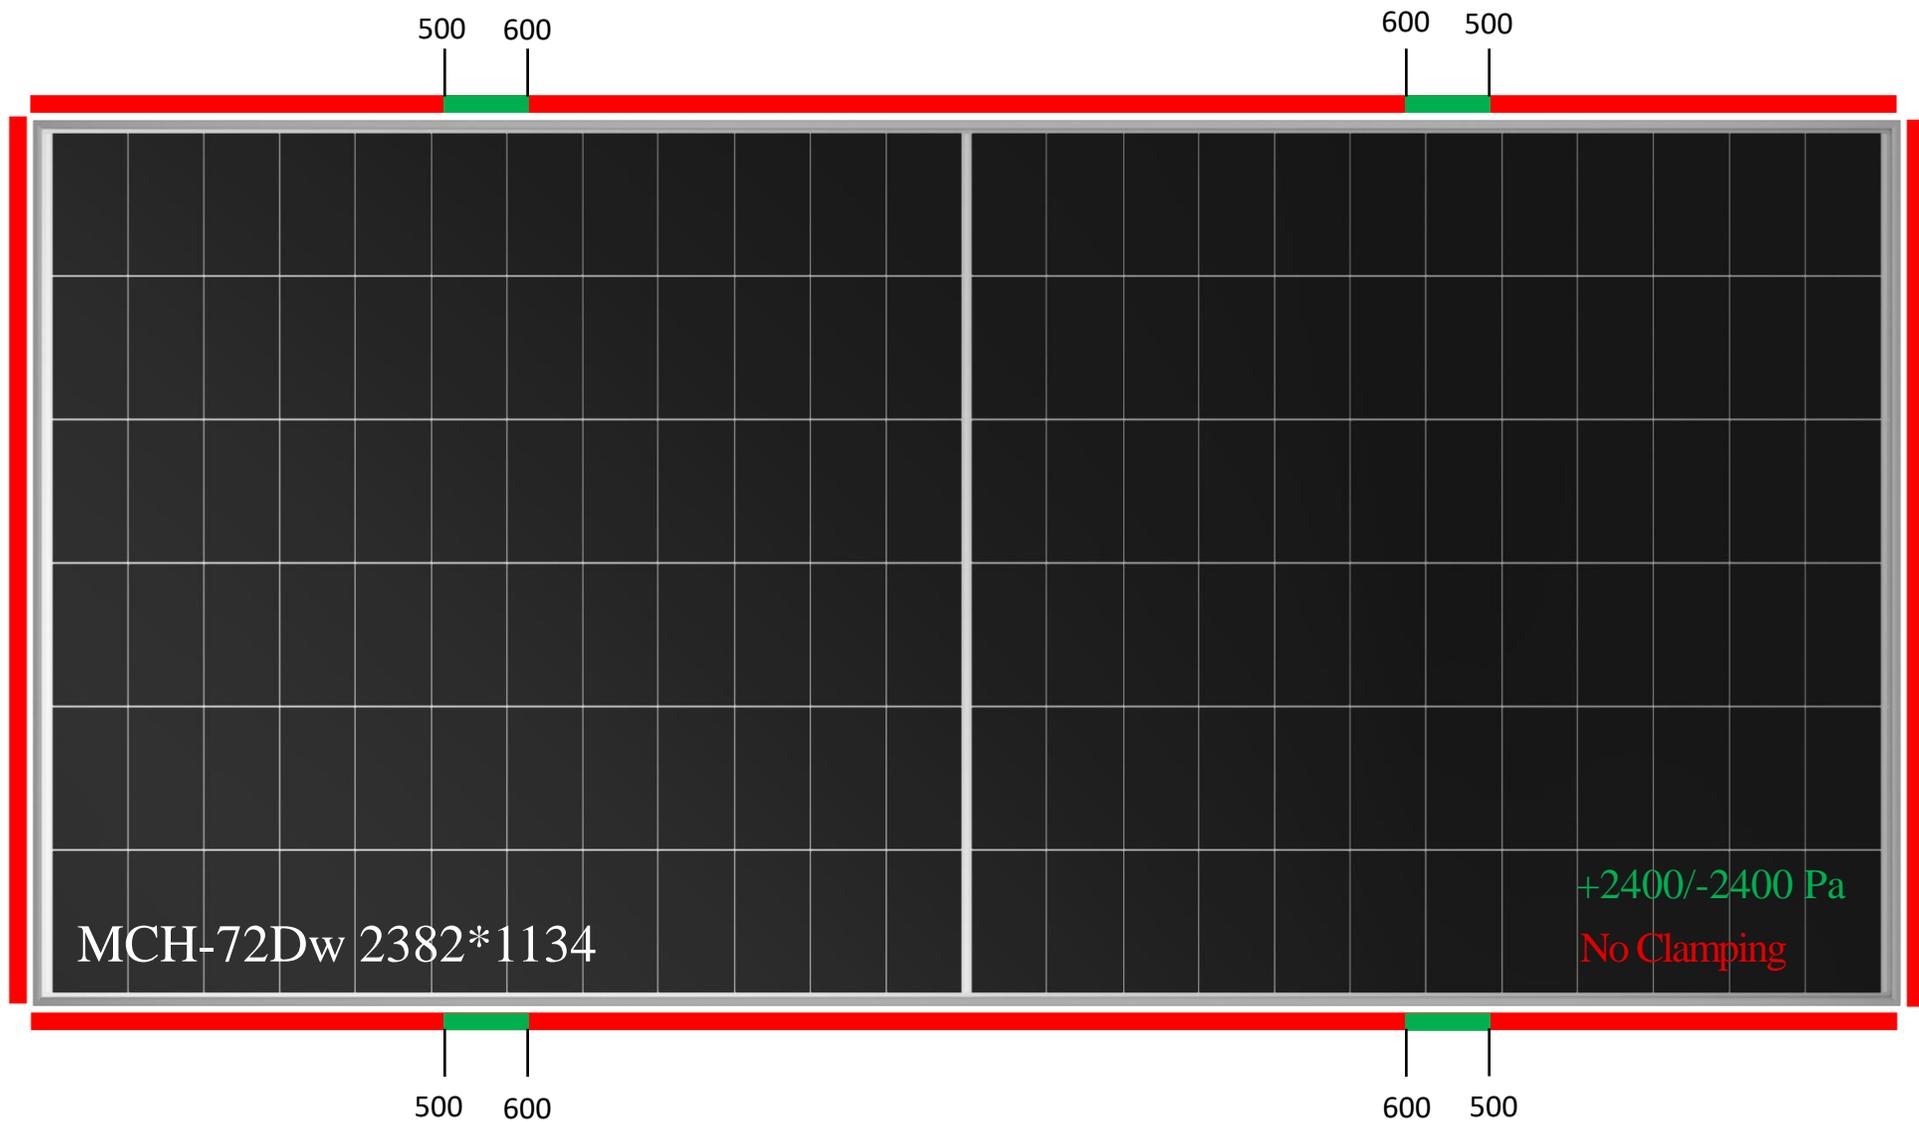

该图仅代表檩条平行长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin parallel to the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

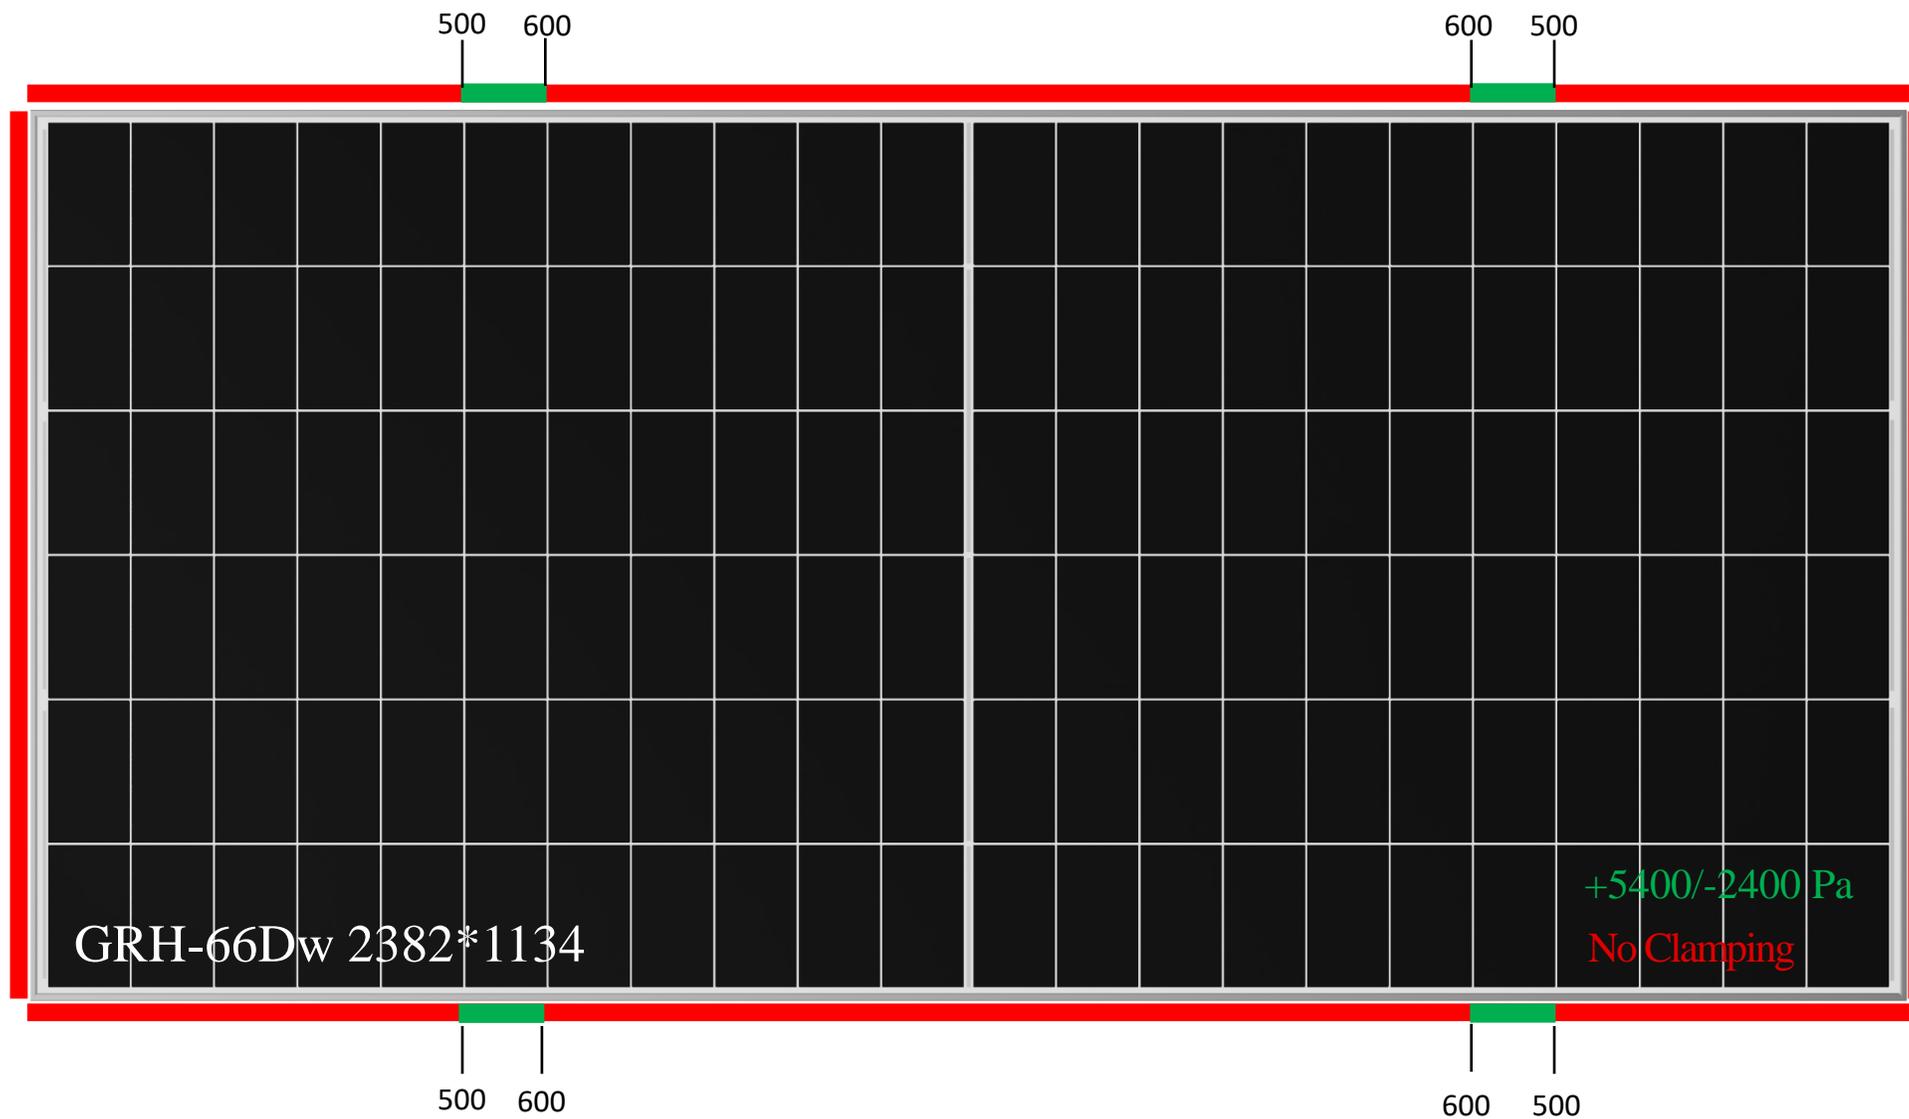

该图仅代表檩条垂直长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin cross the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm

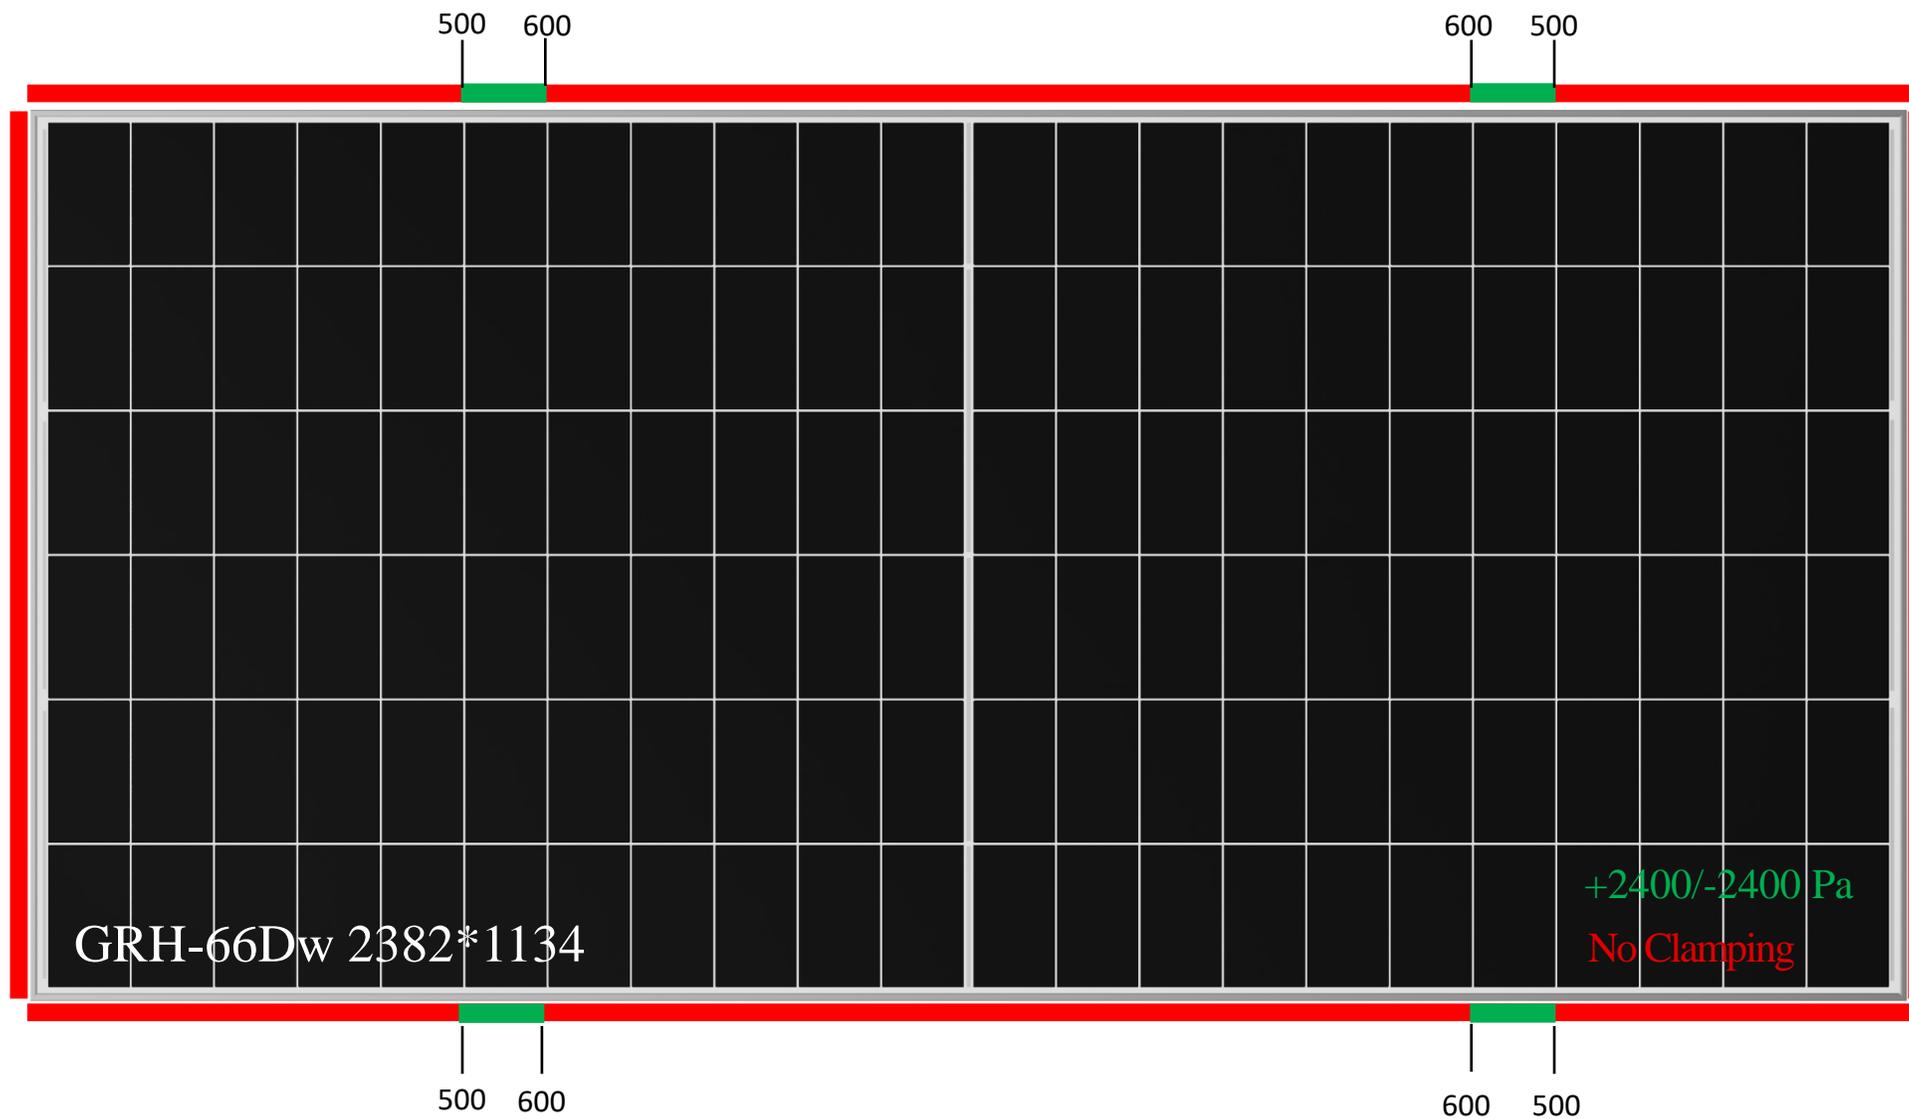

该图仅代表檩条平行长边的压块安装，以上数字表示压块中心线距离边框边缘的距离，单位：mm
This load graph present when the purlin parallel to the long frame, number means the distance between the centerline of clamp to the edge of frame. Unit: mm