

GAS CONTROL GA3392

The WSP 100 has been provided with a 2-stage control valve. After exchanging the gas control the burner pressure for high (12,5 mb) and low (5,5 mb) should be measured and set before operation. The burner pressures should be measured at the positions pointed out in the image below.

