


10 Exploded view and spare parts

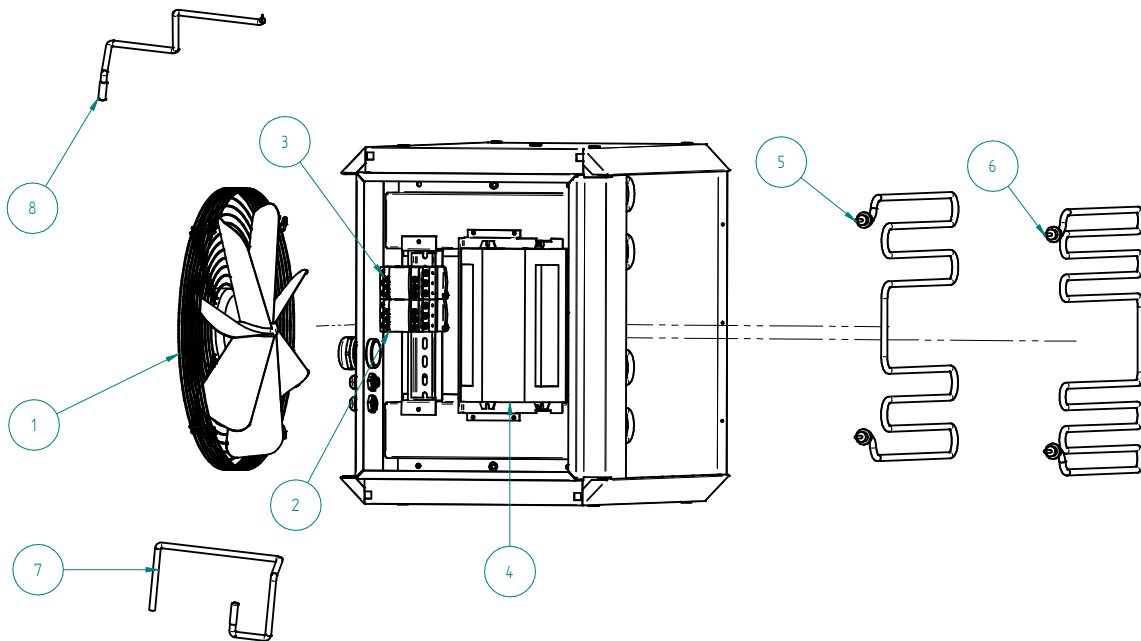

No.	Description	EH10	EH15	EH25	EH30	EH40
1	System fan	IX4201	IX4201	IX4201	IX4201	IX4204
2	Relay low	IE5201	IE5201	IE5201	IE5201	IE5202
3	Relay high	IE5201	IE5201	IE5202	IE5202	IE5202
4	Burner control unit	GE5903	GE5903	GE5903	GE5903	GE5903
5	H. Element 2,5 kW		IE2510	IE2510		
6	H. Element 3,3 kW	IE2512		IE2512	IE2512	IE2512
7	Sensor h. element	GY3932	GY3932	GY3932	GY3932	GY3932
8	Delta-T sensor	GY3931	GY3931	GY3931	GY3931	GY3931