

## GAS CONTROL IK3311

After fitting a new gas control it needs to be adjusted. This must be done by a qualified person only. **Only use calibrated instruments!** A poor adjustment can lead to overheating and / or production of toxic carbon monoxide! Check type tag for correct burner pressure.

The burner pressures can be adjusted as follows:

- Remove the cover from the gas control with the help of a (small) screwdriver.
- Start the unit and first set the high burner pressure by turning screw (external 10mm). The High / low coil must be energized !  
De-energize coil (disconnect wire) and set low burner pressure by turning screw (slot for screwdriver)  
Do not set lower than 3 mbar in order to avoid problems with inter-lightning of burner strips.

