



—
INSTALLATION INSTRUCTION

Terminal clamps

OZXM1, OZXM2

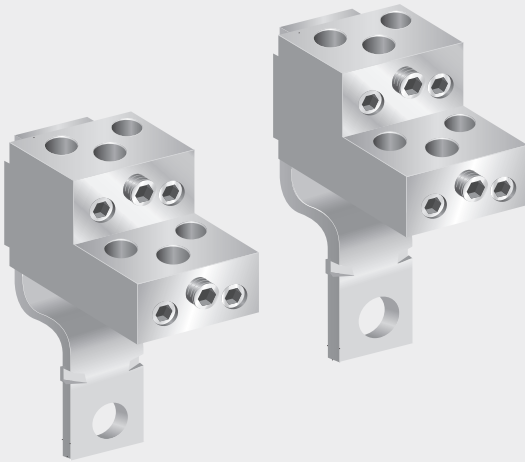

OZXM1, OZXM2

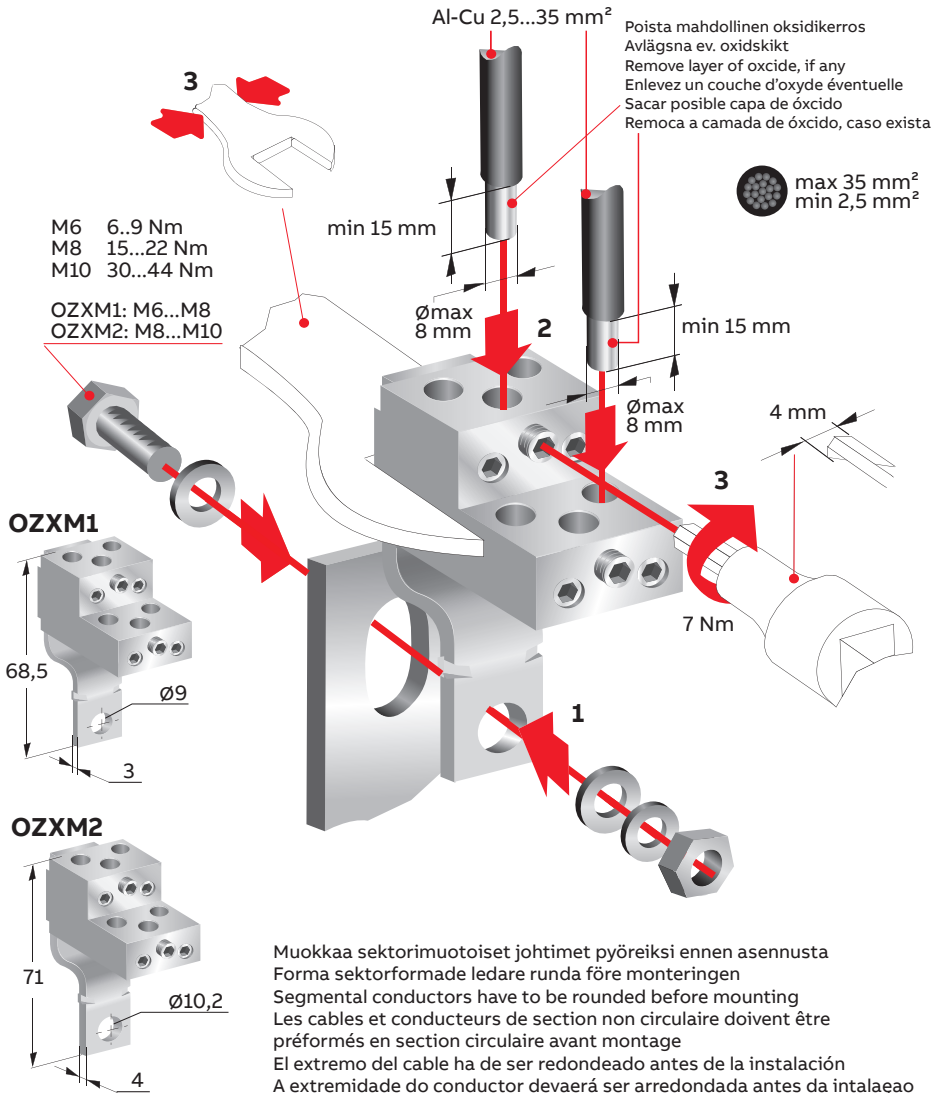



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage