




Scan the qr-code

and type the article code
'CU-6ZONEB-HC' in the search
bar for:


- **Instruction video**
- **Written instructions**
- **Wiring schematics**

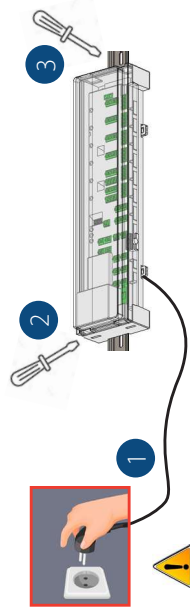

HENCOLOGIC

CONTROL UNIT (H/C)

6 zones, Heating & Cooling, Wired - CU-6ZONEB-HC

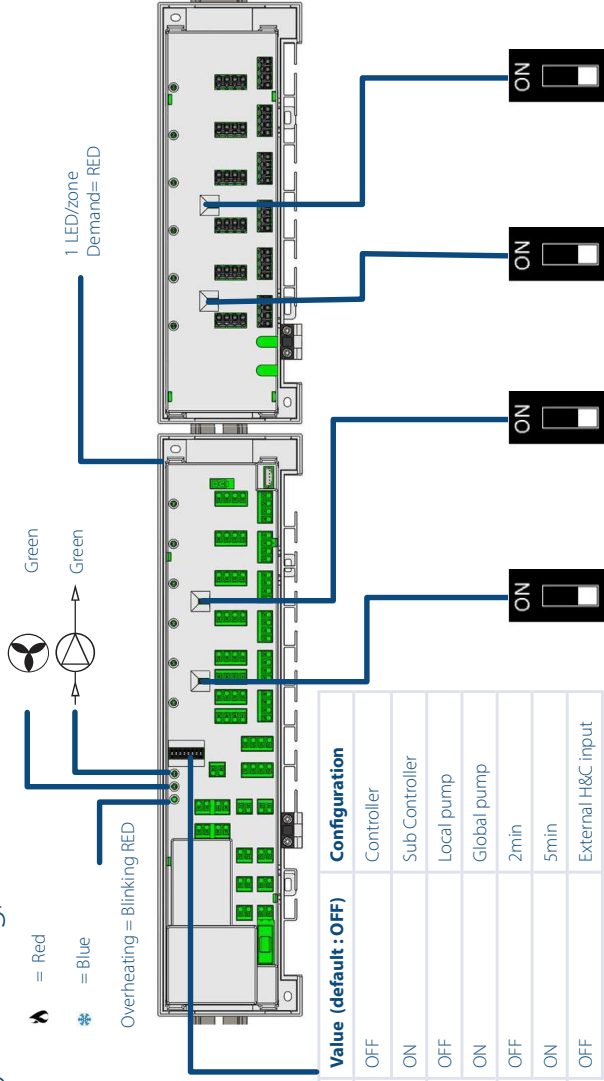

Quick Installation Guide

The descriptions and photographs contained in this document are supplied by way of example and illustration only. Henco Industries reserves the right to carry out any technical and design improvements to its products without prior notice. Henco hereby objects to any term, different from or additional to Henco terms, contained in any buyer communication in any form, unless agreed to in a writing signed by an officer of Henco.

2012/19/EU: Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see:

<https://www.henco.be/en/henco-logic>



DIP switch number	Function	Value (default : OFF)	Configuration
1	Controller function	OFF	Controller
2	Pump (available only on main controller, the sub is always local)	ON	Sub Controller
3	Pump start delay	OFF	Local pump
4	H&C order	ON	Global pump
5	Time before H&C switch	OFF	2min
6	H&C outputs	ON	5min
7	Pump Stop Delay	OFF	External H&C input
		ON	Master Thermostat
		OFF	No delay
		ON	5 minutes delay
		OFF	Demand on any zone
		ON	Mode
		OFF	0min
		ON	7min

EN

Safety warnings and operating instructions

This product should be installed preferably by a qualified professional. All instructions in this Installation & Operation manual should be observed when working with the controller. Failures due to improper installation, improper use or poor maintenance are voiding manufacturer liability.

FR

Avertissements de sécurité et consignes d'utilisation

Ce produit doit être installé de préférence par un technicien agréé. Toutes les instructions reportées dans ce manuel d'installation et d'utilisation doivent être respectées lorsque les travaux portent sur le contrôleur. Toute installation, utilisation ou entretien incorrect annule la responsabilité du fabricant


NL

Veiligheidswaarschuwingen en gebruiksaanwijzingen

Dit product dient bij voorkeur door een erkend vakman te worden geïnstalleerd. Alle instructies in deze installatie- en bedieningshandleiding dienen te worden opgevolgd bij het werken op de regelaar. Bij storingen als gevolg van verkeerde installatie, onjuist gebruik of slecht onderhoud komt de aansprakelijkheid van de fabrikant te vervallen.



Wiring diagram

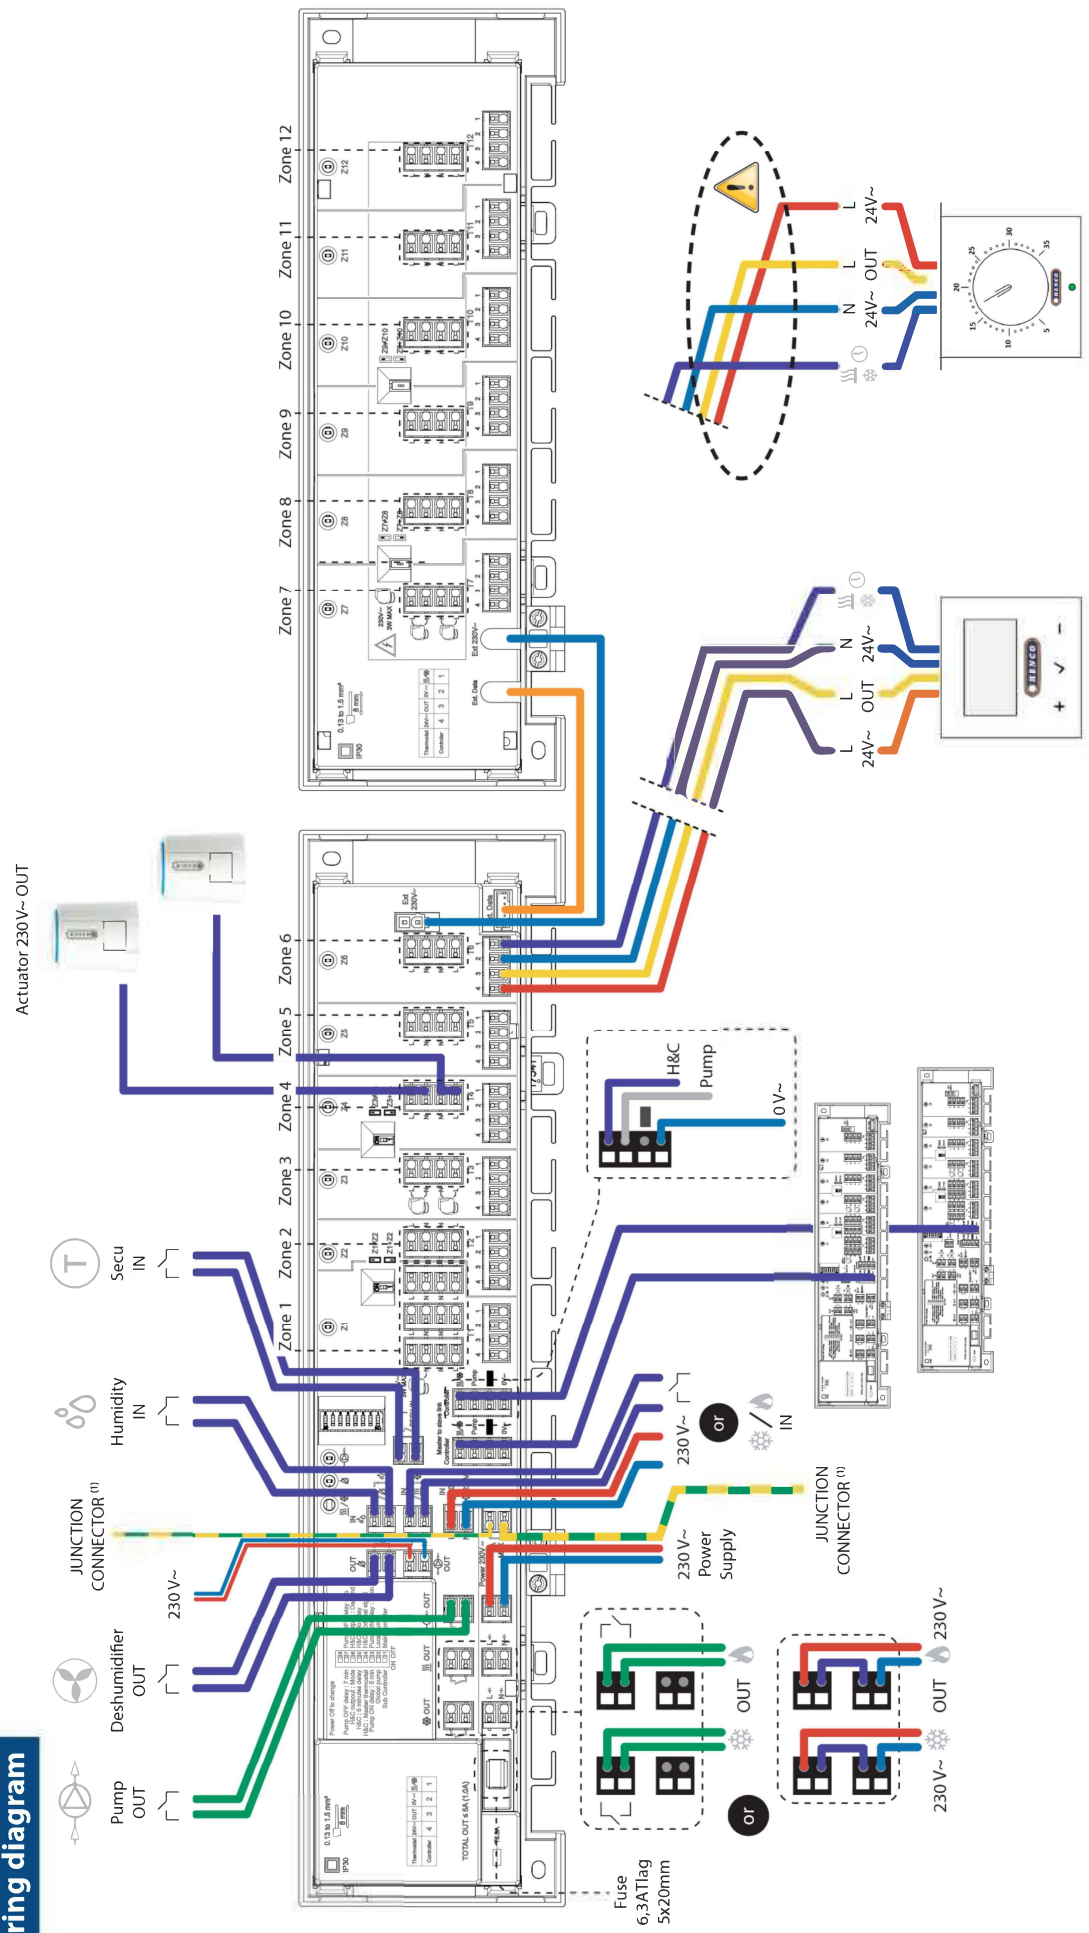

WE CARE TO CONNECT

PPLIMW15592Ca