

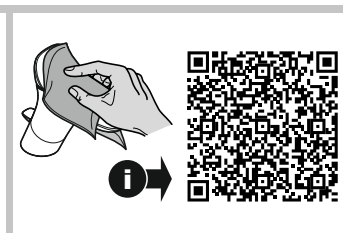
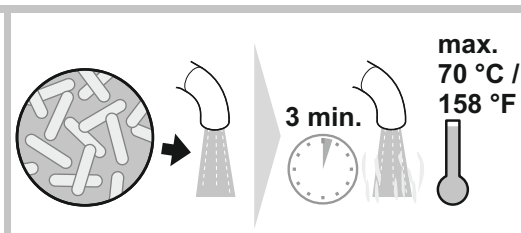
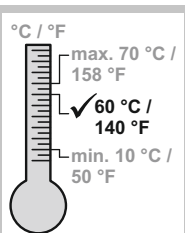
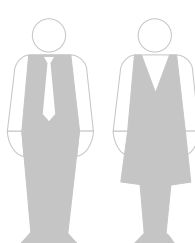


DIN EN 806
DIN EN 1717
DIN 1988
Global Standards

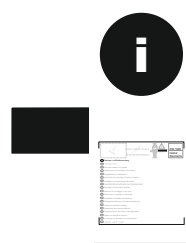

- ⓓ Montage- und Bedienanleitung
- Ⓒℕ 安裝及操作指南
- Ⓒℤ Návod k instalaci a k použití
- Ⓔ Instrucciones de montaje y de manejo
- Ⓔᑲ Paigaldamine ja kasutamine
- Ⓕ Instructions de montage et d'utilisation
- Ⓖᑲ Installation and operating instructions
- Ⓖℝ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- Ⓕ Szerelési és használati utasítás
- Ⓕ Istruzioni di montaggio e per l'uso
- Ⓕᑲ Montavimo ir naudojimo instrukcija
- Ⓕᑲ Montāžas un lietošanas instrukcija
- Ⓕᑲ Montagehandleiding en Gebruiksaanwijzing
- Ⓕᑲ Instrukcja montażu i obsługi
- Ⓕᑲ Instrucțiuni de montaj și utilizare
- Ⓕᑲᑲ Руководство по монтажу и эксплуатации
- Ⓕᑲ Návod na montáž a obsluhu
- Ⓕᑲᑲ Navodila za montažo in uporabo
- Ⓕᑲᑲ Інструкція по монтажу та експлуатації
- Ⓕᑲᑲ تعليمات التركيب والتشغيل

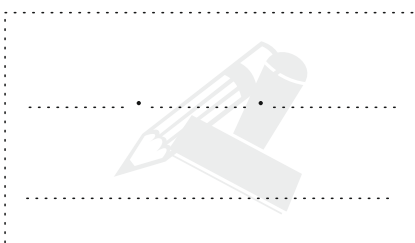