

—
INSTALLATION INSTRUCTION

Switch fuses

OS315-400_LR


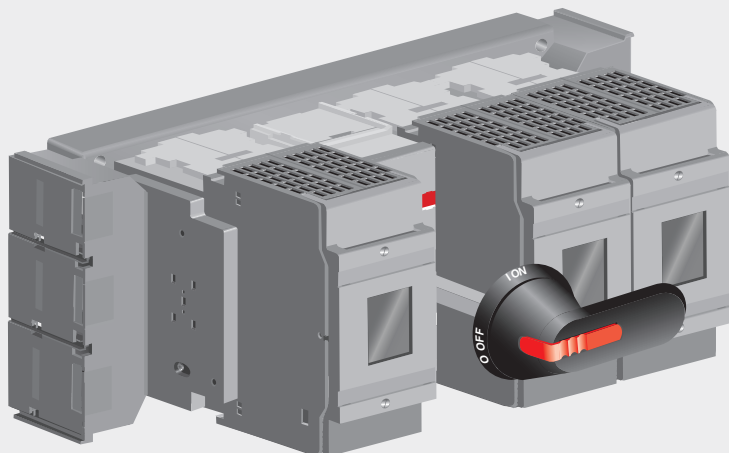


Table of contents


03	Installation Labels
04	Phase terminals Terminal shrouds OSS_
05	Fuse links Phase barriers
06	Auxiliary contacts OA_
07	Handles OSV400_
08	Electronic fuse monitor OFS_
09–11	Connections
12	Fuse indicator DPMM_
13–14	Dimension drawings
15	Warning sheet

Installation

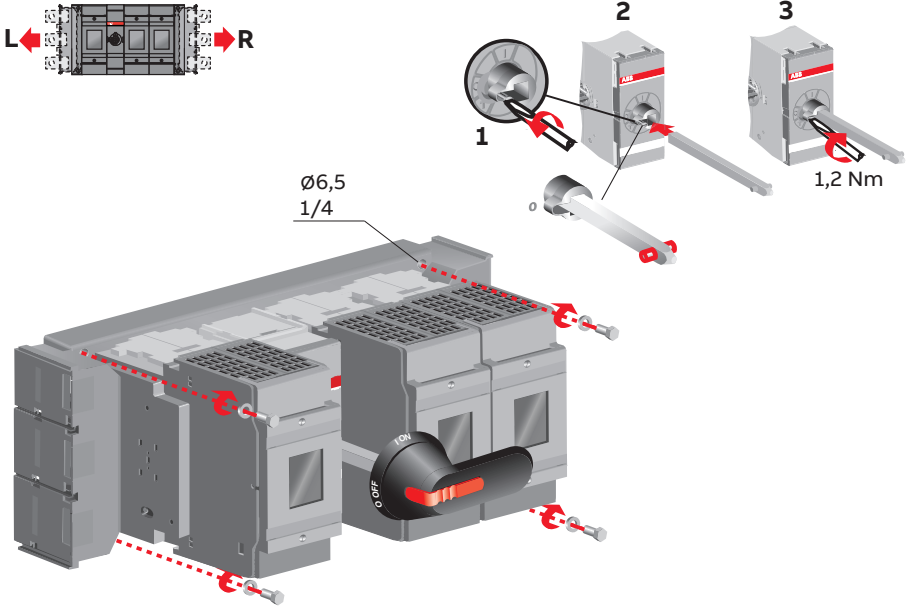


KA00040

Labels

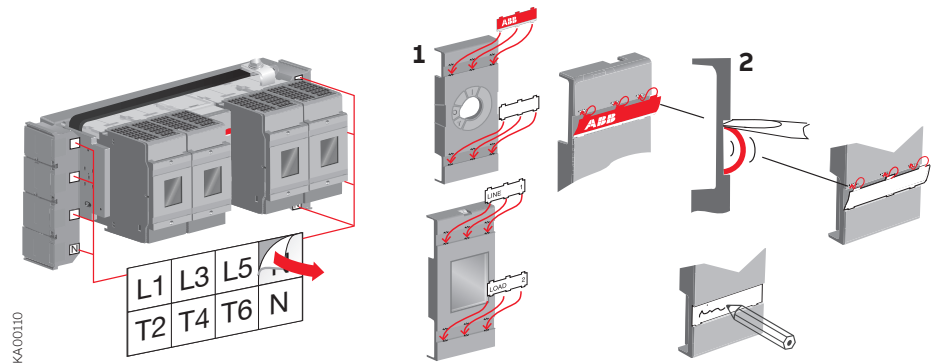


KA00110

Phase terminals

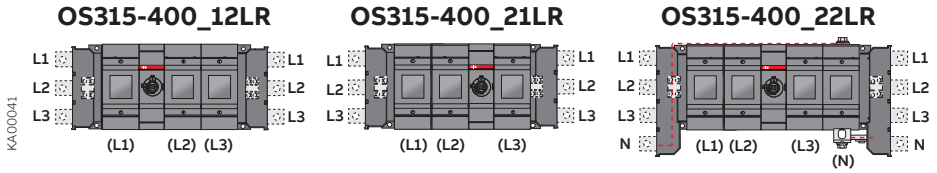



Terminal shrouds

OSS_

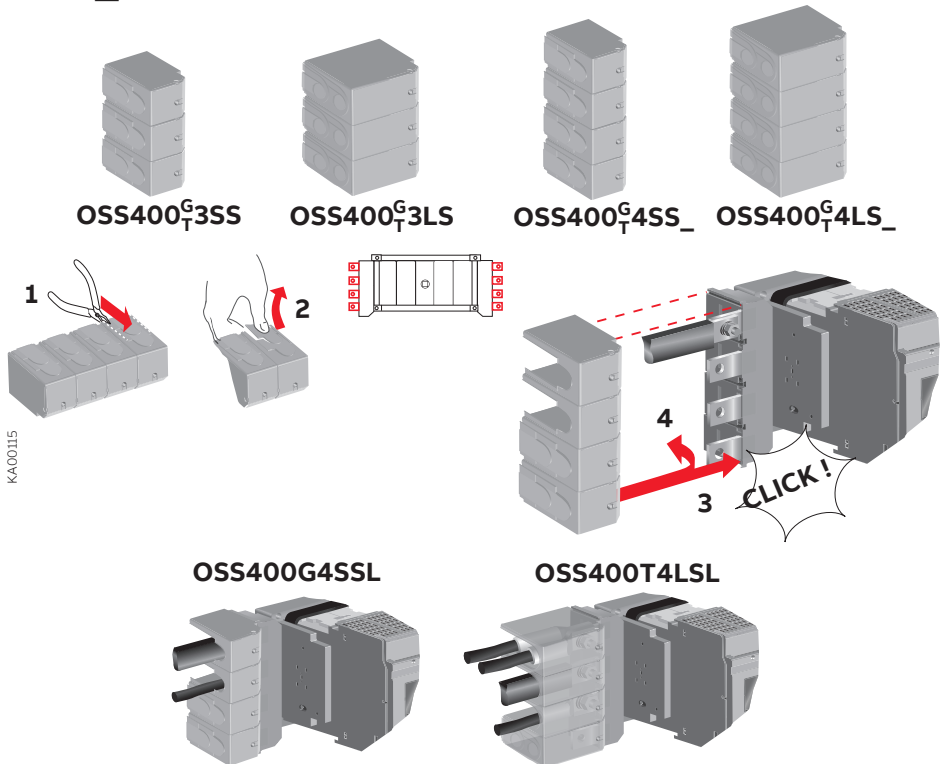


Auxiliary contacts

OA_

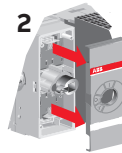
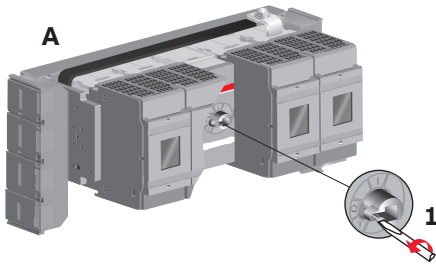


NO: OA1G10
NC: OA3G01


 
Test contact



Test indication contact

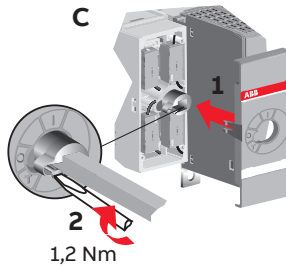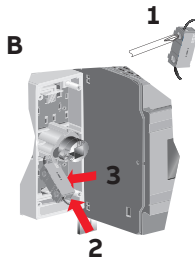


Remove

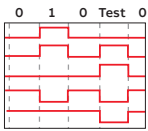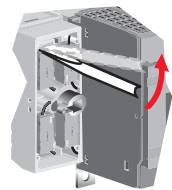

Main contact
 Test contact (NO)
 Test indication contact (NO)
 Test contact (NC)
 Test indication contact (NC)


 
OA1G10 (NO)
OA3G01 (NC)




Main contact
 Test contact (NO)
 Test contact (NC)

max 2

 KA00111





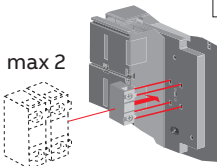


max 2



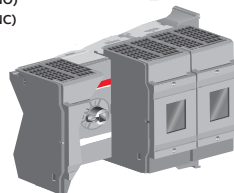


Handles


OSV400_

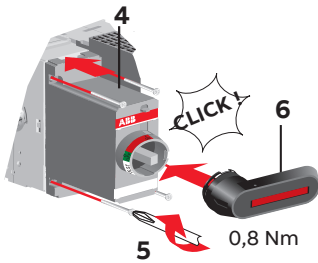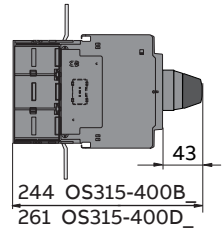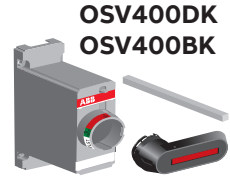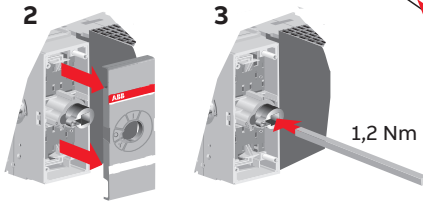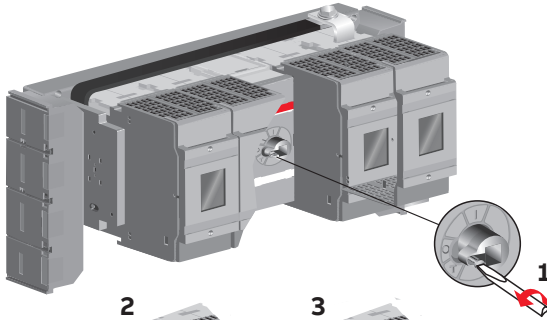

Remove

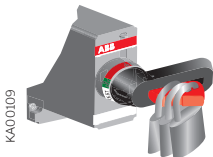 
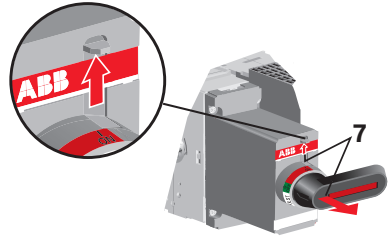


Note: Use protection against direct contact.
For example:

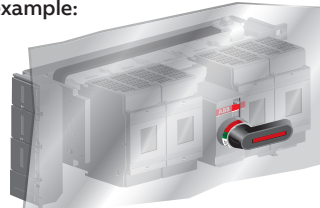


Electronic fuse monitor

OFS_









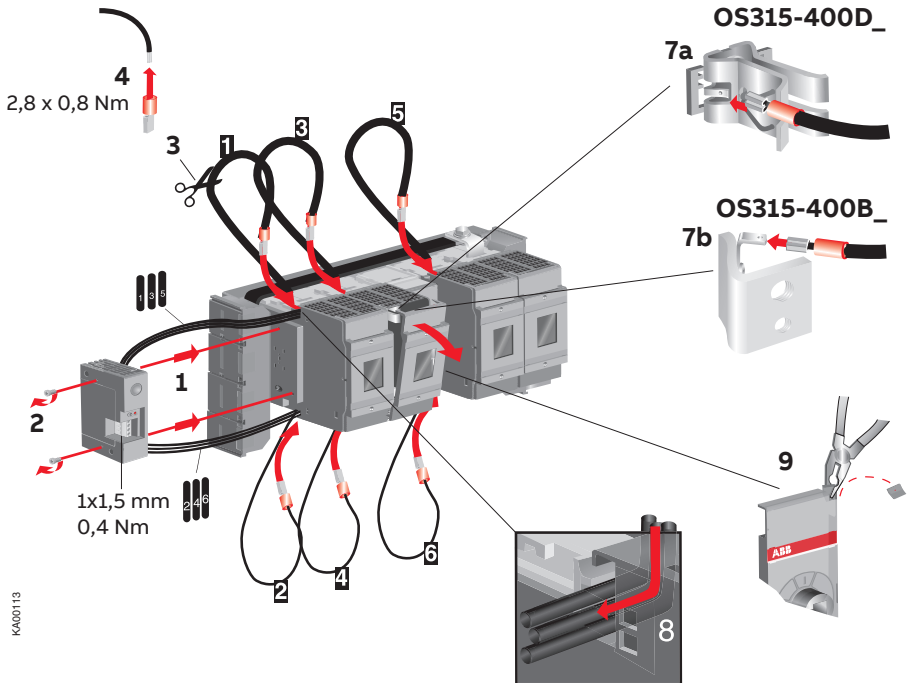
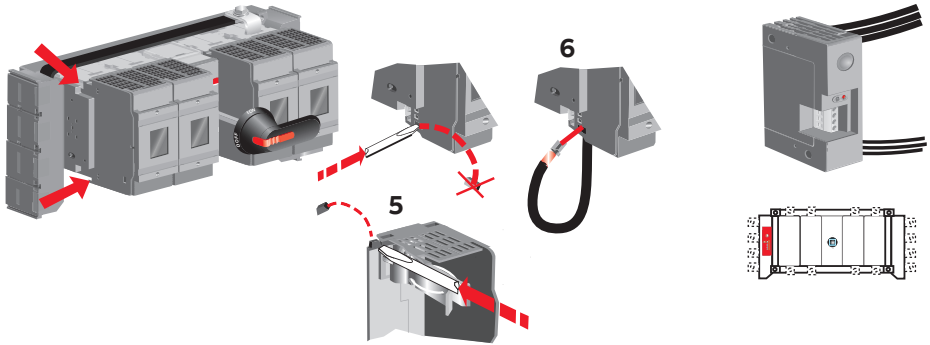


Connections


OZXB17

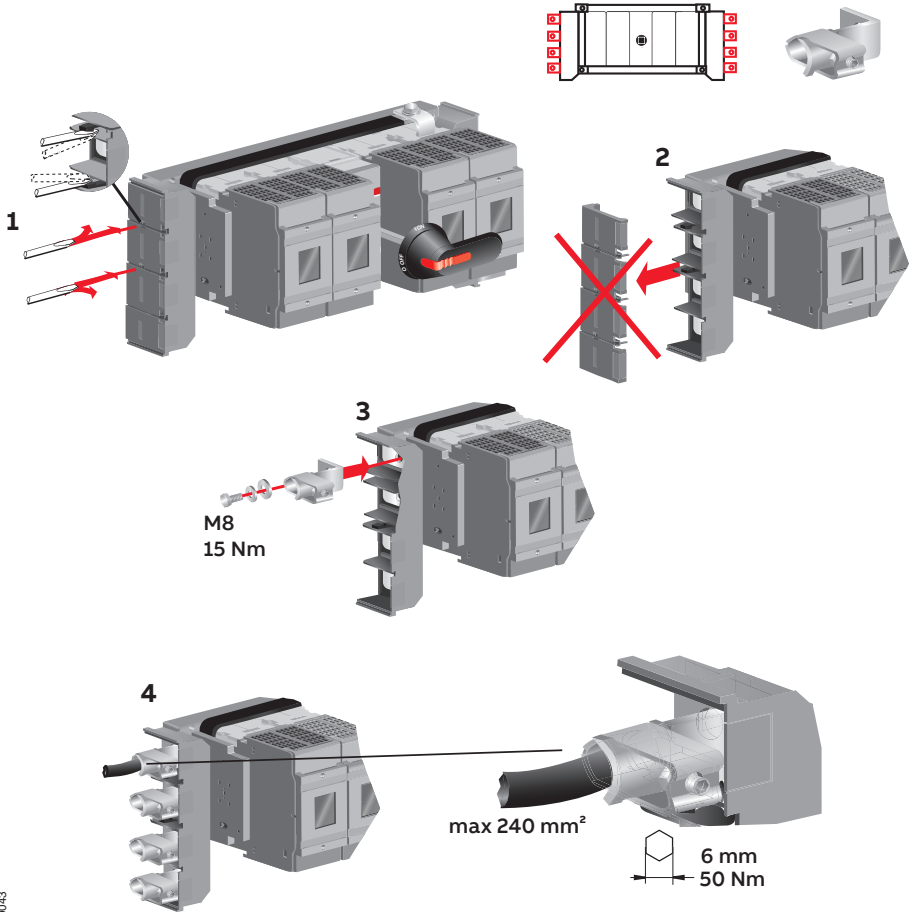

Connections

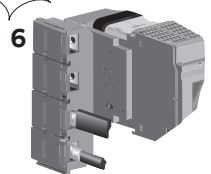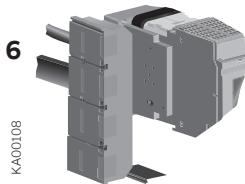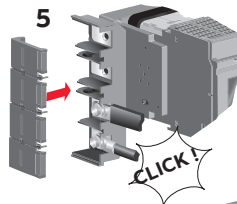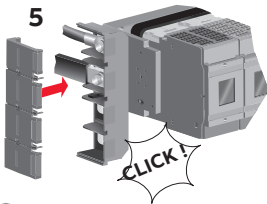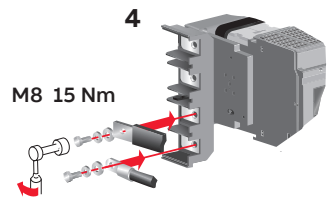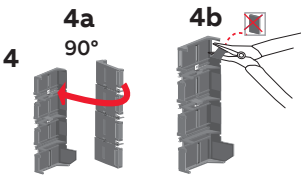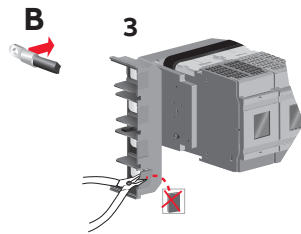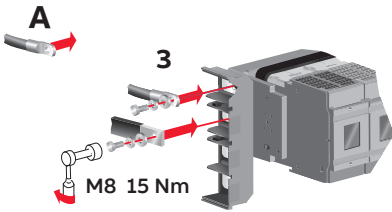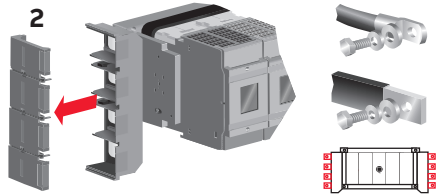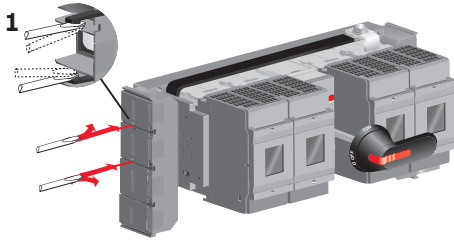


Fuse indicator DPMM_

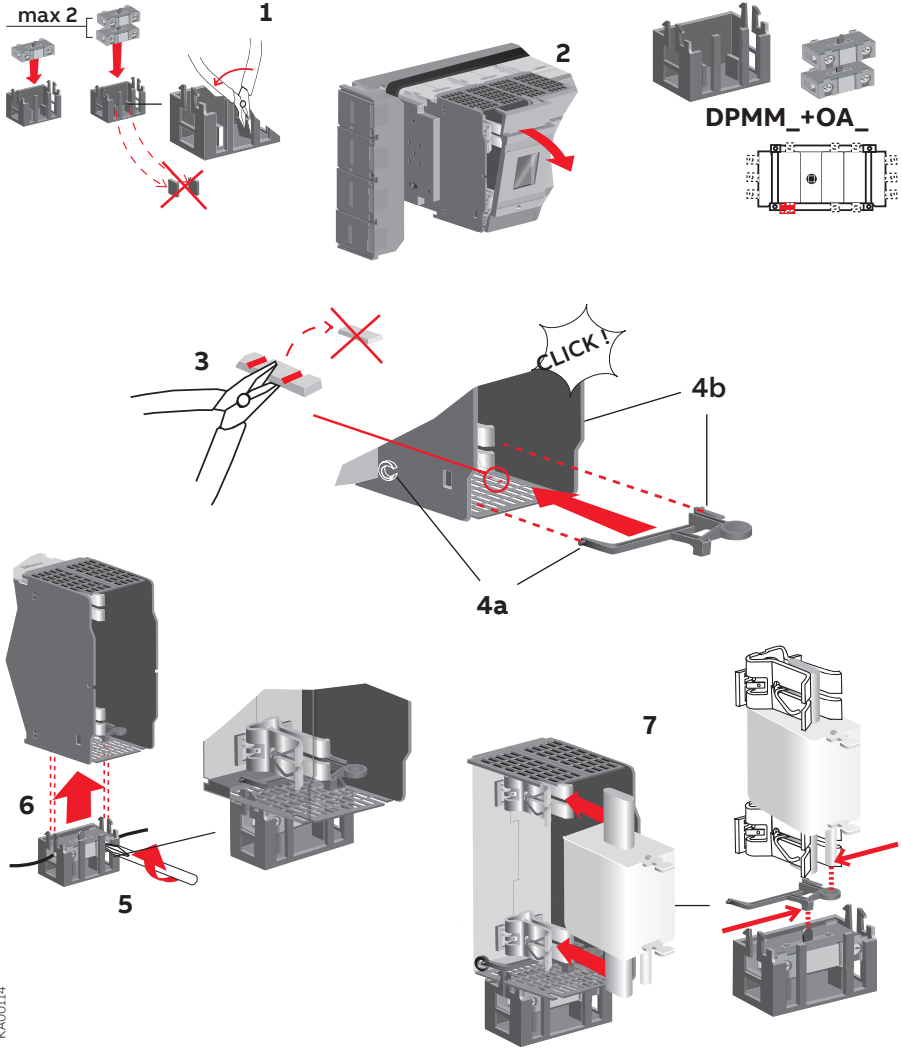

Dimension drawings

OS315-400-LR

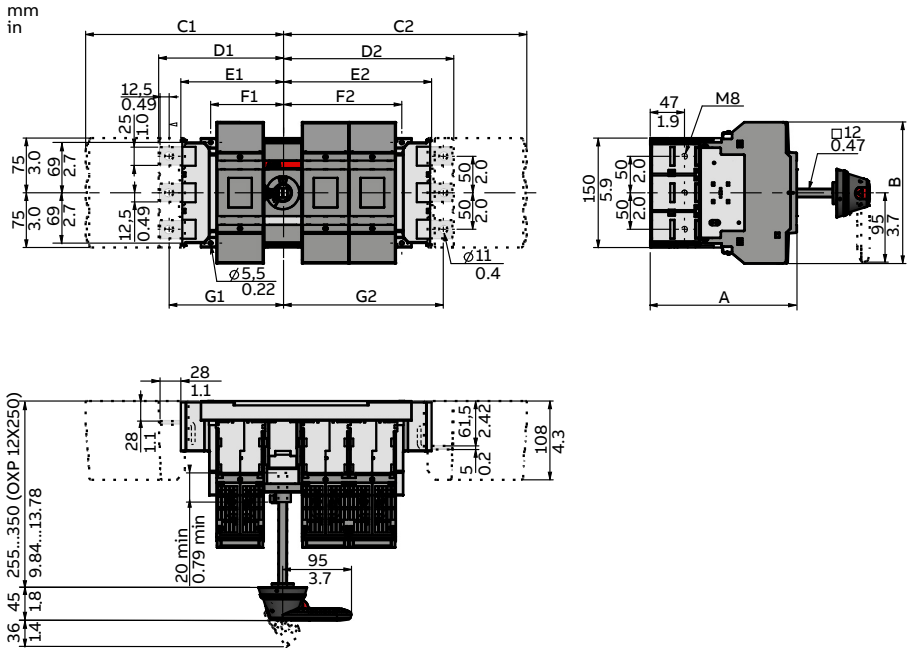

mm/in	OS315B12LR	OS400B12LR	OS400D12LR	OS315B21LR	OS400B21LR	OS400D21LR
A	201/7.91	201/7.91	218/8.58	201/7.91	201/7.91	218/8.58
B	194/7.64	194/7.64	166/6.54	194/7.64	194/7.64	166/6.54
C1	271.5/10.69	271.5/10.69	271.5/10.69	335.5/13.21	335.5/13.21	335.5/13.21
C2	335.5/13.21	335.5/13.21	335.5/13.21	271.5/10.69	271.5/10.69	271.5/10.69
D1	169/6.65	169/6.65	169/6.65	233/9.17	233/9.17	233/9.17
D2	233/9.17	233/9.17	233/9.17	169/6.65	169/6.65	169/6.65
E1	140/5.51	140/5.51	140/5.51	204/8.03	204/8.03	204/8.03
E2	204/8.03	204/8.03	204/8.03	140/5.51	140/5.51	140/5.51
F1	99/3.90	99/3.90	99/3.90	163/6.42	163/6.42	163/6.42
F2	163/6.42	163/6.42	163/6.42	99/3.90	99/3.90	99/3.90
G1	155.5/6.12	155.5/6.12	155.5/6.12	220/8.66	220/8.66	220/8.66
G2	220/8.66	220/8.66	220/8.66	155.5/6.12	155.5/6.12	155.5/6.12



BG	Внимание! Опасно напрежение! Да се монтира само от лице с електротехническа квалификация.
CN	警告！电压危险！只能由专业电工进行安装。
CZ	Varování! Nebezpečné napětí! Montáž smí provádět výhradně elektrotechnik!
DA	Advarsel! Farlig elektrisk spænding! Installation må kun foretages af personer med elektroteknisk ekspertise.
DE	Warnung! Gefährliche Spannung! Installation nur durch elektrotechnische Fachkraft.
EL	Προειδοποίηση! Υψηλή τάση! Η εγκατάσταση πρέπει να γίνεται μόνο από εξειδικευμένους ηλεκτροτεχνικούς.
EN	Warning! Hazardous voltage! Installation by person with electrotechnical expertise only.
ES	¡Advertencia! ¡Tensión peligrosa! La instalación deberá ser realizada únicamente por electricistas especializados.
ET	Hoiatus! Ohtlik pinge. Paigaldada võib ainult elektrotehnika-alane ekspert.
FI	Varoitus! Vaarallinen jännite! Asennuksen voi tehdä vain sähköalan ammattihenkilö.
FR	Avertissement! Tension électrique dangereuse! Installation uniquement par des personnes qualifiées en électrotechnique.
HR	Upozoreenje! Opasan napon! Postavljati smije samo elektrotehnički stručnjak.
HU	Figyelmeztetés! Veszélyes feszültség! Csak elektrotechnikai tapasztalattal rendelkező szakember helyezheti üzembe.
IE	Rabhadh! Voltas guaiseach! Ba chóir do dhuine ag a bhfuil saeolas leictriteicniúil, agus an té sin amháin, é seo a shuiteáil.
IT	Avvertenza! Tensione pericolosa! Fare installare solo da un elettricista qualificato.
LT	Dėmesio! Pavojinga įtampa! Dirbti leidžiama tik elektrotechniko patirties turintiems asmenims.
LV	Uzmanību! Bīstami - elektrība! Montāžas darbus drīkst veikt tikai personas, kurām ir atbilstoša elektrotehnikās zināšanas.
MT	Twissija! Vultaġġ perikoluż! Għandu jiġi installat biss minn persuna b'kompetenza elettroteknika.
NL	Waarschuwing! Gevaarlijke spanning! Mag alleen geïnstalleerd worden door een deskundige elektrotechnicus.
NO	Advarsel! Farlig spenning! Montering skal kun utføres av kvalifiserte personer med elektrokompetanse.
PL	Ostrzeżenie! Niebezpieczne napięcie! Instalacji może dokonać wyłącznie osoba z fachową wiedzą w dziedzinie elektrotechniki.
PT	Aviso! Tensão perigosa! A instalação só deve ser realizada por um electricista especializado.
RO	Avertizare! Tensiune periculoasă! Instalarea trebuie efectuată numai de către o persoană cu experiență în electrotehnică.
RU	Осторожно! Опасное напряжение! Монтаж должен выполняться только специалистом-электриком.
SE	Varning! Farlig spänning! Installation får endast utföras av en elektriker.
SK	Varovanie! Nebezpečné napätie! Montáž môže vykonávať iba skúsený elektrotechnik.
SL	Opozorilo! Nevarna napetost! Vgradnjo lahko opravi le oseba z elektrotehničnim strokovnim znanjem.



Contact us

ABB Oy

Muottitie 2A, 65320

Vaasa, Finland

abb.com/lowvoltage