



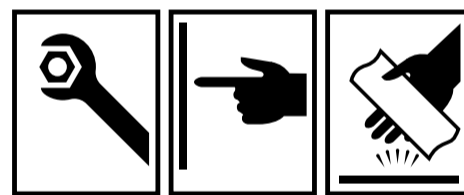

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - B 961716 XX
- 2 - B 960473 XX
- 3 - B 961438 XX
- 4 - B 961374 NU
- 5 - A 861181 NU
- 6 - A 861156 NU
- 7 - A 961640 NU
- 8 - B 960286 XX
- 9 - A 962728 NU
- 10 - B 961749 XX - BD340..
B 961750 XX - BD341..
B 961751 XX - BD345
- 11 - B 961405 XX - BD340..;BD341..
B 961408 XX - BD345..
- 12 - B 960241 XX

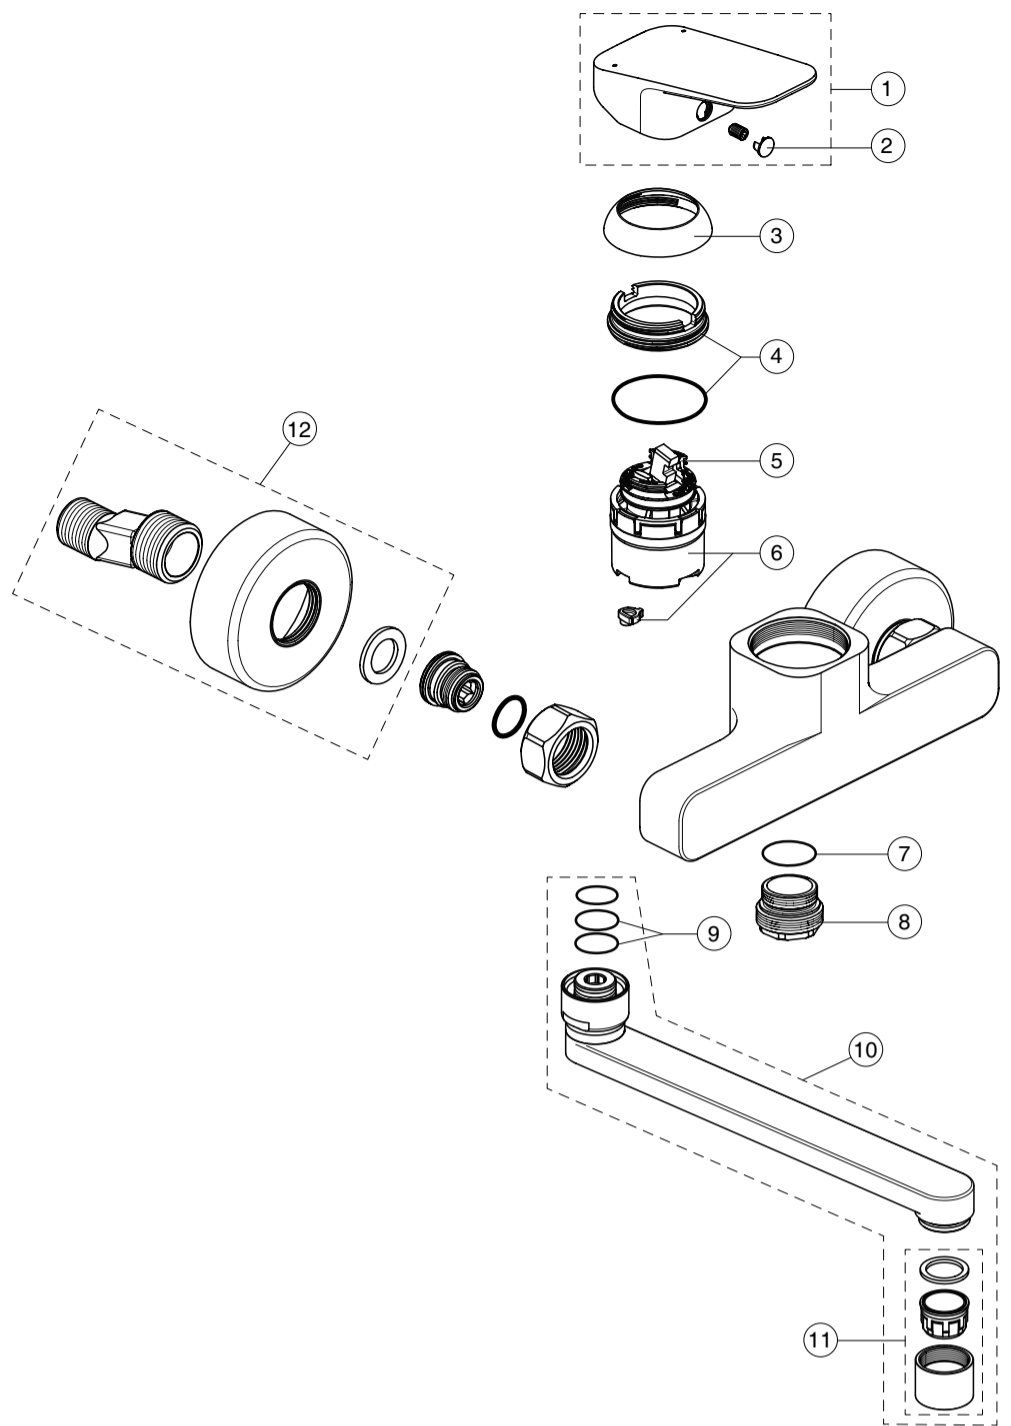


CERAPLAN




Ideal Standard


08.2021 / B565187

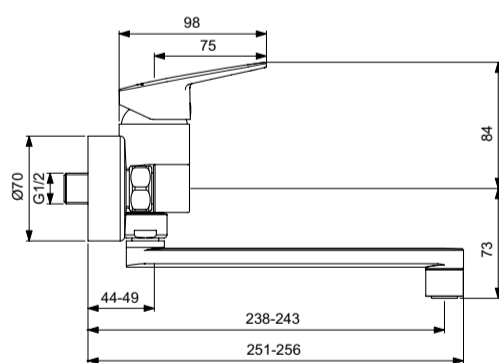

B D345 ..

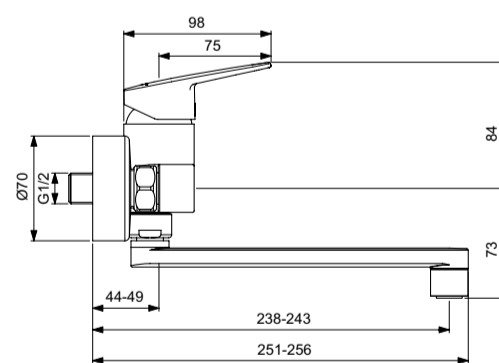

B D340 ..

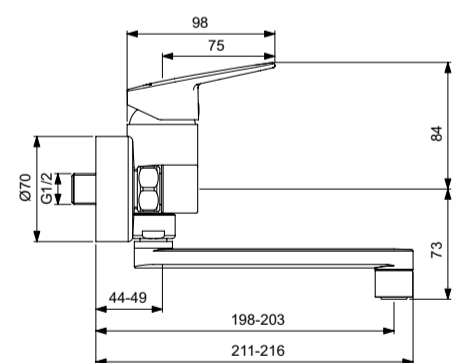

B D341 ..



Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>

