

Operating manual

SWCV 63K1/3
SWCV 63H1/3

Brine/Water heat pump



UK

83026500bUK

Translation of the original operating manual



Table of contents

1	About this operating manual	3
1.1	Validity	3
1.2	Reference documents	3
1.3	Symbols and identification markings	3
1.4	Contact	4
2	Safety	4
2.1	Intended use	4
2.2	Personnel qualifications	4
2.3	Personal protective equipment	4
2.4	Residual risks	5
2.5	Avoid damage to property	5
2.6	Disposal	6
3	Description	7
3.1	Layout	7
3.2	Accessories	8
3.3	Function	8
4	Operation and care	9
4.1	Energy and environmentally aware operation	9
4.2	Maintenance	9
5	Delivery, storage, transport and installation	9
5.1	Scope of supply	9
5.2	Storage	10
5.3	Unpacking and transport	10
5.4	Installation	11
6	Installation and connection	12
6.1	Dismantle the module box	12
6.2	Install the module box	14
6.3	Install the hydraulic connections	14
6.4	Connect the electrical cables	15
6.5	Installing the control panel	16
7	Flushing, filling and venting	17
7.1	Remove the front panel of the module box	17
7.2	Fill, flush and vent heat source	17
7.3	Flush and fill the heating and domestic hot water charging circuit	18
8	Insulate hydraulic connections	19
9	Commissioning	19
10	Maintenance	20
10.1	Basic principles	20
10.2	Maintenance after commissioning	20
10.3	Maintenance as required	20

10.4	Cleaning and flushing the plate heat exchanger	20
10.5	Yearly maintenance	21
11	Faults	21
11.1	Manually unlock the blockage in the circulation pumps	21
12	Dismantling and Disposal	21
12.1	Dismantling	21
12.2	Disposal and Recycling	21
12.3	Removal of the buffer battery	21

Technical data / Scope of supply	22
SWCV 63K(H)1/3	22
Performance curves	23
Dimensional drawings	24
Control unit	25
Wall-mounted bracket	25
Installation plans	26
Hydraulic integration	29
Unit variant H	29
Unit variant K	31
Keys hydraulic integration	32
Terminal diagrams	33
Circuit diagrams	36



1 About this operating manual

This operating manual is part of the unit.

- Before working on or with the unit read the operating manual carefully and follow it for all activities at all times, especially the warnings and safety instructions.
- Keep the operating manual to hand at the unit and hand over to the new owner if the unit changes hands.
- If you have any questions or anything is unclear, ask the local partner of the manufacturer or the factory's customer service.
- Note and follow all reference documents.

1.1 Validity

This operating manual refers solely to the unit identified by the type plate ("Type plate", page 7).

1.2 Reference documents

The following documents contain additional information to this operating manual:

- Planning & design manual, hydraulic integration
- Operating manual of the heating and heat pump controller
- Brief description of the heat pump controller
- Operating manual of the expansion board (accessories)
- Safety instructions for heat pumps with flammable refrigerants (only available via the portal for specialist personnel)

1.3 Symbols and identification markings

Identification of warnings

	Safety-relevant information. Warning of physical injuries.
	Safety-relevant information. Warning of physical injuries. Flammable materials / flammable (primary) refrigerant
	Safety-relevant information. Warning of physical injuries. Danger of fatal injury due to electric current.

Symbol	Meaning
DANGER	Indicates imminent danger resulting in severe injuries or death.
WARNING	Indicates a potentially dangerous situation, which can result in severe injuries or death.
CAUTION	Indicates a potentially dangerous situation, which can result in moderate or minor injuries.
IMPORTANT	Indicates a potentially dangerous situation, which can result in property damage.

Symbols in the document

Symbol	Meaning
	Information for qualified personnel
	Information for the owner/operator
✓	Requirement for action
►	Procedural instructions: Single-step instruction for action
1., 2., 3., ...	Procedural instructions: Numbered step within a multi-step instruction for action. Adhere to the given sequence.
	Additional information, e.g. a tip on making work easier, information on standards
→	Reference to further information elsewhere in the operating manual or in another document
•	Listing
	Secure connections against twisting



1.4 Contact

Addresses for purchasing accessories, for service cases or for answers to questions about the unit and this operating manual can be found on the internet at any time and is kept up-to-date:

- www.alpha-innotec.com

2 Safety

Only use the unit if it is in proper technical condition and only use it as intended, safely and aware of the hazards, and follow this operating manual.

2.1 Intended use

The unit is solely intended for the following functions:

- Heating
- Domestic water heating (optional, with accessories)
- Cooling (optional, with accessories or unit type ...K3)
- ▶ Proper use includes complying with the operating conditions (→ “Technical data / Scope of supply”, from page 22) and the operating manual and noting and following the reference documents.
- ▶ When using the local regulations note: laws, standards, guidelines, directives.
- ▶ The appliance may be operated only within its technical parameters.
- ▶ This appliance is filled with a flammable refrigerant (R290). Changes to the refrigerant filling may only be made by authorised skilled personnel! For safe handling of the refrigerant, the instructions in the separate safety leaflet “Safety instructions for heat pumps with flammable refrigerants” must be observed.

Operation with other refrigerants or in potentially explosive areas is not in accordance with the intended use.

Any other use of the appliance is considered unintended use.

2.2 Personnel qualifications

The operating manuals supplied with the product are intended for all users of the product.

Operator:

The operation of the product via the heating and heat pump control and work on the product which is in-

tended for end customers / operators is suitable for all age groups of persons who are able to understand the activities and the resulting consequences and can carry out the necessary activities.

Children and adults who are not experienced in handling the product and do not understand the necessary activities and the resulting consequences must be instructed and, if necessary, supervised by persons experienced in handling the product and who are responsible for safety.

Children must not play with the product.

Skilled personnel:

The product may only be opened by qualified personnel.

All instructional information in this operating manual is solely directed at qualified, skilled personnel.

Only qualified, skilled personnel is able to carry out the work on the unit safely and correctly. Interference by unqualified personnel can cause life-threatening injuries and damage to property.

- ▶ Ensure that the personnel is familiar with the local regulations, especially those on safe and hazard-aware working.
- ▶ Ensure that the personnel are qualified to handle refrigerant.
 - Work on the refrigerating circuit may only be carried out by qualified personnel with appropriate qualifications for refrigeration system installation.
 - Work on the electrics and electronics may only be carried out by electrical technicians.
 - Any other work on the system may only be carried out by qualified personnel (heating installer, plumbing installer).

During the warranty and guarantee period, servicing and repair work may only be carried out by personnel authorised by the manufacturer.

2.3 Personal protective equipment

During transport and work on the unit, there is a risk of cuts due to the sharp edges of the unit.

- ▶ Wear cut-resistant protective gloves.

During transport and work on the unit, there is a risk of foot injuries.

- ▶ Wear safety shoes.

When working on liquid-conveying lines, there is a risk of injury to the eyes due to leakage of liquids.

- ▶ Wear safety goggles.

When handling antifreeze

- ▶ Wear chemical-resistant protective gloves.



During inadequate ventilation

- ▶ Wear respiratory protection.

2.4 Residual risks

Injuries caused by electric shock

Components in the appliance are energised with life-threatening voltage. Before working on the appliance:

1. Disconnect the appliance from the power supply.
2. Secure the appliance against reconnection.
3. Verify that the installation is dead.
4. Carry out earthing and short-circuiting.
5. Provide protection against adjacent live parts.

Existing earthing connections within housings or on mounting plates must not be changed. If this should nonetheless be necessary in the course of repair or installation:

- ▶ Restore earthing connections to their original state once repair or installation is complete.

Injuries caused by high temperatures

- ▶ Before working on the unit, let it cool down.

Injury due to flammable liquids and potentially explosive atmospheres

Constituents of antifreeze mixtures, e.g. ethanol, methanol, are highly flammable and form an explosive atmosphere:

- ▶ Mix antifreeze in well-ventilated rooms.
- ▶ Note the hazardous substance markings and comply with the relevant safety regulations.

Safety instructions and warning symbols

- ▶ Observe the safety instructions and warning symbols on the packaging and on and in the appliance.
- ▶ Ensure that safety instructions and warning symbols are not damaged, removed or concealed.

Risk of explosion, injury and environmental damage caused by refrigerants

If refrigerant leaks from the appliance, proceed as follows:

1. Switch off the appliance.
2. Ensure that all unauthorised persons leave the danger zone immediately.
3. Remove potential ignition sources from the danger zone and keep them away from the danger zone.
4. Block access to the danger zone for unauthorised persons.
5. Notify authorised customer service.

If there is visible damage to the exterior of the appliance, proceed as follows:

1. Switch off the appliance.
2. Notify authorised customer service.

2.5 Avoid damage to property

Cooling

If the heating surfaces are used for heating and cooling, the control valves must be suitable for heating and cooling.

By cooling with low flow temperatures, condensate can be expected to form on the heat distribution system as the temperature falls below the dew point. If the heat distribution system is not designed for these operating conditions, it must be protected by appropriate safety devices, e.g. dew point monitor (purchasable accessory).

Improper action

EN 12828 must be complied with when planning hot water heating systems. This minimises the risks of stone and corrosion damage and optimises the efficiency of the installation. In particular, the following points should be noted:

- proper planning and commissioning including hydraulic balancing
- Proper planning, design and start-up
- Closed system with regard to corrosion
- Integration of adequately dimensioned pressure retention
- Use of deionised heating water (VE water) or with water corresponding to VDI 2035 only
- Regular servicing and maintenance

If a system is not planned, designed, started up and operated according to the given requirements, there is a risk that the following damage and faults will occur:

- Malfunctions and the failure of components, e.g. pumps, valves



- Internal and external leaks, e.g. from heat exchangers
 - Cross-section reduction and blockages in components, e.g. heat exchanger, pipes, pumps
 - Material fatigue
 - Gas bubbles and gas cushion formation (cavitation)
 - Negative effect on heat transfer, e.g. formation of coatings, deposits, and associated noises, e.g. boiling noises, flow noises
- Note and follow the information in this operating manual for all work on and with the unit.

Unsuitable quality of the fill and make-up water in the heating circuit

The efficiency of the system and the life of the heat generator and the heating components depend decisively on the quality of the heating water.

If the system is filled with untreated drinking water, calcium and magnesium precipitate as mineral scale. Limescale deposits form on the heat transfer surfaces of the heating. The efficiency drops and energy costs rise. In extreme cases the heat exchangers are damaged.

- Comply with the requirements of EN 12828 and fill the system exclusively with fully desalinated heating water (deionised water) or with water that complies with VDI 2035 (low-salt operation of the system).



NOTE

No antifreeze products should be used!

Unsuitable quality of the water in the domestic hot water tank

- Ensure that the electrical conductivity of the domestic water is at least 100 µS/cm and that the drinking water is of drinking water quality.

Unsuitable quality of the water-antifreeze mixture in the heat source

- For operation of the heat source with water or a water-antifreeze mixture, ensure that the water used fulfils the quality specifications of the heating water side.

→ “7 Flushing, filling and venting“, from page 17

Decommissioning/draining the heating

Decommissioning / draining heating

If the system / heat pump is taken out of operation or drained after it has already been filled, you must ensure that the condenser and any existing heat exchangers are completely drained in the event of frost. Residual water in heat exchangers and the condenser can lead to damage to the components.

- Completely drain the system and condenser, and open the vent valves.
- If necessary, blow out with compressed air.

2.6 Disposal

Environmentally hazardous operating materials

Improper disposal of environmentally hazardous operating materials (e.g. refrigerants, compressor oil) harms the environment.

- Collect operating fluids safely.
- Dispose of operating materials in an environmentally friendly manner in accordance with local regulations.
- Refrigerant must not be released into the atmosphere.
- Disposal only by certified specialist companies

Packaging material

- Dispose of packaging material properly.
- Prevent use by children and animals (risk of suffocation).



3 Description


3.1 Layout



NOTE

This section essentially names the components relevant for fulfilling the tasks described in this operating manual.

Housing with unit components

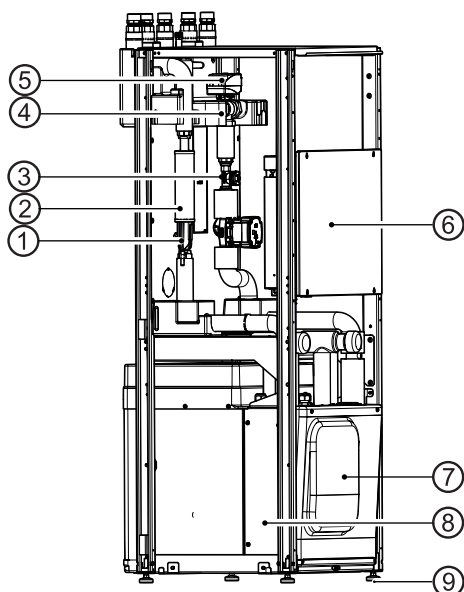

- 1 Heating circuit/hot water circulation pump
Domestic hot water tank
- 2 Heating element
- 3 Volume flow sensor
- 4 3-way changeover valve, heating circuit/
domestic hot water
- 5 Valve motor
- 6 Electrical switch cabinet
- 7 Module box
- 8 Position of type plate
- 9 Height-adjustable foot (4x)

Type plate

Type plates are attached to the following places on the unit:


- on the top, front centre
- left-hand side, on the module box

The type plate contains the following information at the top:

- Unit type, product number
- Serial number, unit index

The type plate also contains an overview of the most important technical data.


Module box – variant without cooling

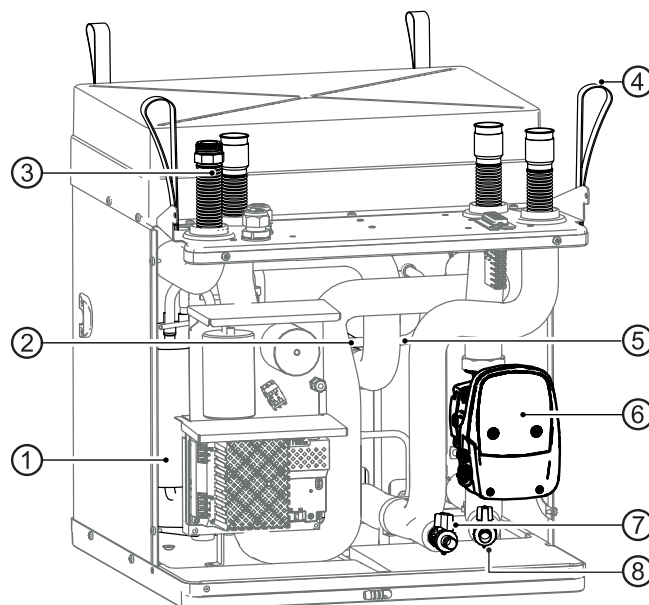

- 1 Compressor
- 2 Condenser
- 3 Vibration isolator (4x)
- 4 Lifting lug (4x)
- 5 Evaporator
- 6 Heat source circulation pump
- 7 Heating filling and drain tap
- 8 Heat source filling and drain tap



Module box – variant with cooling

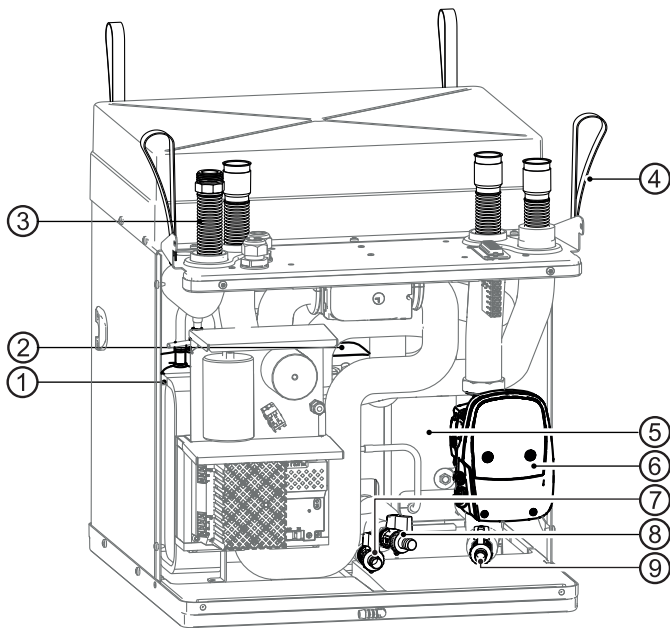


- 1 Compressor
- 2 Condenser
- 3 Vibration isolator (4x)
- 4 Lifting lug (4x)
- 5 Evaporator
- 6 Heat source circulation pump
- 7 Heat source filling and drain tap
- 8 Heating filling and drain tap
- 9 Heat source filling and drain tap



NOTE


The hose connectors are not part of the scope of delivery with all KFE ball valves.

Control unit

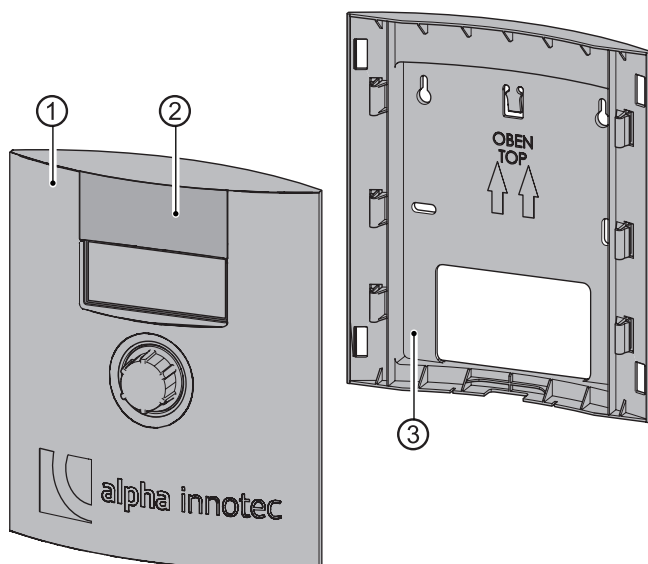

- 1 Control panel
- 2 Push up flap upstream of USB connection (for qualified personnel for software updates and for data logging)
- 3 Wall-mounted bracket (only necessary for wall-mounted installation)

Underside of the control panel

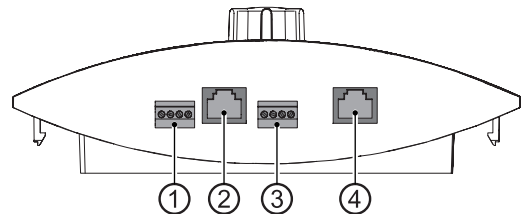

- 1 Connection room control unit RBE RS 485 (accessory)
- 2 RJ45 connection cable to the network link
- 3 Connection to the controller board (not required)
- 4 Connection of Modbus cable to the Modbus distributor (network cable inside the unit)

3.2 Accessories

The following accessories are available for the unit through the manufacturer's local partner:

- Additional masking plate for the front cover panel, if the control is mounted on the wall
- Domestic hot water tank
- Room thermostat for switching the cooling function (if included)
- Dew point monitor for protecting a system with cooling function at low flow temperatures
- Expansion board
- For units without cooling: Pump assemblies for separate storage tank integration (heating circuit)
- Heating circuit safety package
- Heat source circuit safety package
- Air / magnetic sludge separator

3.3 Function

Liquid refrigerant is evaporated (evaporator), the energy for this process is environmental heat and comes from the "ground" heat source (collector, borehole heat exchanger or groundwater via intermediate exchanger). The gaseous refrigerant is compressed (compressor), this causes the pressure to rise and therefore the temperature too. The gaseous refrigerant with high temperature is liquefied (condenser).



Here the high temperature is discharged to the heating water and is used in the heating circuit. The liquid refrigerant with high pressure and high temperature is expanded (expansion valve). The pressure and temperature drop and the process begins again.

Due to the integrated changeover valve and the integrated energy efficiency circulation pump the heated heating water can be used for charging the domestic hot water or for heating the building. The temperatures required and use are controlled by the heat pump controller. Reheating, drying out screed or increasing the domestic hot water temperature can be carried out using the integrated electric heating element, which is activated by the heat pump controller as and when necessary.

The integrated vibration isolators for the heating circuit and heat source prevent structure-borne sound and vibrations from being transferred onto the fixed pipes and therefore into the building.

Cooling

Cooling is integrated in type C units. The following options are possible for units with cooling function (→ operating manual of the heating and heat pump controller):

- Passive cooling (without compressor)
- Control of the cooling function via the heating and heat pump controller
- Automatic switching between heating and cooling mode

Network connection on the control

The control can be connected to a computer or network via a network cable. The heating and heat pump controller can then be controlled from the computer or from the network.

4 Operation and care



NOTE

The unit is operated via the control of the heating and heat pump controller (→ operating manual of the heating and heat pump controller).

4.1 Energy and environmentally aware operation

The generally accepted requirements for energy-aware and environmentally-aware operation of a

heating system also apply to use of a brine/water heat pump. The most important measures include:

- No unnecessarily high flow temperature
- No unnecessarily high domestic hot water temperature (note and follow local regulations)
- Do not open windows with gap /tilt open (continuous ventilation), but instead open wide for a short time (purge ventilation)

4.2 Maintenance

Wipe down the outside of the unit only using a damp cloth or cloth with mild cleaning product (washing-up liquid, neutral cleaning product). Do not use any harsh, abrasive, acid or chlorine-based cleaning products.

5 Delivery, storage, transport and installation

IMPORTANT

Damage to the housing and the unit components due to heavy objects.

- ▶ Do not place any objects heavier than 30 kg on the device.

5.1 Scope of supply



NOTE

On delivery the accessories are enclosed in two packages on the housing.

- ▶ Check delivery immediately after receipt for outwardly visible damage and completeness.
- ▶ Notify supplier of any defects immediately.

The separate pack included contains:

- Control unit, consisting of the control, wall bracket and masking plate
- 6-mm anchors with screws (2x each) for wall-mounting the control unit
- Safety valve, outdoor sensor
- Compression fittings Ø28-Rp 1" (5x)
- Ball valves with filter 1" (2x) Must be installed at the heating water inlets of the appliance! Observe the flow direction!
- Replacement material after dismantling the module box:
 - Insulation hoses (4x)
 - Cable ties (8x)
 - O-rings (6x), Flat seal (1x)



- Screws for the strain reliefs in the electrical switch box

5.2 Storage

WARNING

The unit may only be stored in rooms that do not contain ignition sources. Do not drill or torch! Follow local rules!

- ▶ Where possible do not unpack the unit until directly before installation.
- ▶ Store unit protected against:
 - Moisture/damp
 - Frost
 - Dust and dirt

5.3 Unpacking and transport



NOTE

The module box can be removed for transport (→ “Dismantle the module box”, page 12).

Notes on safe transport

The device and the module box are heavy (→ “Technical data / Scope of supply”, from page 22). There is a risk of injuries or damage to property if the housing with the unit components falls or overturns or if the module box falls.

- ▶ The device and module box must be transported and installed by several persons.
- ▶ Secure the device during transport. Carry the module box by the carrying lugs.

The hydraulic connections are not designed for mechanical loads.

- ▶ Do not lift or transport the unit by the hydraulic connections.

If the module box is tilted by more than 45°, compressor oil runs into the cooling circuit.

- ▶ Do not tilt the unit with installed module box by more than 45°.

Transport the unit preferably with a pallet truck, alternatively with a handcart.

Transport with a pallet truck

- ▶ Transport the unit to the place of installation packaged and secured on a wooden pallet.

Unpacking



NOTE

If the unit is not transported by a pallet truck: Do not lift off the pallet until after unpacking and dismantling the housing panels.


1. Remove plastic films. Ensure that you do not damage the unit.
2. Dispose of the mounting bracket, transport and packaging material in an environmentally friendly way according to local regulations.
3. Remove the film from the plastic element of the front panel in the place of installation.

Dismantle housing panels for transport with handcart or carrying the unit

- ✓ Unit is unpacked (→ “Unpacking”, page 10).

To avoid damage to the housing panels:

1. Undo 2 screws at the bottom of the front panel. Lift up the front panel and put down in safe place.
2. Undo 3 screws at the right panel. Lift up the side panel and put down in safe place.
3. Undo 3 screws at the left panel. Lift up the side panel and put down in safe place.

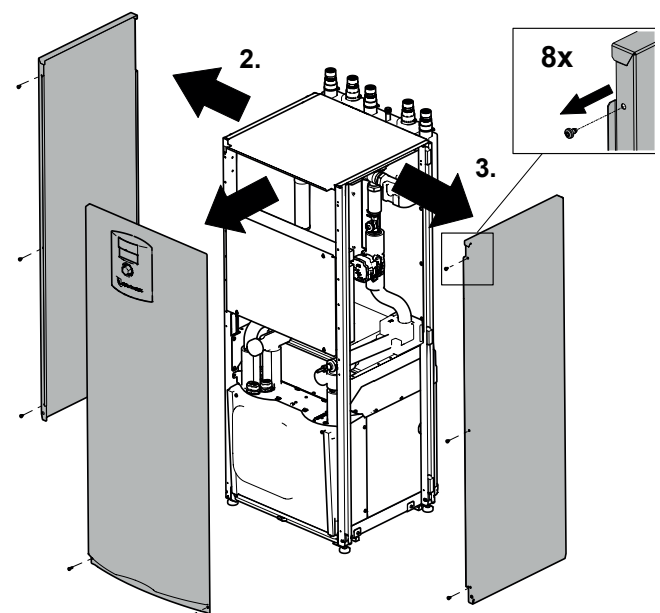

Transport with a handcart




NOTE

- If transporting with a handcart the module box must be pushed in.
- The following figure with the handcart shows transporting the unit on its left-hand side; it can also be transported on its right-hand side.
- Secure the unit against slipping or tilting from the handcart
- Do not exceed 45° tilt angle.
- Do not expose the unit to strong shocks.
- Comply with local safety regulations during transport.

✓ Housing panels are dismantled.

To avoid damage: On a handcart, load the unit on its side only.

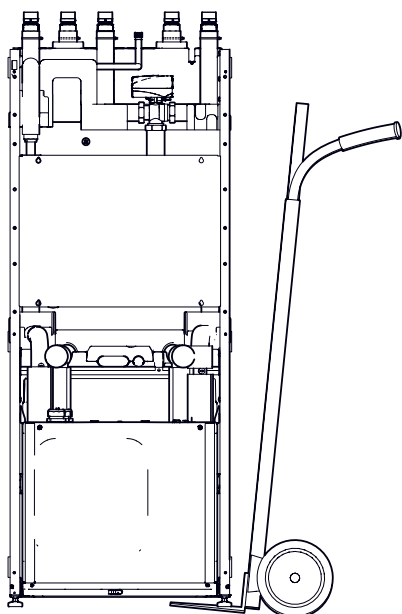

Transport unit on the handcart.

Carrying the unit

✓ Housing panels are dismantled.

1. Dismantle module box (→ “Dismantle the module box”, page 12) and carry it by the support lugs to the place of installation.
2. Carry the unit in a position as upright as possible.

5.4 Installation

Installation room and space requirements



NOTE

Note and follow the local regulations and standards regarding the installation room and space requirements. The more refrigerant in a heat pump, the bigger the room must be where the unit is installed. If there is a leak in a too small room there would be a forming of a flammable gas-air mixture. A free volume of 1.7 m³ must be maintained in the set-up room. The amount of refrigerant is shown on the type-plate of the appliance.



NOTE

If several heat pumps of the same type are installed only one heat pump need to be taken into account. If several heat pumps of different types are installed, only the heat pump with the largest refrigerant volume needs to be taken into account.

- ✓ Minimum volume corresponds to the requirements for the refrigerant used.
- ✓ Installation inside the building only.
- ✓ Installation room is dry and frost-free.
- ✓ Clearance dimensions are met (→ “Installation plans”, from page 26).
- ✓ The surface/floor is suitable for installation of the unit:
 - level and horizontal
 - load-bearing capacity for the unit's weight


Aligning the unit

- Align the unit horizontally and stably in the installation site using the height-adjustable feet and a spanner size SW 13. Adjustment range: 25 mm.

Remove safety device

The transport lock of the circulation pump in the module box must be removed before installation.

- ✓ Unit is safely disconnected from the power supply and protected against being switched back on again.
1. Remove the front panel of the module box (→ “7.1 Remove the front panel of the module box”, page 17).
 2. Remove styrofoam safety device.

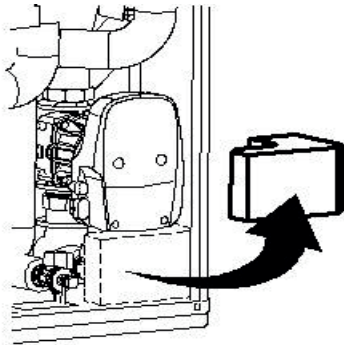

3. Screw the front panel of the module box.

6 Installation and connection

6.1 Dismantle the module box

IMPORTANT

If the module box is tilted by more than 45°, compressor oil runs into the cooling circuit.

- Do not tilt the module box by more than 45°.



NOTE

- If necessary the module box can be dismantled for easier transport of the unit or for service reasons.
- Steps 1 to 3 are only required if the module box is connected and filled.

- ✓ Unit is safely disconnected from the power supply and protected against being switched back on again.


1. Remove the front panel of the module box (→ "Dismantle housing panels for transport with handcart or carrying the unit", page 10).
2. Close shut-off valves to the heating circuit.
3. Drain the unit via the filling and drain tap of the heating.




NOTE

The hose connectors are not part of the scope of delivery with all KFE ball valves.

- Unit **without** cooling:

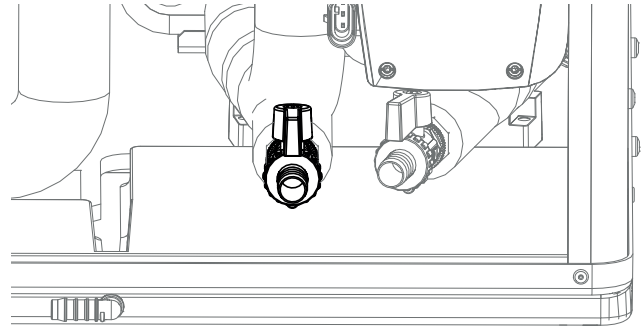


- Unit **with** cooling:

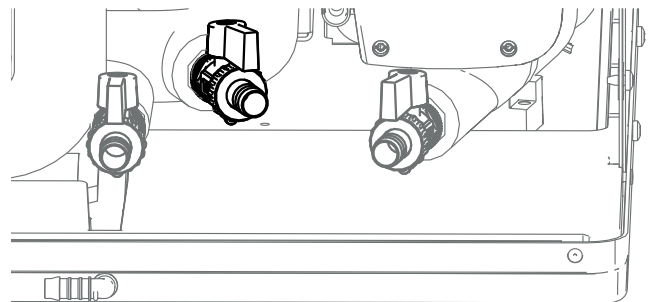


4. Disconnect the electrical connections:


- Disconnect 2 white connectors (①) at the bottom of the electrical control cabinet. To do this, release the lugs by pressing on the sides of the connectors
- Pull out the black rectangular connector (②) at the top of the module box

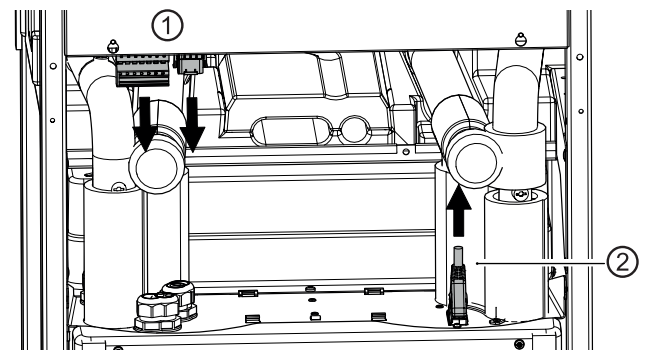

5. Remove the insulation on the heat source and the heating circuit connections.

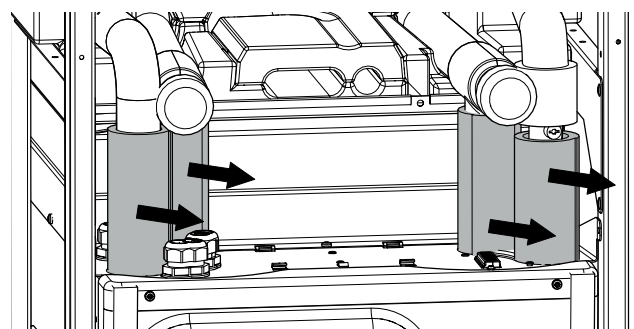


6. Use spanner to close the barriers to the heating circuit and to the heat source (behind the covers).

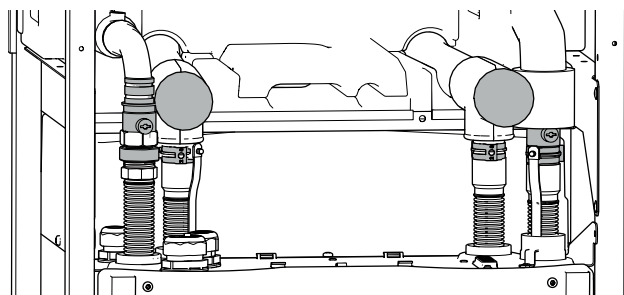


7. Drain the unit via the filling and drain tap of the heat source.


► Unit **without** cooling:

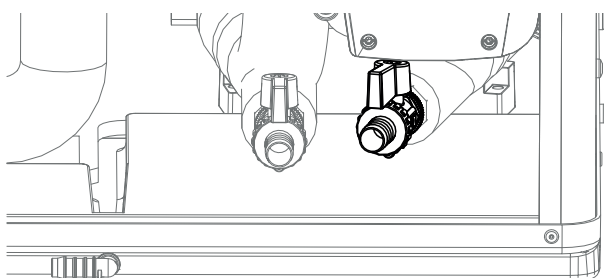


► Unit **with** cooling:

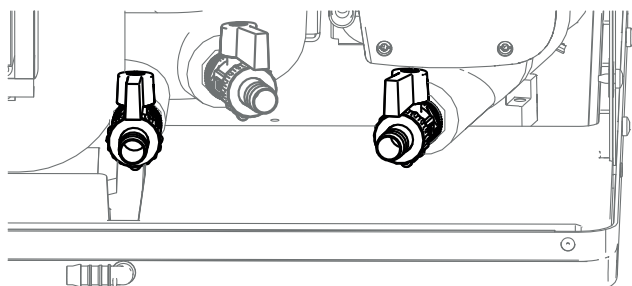


8. Remove 3 clips on the hydraulic connections.
(2 clips with riveted grounding tape.)

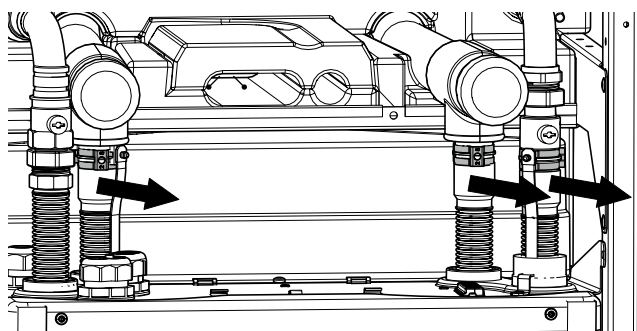


9. Use spanner size SW 37 to unscrew the heating flow.

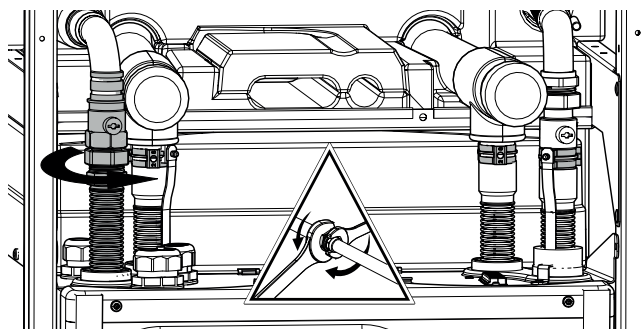


10. Disconnect the hydraulic connections; to do this, push the pipes apart as far as necessary.

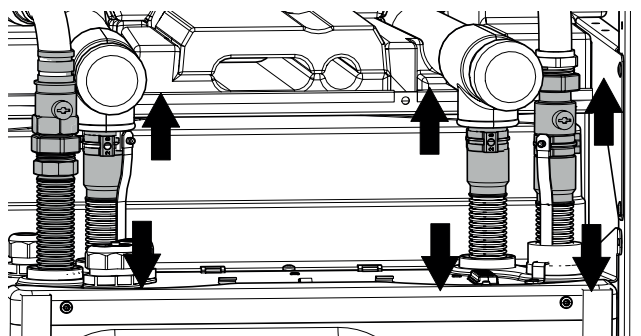


11. Remove the 2 side retaining screws.

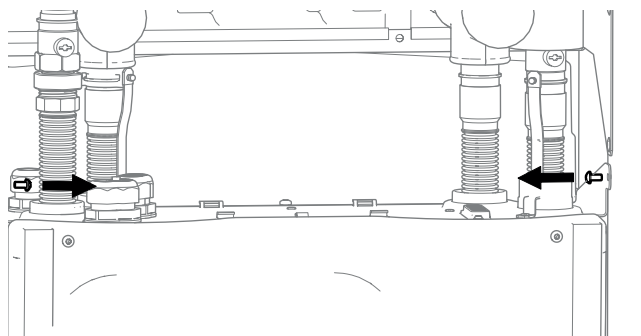

12. To protect the floor and move the module box (③) more easily: place boards (④) under it, e.g. from the packaging material.

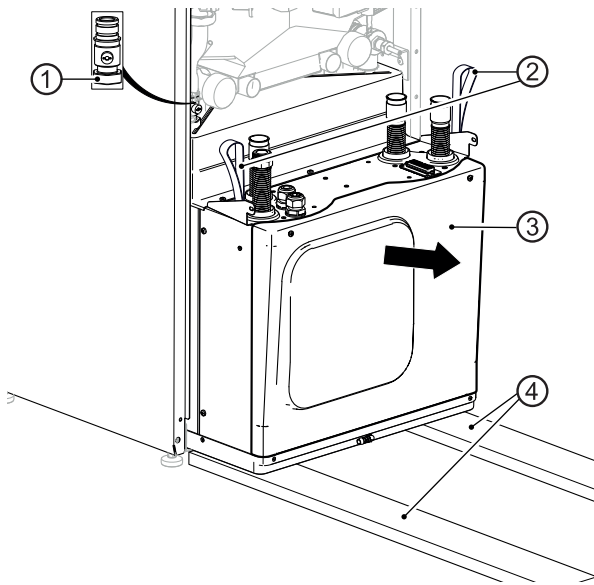

13. Lift and hold nut (①) on the heating flow.
14. Slowly and carefully pull out the module box by the carrying lugs (②). Ensure that none of the pipes are damaged
15. Pull out the module box completely and place it on the boards.

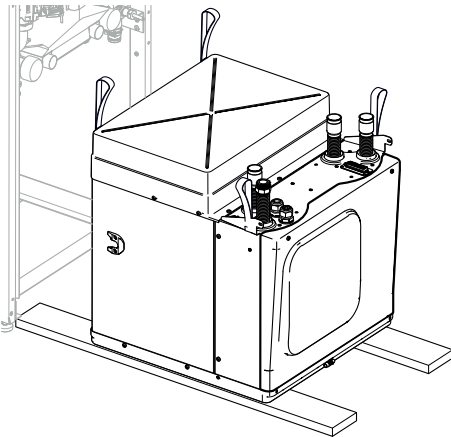

6.2 Install the module box

1. Carefully insert the module box into the bottom of the device and push it in slowly and carefully.
 - Lift and hold nut on the heating flow
 - Lift up pipes so that they do not get damaged
2. Attach the two side retaining screws.
3. Connect the hydraulic connections. (Reattach the three clips, two of them with grounding tape) At the same time, replace O-rings on the heat pump connections (→ separate pack included).
4. Reopen barriers to the heating circuit and the heat source.

5. Perform pressure test and insulate pipes with the enclosed insulation hoses (→ separate pack).
6. Connect the electrical cables:
 - Plug in 2 white connectors at the bottom of the electrical control cabinet. Ensure that the connectors move easily and the lugs latch into position
 - Plug in the black rectangular connector at the top of the module box

6.3 Install the hydraulic connections



NOTE

The safety valve that is integrated or included in delivery has a tolerance of plus / minus 10% for the set pressure. If local regulations, laws, standards or directives require a smaller tolerance range, the safety valve must be replaced on site with a safety valve that meets the requirements.

IMPORTANT

Avoid open heating systems and / or heating systems that are not oxygen diffusion-tight. If this is not possible, a system separation must be installed.

Depending on the dimensioning of the heat exchanger and the additionally required circulation pump, the system separation worsens the energy efficiency of the system.

IMPORTANT

Dirt and deposits in the (existing) hydraulic system can cause damage to the heat pump.

- Ensure that a air / magnetic sludge separator is installed in the heating circuit.
- Ensure that the ball valves with dirt filters (mesh size 0.7 mm) from the accessory pack are installed as close as possible to the heating water inlet (return).
- Rinse the hydraulic system thoroughly prior to establishing the hydraulic connection of the heat pump.



NOTE

The heat source can be connected from the top, right or left.

If the heat source will be connected at the side, the cables can be cut to a residual length of at least 250 mm



from the edge of the device (→ “Dimensional drawings”, page 24).

IMPORTANT

Damage to the copper pipes due to unacceptable loading!

- ▶ Secure all connections against twisting.
- ✓ The heat source system has been installed in accordance with the specifications (→ planning & design manual, dimensioned diagrams, installation plans).
- ✓ Cross-sections and lengths of the pipes for the heating circuit and heat source are dimensioned adequately.
- ✓ The residual head of the circulation pumps produces at least the minimum throughput required for the unit type (→ “Installation plans”, from page 26).
- ✓ The cables for the heat source and the heating are fixed to the wall or ceiling via a fixed point.

Install the compression fittings and ball valves

IMPORTANT

Leaks or fracture of the union nut due to excessive force!

1. Check pipe ends for scratches, dirt and deformation.
2. Check proper position of the clamping ring on the fitting.
3. Push the pipe through the clamping ring up to the limit stop in the fitting.
4. Tighten the union nut hand-tight and attach waterproof marking.
5. Tighten union nut with $\frac{3}{4}$ rotation.
6. Check connection for leaks.

If the connection leaks:

1. Undo connection and check pipe for damage.
2. Tighten the union nut hand-tight and retighten with the open-ended spanner with $\frac{1}{8}$ to $\frac{1}{4}$ turn, as the clamping ring is already in a clamping position.

Connect the unit to the heat source and heating circuit

1. Install shut-off devices at the connections of the heat source and heating circuit.

2. For units with 14 kW capacity and higher: Install the shut-off devices at the heat source.
3. Insert the vent at the highest point of the heat source and the heating circuit.
4. Recommendation: Fit a dirt filter with mesh size 0.9 mm onto the heat source inlet.
5. Ensure that the operating overpressures (→ “Technical data / Scope of supply”, from page 22) are not exceeded.

6.4 Connect the electrical cables

IMPORTANT

Irreparable damage to the compressor due to wrong rotating field (only applies to units with 400V connection).

- ▶ Ensure that there is a clockwise rotating field for the compressor load infeed.

Basic information on the electrical connection



NOTE

Ensure that the unit is supplied with electricity at all times. After working inside the unit and attaching the unit panelling, switch the power supply back on immediately.

- The specifications of the local energy supply company may apply to electrical connections
- Fit the power supply for the heat pump with an all-pole miniature circuit-breaker with at least 3 mm contact spacing (per IEC 60947-2)
- Note the level of the tripping current (→ “Technical data / Scope of supply”, from page 22)
- Comply with the electromagnetic compatibility regulations (EMC regulations)
- Lay unshielded power supply cables and shielded cables (bus cable) sufficiently far apart (> 100 mm)
- Maximum cable length: 30 m.
Use at least a 4 x 0.5mm² cable (shielded) as the connecting cable

Special voltages

The control box contains an accessory kit for converting the electrical system to a 3-phase, 230 V three-phase mains supply.

→ “Terminal diagrams”, page 33

**NOTE**


Check the local mains supply type!

**NOTE**

Installation must be carried out by qualified electricians only!

Pull in the cables and conductors and make the connections


1. Strip the sheathing of all cables to the external loads before laying in the cable duct of the control box.
2. Open electrical switch box:
 - Undo 4 screws at the top of the cover panel of the electrical control box
 - Unhook cover panel

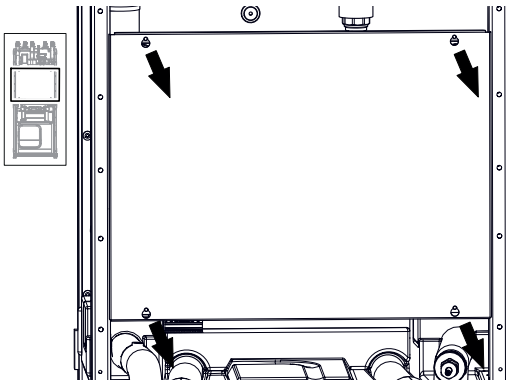

3. Route control/sensor cables and unit supply cables into the housing from the rear.
4. Feed the cables from below through the cable openings into the switch box.
5. Connect the cables to the respective terminals (→ "Installation plans", from page 26).

Operate the controller via a PC /network

1. During installation lay a shielded network cable (category 6) through the unit.
2. Plug the RJ-45 connector of the network cable into the socket of the control unit (①).

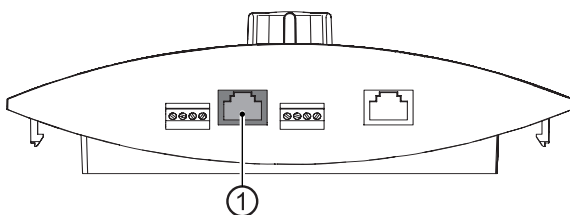**NOTE**

The network cable can be retrofitted at any time.


6.5 Installing the control panel

**NOTE**


The control can be inserted in a recess in the front panel of the unit or can be installed on the wall.

Insert the control in the unit and connect

1. If required: Remove masking plate from the slot. To do this, dismantle the front panel (→ "Dismantle housing panels for transport with handcart or carrying the unit", page 10), press the lugs together and push out of the openings.
2. Remove film from the plastic element of the front panel.
3. Position the control in the recess in the front unit panel.

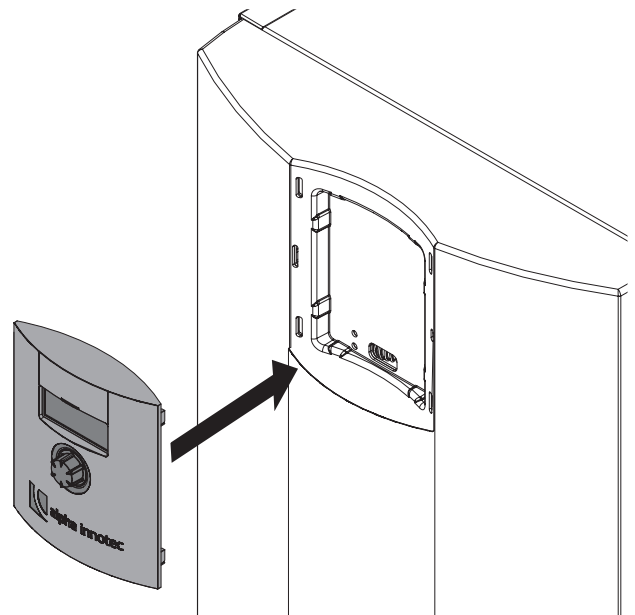

4. Wind the cable up or down and secure it so that the front panel can be removed and placed to the side of the unit. Do not cut the cable ties for strain relief of the connection cable at the electric control box.
 - connection cable approx. 1.1 m from the fixing of the strain relief at the electrical control box
 - All other cables approx. 1.2 m
5. Use cable ties (→ separate pack) to fix the LIN bus cable to a web of the masking plate around 20 cm in front of the connector (strain relief).

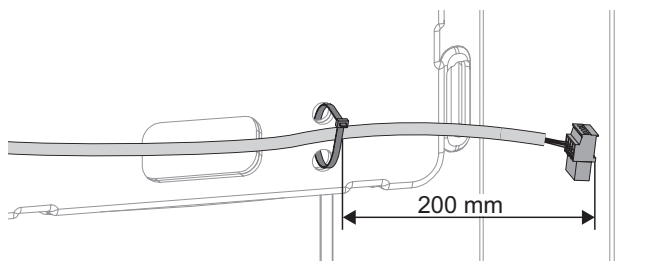


6. Push the cable through the opening in the front panel of the unit from below and into the control.
7. Press the lugs of the control into the openings in the front panel of the unit.

Mount the control on the wall and connect

IMPORTANT

Mount the wall bracket with control panel **only vertically** on a wall!

1. Release the rear bracket from the control.
2. If visually unattractive: Cut off the lugs on the rear of the control (are only needed to insert in the front panel).
3. Mark 2 drillholes (→ Dimensional drawing “Wall-mounted bracket”, page 25).
4. If cables are fed in from underneath: Break out the web at the bottom in the middle of the wall bracket. Use side-cutters if necessary.
5. Fix the wall-mounted bracket (②) with 2 wall plugs (①) and 2 screws (③).

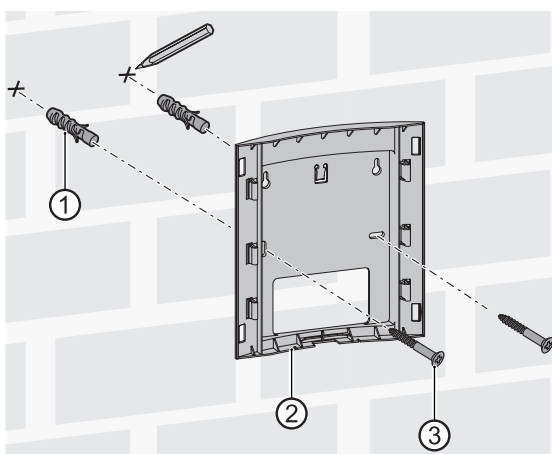


6. Feed in the cables from the wall (e.g. in-wall box) or from below.
7. Route the connection cable from the top right-hand side at the rear from the heat pump and plug into the control at the bottom.
8. Push the control onto the wall-mounted bracket.

9. Put on the masking plate if applicable (accessories).

7 Flushing, filling and venting

7.1 Remove the front panel of the module box

- Unscrew the front panel of the module box.

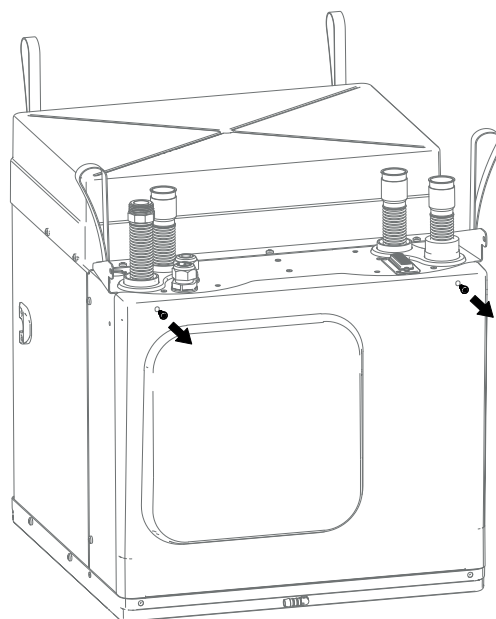

7.2 Fill, flush and vent heat source

Frost protection must be provided in the heat source. Below are the approved antifreeze agents based on:

- Monopropylene glycol
- Monoethylene glycol
- Ethanol
- Methanol

Antifreeze agents based on salt are not permitted.

- When selecting the antifreeze agent, it must be ensured that it is compatible with the following materials:
- Brass (CW602N and CW614N)
 - Stainless steel (AISI304, AISI316 and AISI316L)
 - Copper (Cu-DHP CW024A - EN1652)
 - Cast iron (EN-GJL-150)
 - Composite (PES 30% GF)
 - EPDM (ethylene propylene diene rubber)



- PTFE (Polytetrafluoroethylene)
- FKM (fluororubber)

If an antifreeze agent is not compatible with one of these materials, it may not be used.

Antifreeze agents from our product range are safe with regard to our units and the accessories purchased from us and guarantee compatibility with the listed materials.

- ▶ Pressure losses must be observed when selecting the antifreeze agent.
- ▶ The antifreeze agent that is selected and used must comply with the specifications and requirements of the local authorities and water management authorities.



WARNING

Methanol and ethanol can give off flammable and explosive gases. Therefore, the safety provisions for the anti-freeze must be noted and followed!

The hazard markings of all anti-freezes used must be noted and the relevant safety provisions must be followed.

- ▶ Make sure that the mixing ratio of water and antifreeze agent meets the required minimum antifreeze temperature in the heat source.
- “Technical data / Scope of supply“, from page 22
- ▶ For operation of the heat source with water-antifreeze mixture, ensure that the water used fulfils the quality specifications of the heating water side.
- “Heating water quality“, from page 18
- ✓ Drain pipe of the safety valve is connected.
 - ✓ Room is ventilated.
1. Flush the heat source system thoroughly.
 2. Mix antifreeze with water thoroughly with the required ratio, before adding to the heat source.
 3. Check the concentration of the water-antifreeze mixture.
 4. Fill the heat source with the water-antifreeze mixture.
Fill until the system is air-free.
 5. Fill the unit via the ball valves in the module box.

7.3 Flush and fill the heating and domestic hot water charging circuit

Heating water quality



NOTE

For detailed information refer, among other things, to the VDI Guidelines 2035 “Vermeidung von Schäden in Warmwasserheizanlagen” (preventing damage in hot water heating systems).


1. Ensure that the pH-value of the heating water is between 8.2 – 10, for aluminium materials between 8.2 – 9.
Ideally, the pH value should already be in the required range after filling. After 6 weeks at the latest, it must have adjusted to the required range.
2. Ensure that the electrical conductivity is $< 100 \mu\text{S/cm}$.



NOTE

If the required water quality is not achieved, consult a company specialising in the treatment of heating water.


3. Fill the system with deionised heating water (VE water) or with water corresponding to the VDI 2035 norm only (low-salt operation of the system).
Advantages of low-salt operation:
 - Low corrosion-promoting properties
 - No formation of mineral scale
 - Ideal for closed heating circuits
 4. Keep a system log for hot water heating systems in which relevant planning data and the water quality are entered (VDI 2035).
- ✓ Drain pipe of the safety valve is connected.
 - ✓ The front panel of the module box is unscrewed.
- ▶ Ensure that the set pressure of the safety valve is not exceeded.
1. Pull the U-clip (②) off the floor of the valve motor (①).
 2. Pull the valve motor carefully upwards and off the 3-way changeover valve (③).

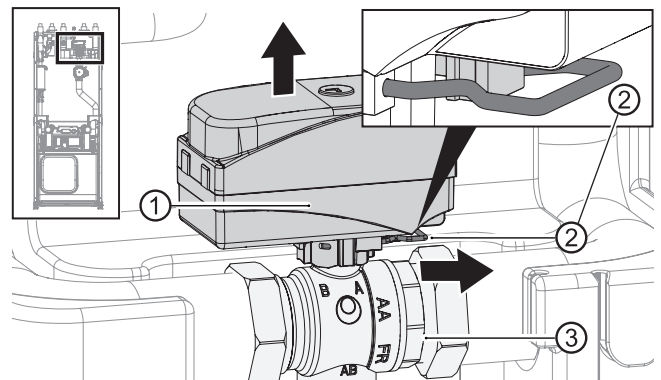


3. Turn the spindle of the 3-way changeover valve so that the rounded side of the spindle points in the



direction of marking A of the connections of the 3-way changeover valve.

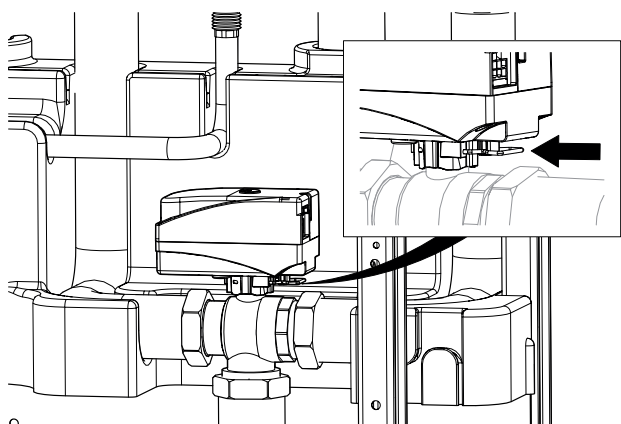

4. Flush the domestic hot water charging circuit for approx. 1 minute.
5. Turn the spindle so that the rounded side of the spindle points in the direction of marking B of the connections of the 3-way changeover valve.
6. Flush heating circuit thoroughly, until no more air is discharged.
7. Position the valve motor (①) on the 3-way changeover valve (③).
8. Insert the U-clip (②) into the floor of the valve motor.

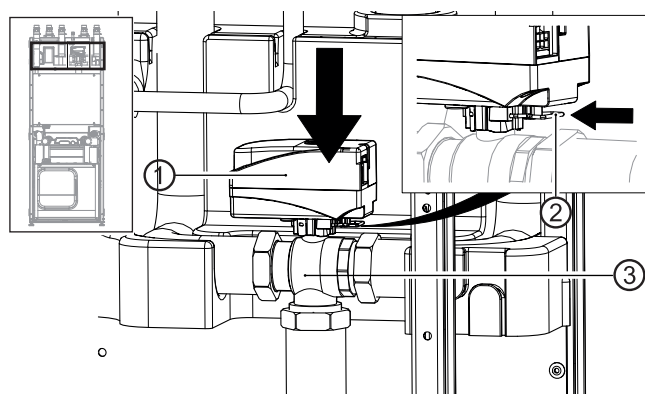

9. Ensure that the U-clip has latched into position correctly:
 - ✓ Valve motor sits securely on the 3-way changeover valve.
 - ✓ Both prongs of the U-clip sit on the lug.
 - ✓ The tips of the U-clip are visible by approx. 2 mm (not significantly more!).
10. Screw the front panel of the module box.

8 Insulate hydraulic connections

1. Insulate heating circuit and heat source according to the local regulations.
2. Open shut-off devices.
3. Perform a pressure test and check for leaks.
4. Insulate the internal piping of the module box with the insulation material from the separate pack included.
5. Insulate external piping on site.
6. Insulate all connections, fittings and pipes.
7. Insulate heat source so that it is vapour-diffusion tight.
8. Insulate the heating circuit of units with cooling vapour-diffusion tight too.
9. In units with cooling and capacity 14 kW and higher, insulate the venting valve at the cold heat exchanger too so that it is vapour-tight. To do this, glue the insulation strips on top of each other (→ separate pack)

9 Commissioning

NOTE

The first filling and initial startup of the domestic hot water tank must be carried out by qualified personnel.

- ✓ Relevant planning & design data of the system is documented in full.
- ✓ The competent energy supplier has been notified of operation of the heat pump system.
- ✓ System is air-free.
- ✓ Installation check using the rough checklist has been completed successfully.
- ✓ Clockwise rotating field is present for the load supply at the compressor (only applies to units with 400V connection)
- ✓ Device is installed and mounted according to this operating manual
- ✓ The electrical installation has been carried out properly in accordance with this operating manual and local regulations
- ✓ The power supply for the heat pump is equipped with an all-pole circuit-breaker with at least 3 mm contact spacing (IEC 60947-2)
- ✓ The level of the tripping current is compliant
- ✓ Heating circuit is flushed and vented



- ✓ Frost protection of the heat source meets the requirements
→ “Technical data / Scope of supply“, from page 22
 - ✓ All shut-off devices of the heating circuit are open
 - ✓ All shut-off devices of the heat source are open
 - ✓ The pipe systems and components of the system are leak-tight
1. Fill out carefully and sign the notice of completion for heat pump systems.
 2. In Germany: Send notice of completion for heat pump systems and rough checklist to the manufacturer's factory customer service department.
In other countries: Send notice of completion for heat pump systems and rough checklist to the manufacturer's local partner.
 3. Arrange for the heat pump system to be commissioned by after-sales service authorised by the manufacturer; this is a chargeable service.

10 Maintenance



NOTE

We recommend that you sign a maintenance agreement with an accredited heating company.

10.1 Basic principles

The cooling circuit of the heat pump does not require any regular maintenance.

Local regulations require, among other things, leak checks beforehand and/or for a logbook to be kept for certain heat pumps.

- Ensure compliance with local regulations with regard to the specific heat pump system.


10.2 Maintenance after commissioning

Check all installed dirt traps for dirt at the latest one week after commissioning and clean them if necessary.

- Switch off the system while the check and cleaning is being carried out.

Next checking and cleaning at the latest 2 weeks after commissioning.

Cleaning the shut-off device with dirt trap (separate package)

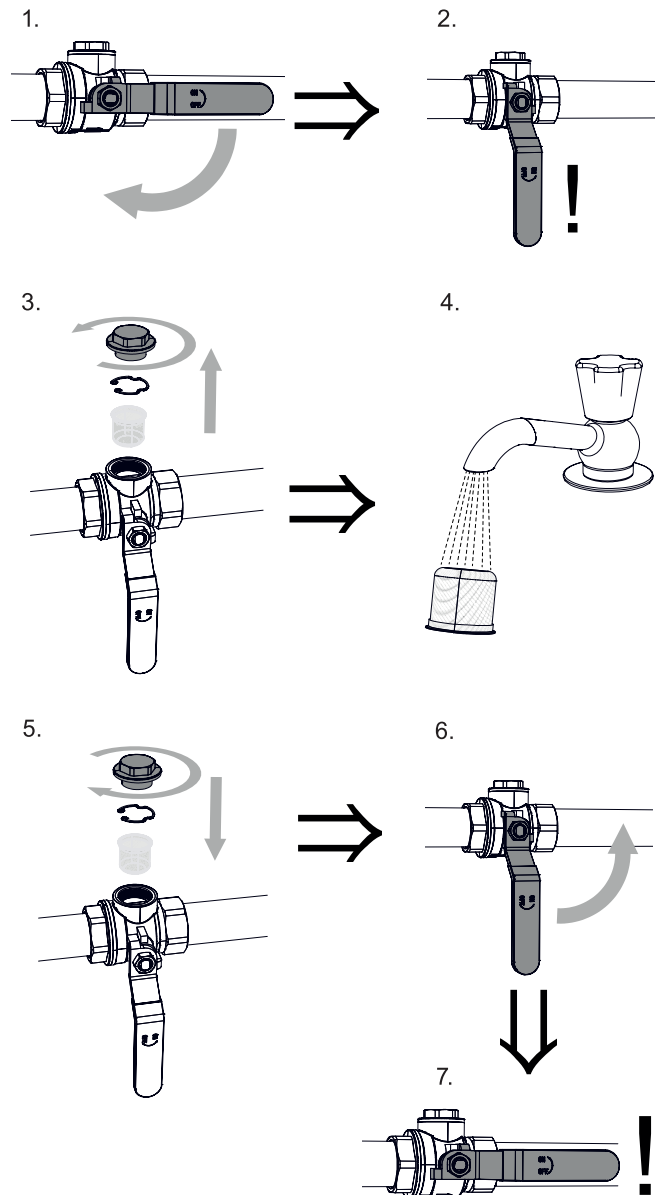

10.3 Maintenance as required

- Checking and cleaning the components of the heating circuit and the heat source, e.g. valves, expansion vessels, circulation pumps, filters, dirt traps
- Checking the function of the safety valve for the heating circuit

10.4 Cleaning and flushing the plate heat exchanger

1. Clean and flush the plate heat exchanger according to the manufacturer's instructions.



- ▶ After flushing the plate heat exchanger with chemical cleaning agent: neutralise any residues and flush the plate heat exchanger thoroughly with water.

10.5 Yearly maintenance

- ▶ Determine the quality of the heating water by analysis. In the event of deviations from the specifications, take suitable measures without delay
- ▶ Check all installed dirt traps for dirt and clean them if necessary
- ▶ Check the function of the safety valve for the hot water accumulator and for the heating circuit.

11 Faults


- ▶ Read out the cause of the fault via the diagnostics program of the heating and heat pump controller.
- ▶ Contact the local partner of the manufacturer or the factory's customer service. Have the fault message and unit number (→ "Type plate", page 7) to hand.

11.1 Manually unlock the blockage in the circulation pumps

Circulating pumps can block due to sediments or longer standstill periods. This blockage can be removed manually.

Release the blockage of the heating circulating pump

- ▶ Insert the screwdriver into the hole (①), press the plunger in the circulating pump against the shaft and release the blocked shaft in the direction of rotation of the circulating pump.

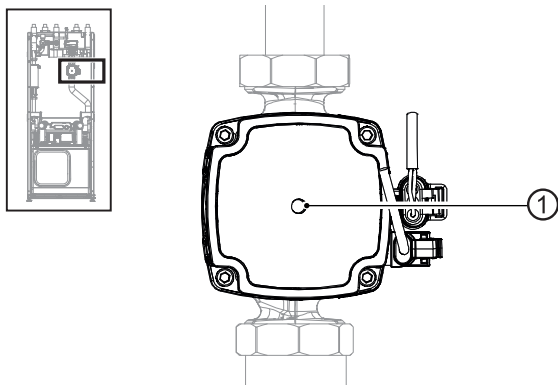

12 Dismantling and Disposal

12.1 Dismantling


- ✓ Unit is safely disconnected from the power supply and protected against being switched back on again.
- ▶ Collect all media safely.
- ▶ Separate components by their materials.

12.2 Disposal and Recycling

- ▶ Dispose of media harmful to the environment according to local regulations, e.g. antifreeze mixture, refrigerant.
- ▶ Recycle or ensure proper disposal of unit components and packaging materials according to local regulations.

12.3 Removal of the buffer battery

1. Use a screwdriver to push out the buffer battery on the processor board of the control.

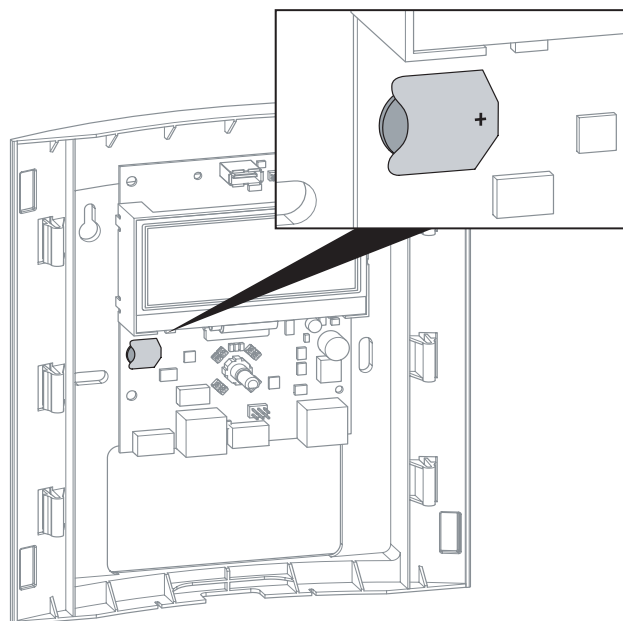

2. Dispose of the buffer battery according to local regulations.








Technical data / Scope of supply

Performance data		Values in brackets: (1 Compressor)		SWCV 63K(H)1_3	
Heating capacity COP	for B0/W35 acc. to DIN EN 14511-x		kW COP	2,45 4,66	
	for B0/W45 acc. to DIN EN 14511-x		kW COP	2,20 3,13	
	for B0/W55 acc. to DIN EN 14511-x		kW COP	2,70 2,97	
	for B7/W35 flow of B0/W35		kW COP	2,51 4,75	
Heating capacity	for B0/W35	min. max.	kW kW	0,87 6,00	
	for B0/W45	min. max.	kW kW	0,77 5,47	
	for B0/W55	min. max.	kW kW	0,60 5,08	
	for B7/W35	min. max.	kW kW	1,1 7,09	
Cooling capacity at max. flow rate (B10/W18), dT 3K units with passive cooling: Identifier K			kW	4,1	
Operating limits					
Heating circuit return min. Heating circuit flow max.		Heating	within heat source min./max.	°C	20 75
Heating circuit return min. Heating circuit flow max.		Cooling	within heat source min./max.	°C	-
Heat source, heating			min. max.	°C	-13 30
Additional operating points				...	-
Installation location					
Room temperature		min. max.	°C	5 35	
Relative humidity maximum (non-condensing)			%	60	
Sound					
Sound pressure level at 1 m distance from edge of unit		min. max.	dB(A)	32 39	
Sound power level		min. max.	dB(A)	39 51	
Sound power level acc. to DIN EN 12102-1			dB(A)	40	
Tonality Low-frequency			dB(A) • yes – no	-	
Heat source					
Volume flow (pipe dimensioning)			l/h	1450	
Residual head (with cooling)**) Pressure loss (with cooling) Flow rate			bar (bar) bar (bar) l/h	0,80 (0,65) - 1450	
Approved anti-freeze mixture		Monoethylene glycol Propylene glycol Methanol Ethanol		• • • •	
Anti-freeze concentration: Minimum frost protection down to			°C	-15	
Max. allowable operating pressure			bar	4,5	
Circulation pump control range		min. max.	l/h	200 2500	
Heating circuit					
Flow rate (pipe dimensioning) Min. volume buffer tank in series Min. volume separation buffer tank			l/h l l	1050 - -	
Residual head (with cooling) Pressure loss (with cooling) Flow rate			bar (bar) bar (bar) l/h	0,60 (0,52) - 1050	
Max. allowable operating pressure			bar	3	
General unit data					
Data of the standards according to version		EN14511-x DIN EN 12102-1		2022 2022	
Total weight (with cooling)			kg (kg)	128 (135)	
Box weight (with cooling) Tower weight (with cooling)			kg (kg) kg (kg)	63 (70) 65 (65)	
Max. allowable operating pressure refrigerating circuit		high pressure low pressure	MPa (g) MPa (g)	3,73 1,37	
Refrigerant type Refrigerant capacity			... kg	R290 0,165	
Domestic hot water tank					
Net volume			l	178	
Material		Enamel Stainless steel	• yes – no	• –	
Protective anode		Impressed current Magnesium	• yes – no	• –	
Heat exchanger area			m²	2,14	
Domestic hot water temperature Heat pump operation Electric heating element			up to °C up to °C	65 65	
Mixed water quantity according to ErP: 2009/125/EG (at 40°C, draw-off of 10 l/min)			l	242	
Mixed water quantity 40°C at 10l/min Tank temperature 60°C			l	-	
Mixed water quantity 40°C at 10l/min Tank temperature 50°C			l	-	
Standing loss according to ErP ErP: 2009/125/EG (at 65°C)			W	54	
Maximum allowable temperature			°C	95	
Operating pressure Max. pressure Test pressure			bar bar bar	6 10 13	
Nominal size cleaning flange			DN	-	
Insulation thickness tank			mm	-	
U-value of tank insulation			W/(m²·K)	-	
Maximum sulphide content of drinking water			mg/l	-	
Maximum chloride content of drinking water			mg/l	-	
Electrical conductivity			µS/cm	> 100	
Electrics					
Voltage code all-pole fuse protection for heat pump *)**)		... A	1~N/PE/230V/50Hz C16		
Voltage code all-pole fuse protection for heat pump *) + electric heating element **)		... A	- -		
Voltage code Control voltage fuse protection **)		... A	1~N/PE/230V/50Hz B10		
Voltage code Electric heating element fuse protection **)		... A	3~N/PE/400V/50Hz B16		
HP*): effect. power consumption B0/W35 (partial load operation) DIN EN 14511-x Electric consumption cosφ			kW A ...	0,53 0,84 0,92	
HP*): effective power consumption B0/W35 acc. to DIN EN 14511-x: min. max.			kW kW	0,21 1,62	
HP*): Max. machine current Max. power consumption within the operating limits			A kW	14 2,9	
Starting current: direct with soft starter			A A	< 5 -	
Degree of protection			IP	20	
Zmax			Ω	0,26	
Residual current circuit breaker		if required	type	B	
Electric heating element output		3 2 1 phase	kW kW kW	6 4 2	
Circulation pump power consumption, heating circuit heat source		min. max.	W W	2 – 63 3 – 140	
Other unit information					
Safety valve Heating circuit Response pressure		included in scope of supply: • yes – no bar		• 3	
Safety valve Heat source Response pressure		included in scope of supply: • yes – no bar		- -	
Buffer tank Volume		included in scope of supply: • yes – no l		- -	
Diaphragm expansion vessel Heating circuit Volume Prepressure		incl. in scope of supply: • yes – no l bar		- -	
Diaphragm expansion vessel Heat source Volume Prepressure		incl. in scope of supply: • yes – no l bar		- -	
Overflow valve Changeover valve, heating - domestic hot water		integrated: • yes – no		- •	
Vibration decoupling, Heating circuit Heat source		included in scope of supply or integrated: • yes – no		• •	
Controller Heat quantity recording Extension board		included in scope of supply or integrated: • yes – no		• • -	
*) Only compressor, **) Follow local regulations, ***) Figures for 25% mono-ethylene glycol				813671	
The performance data and the operating limits apply to clean heat exchangers Index: r					



SWCV 63K(H)1/3

Performance curves

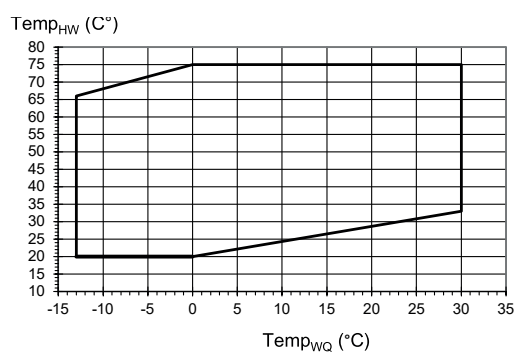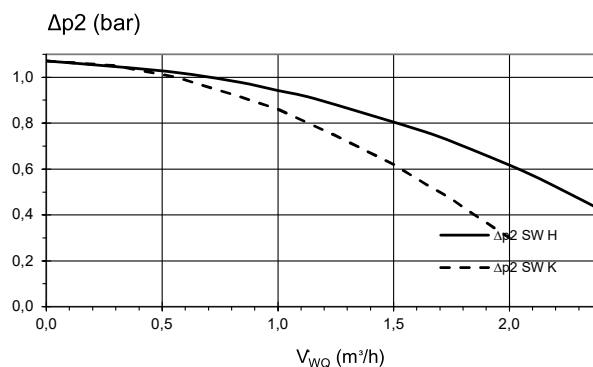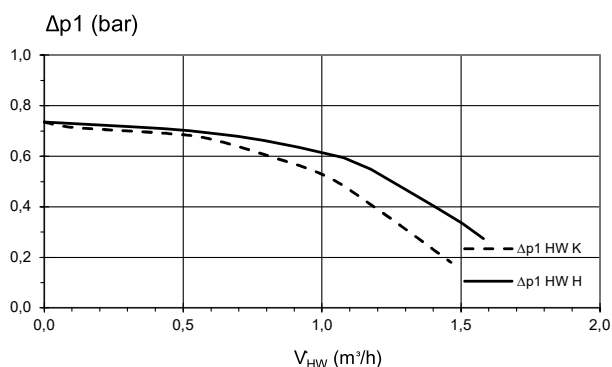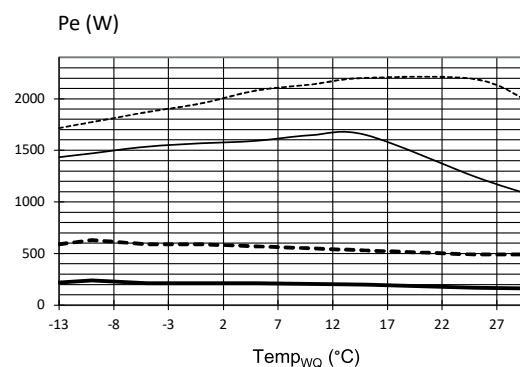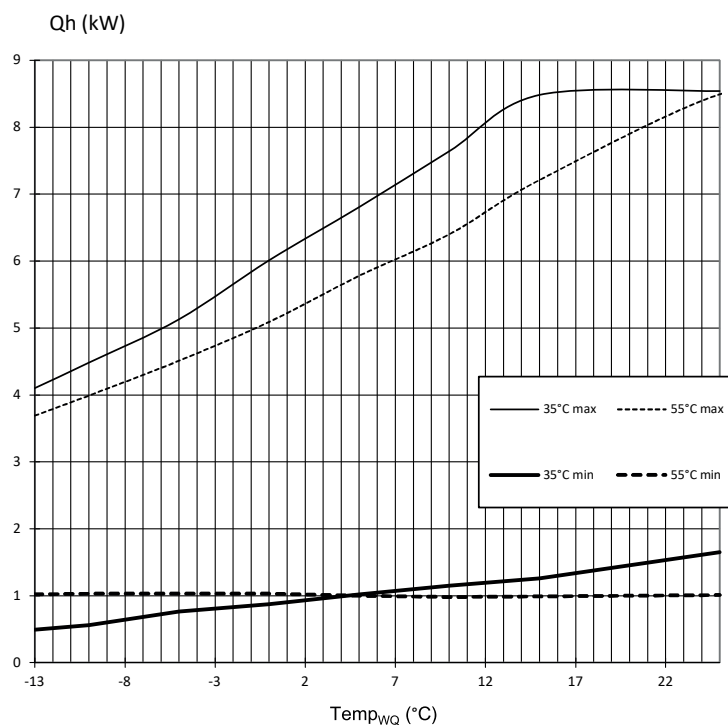


Keys:	UK823129L/170408
$\dot{V}_{HW}$	Heating water volume flow rate
$\dot{V}_{WQ}$	Heat source volume flow rate
Temp _{WQ}	Heat source temperature
Qh	Heating capacity
Pe	Power consumption
COP	Coefficient of performance
$\Delta p_{HW} / \Delta p_{HW/K}$	Heating circuit free pressure / Heating circuit with cooling free pressure
$\Delta p_{WQ} / \Delta p_{WQ/K}$	Heat source free pressure / Heat source with cooling free pressure



Dimensional drawings

SWCV 63K(H)1/3

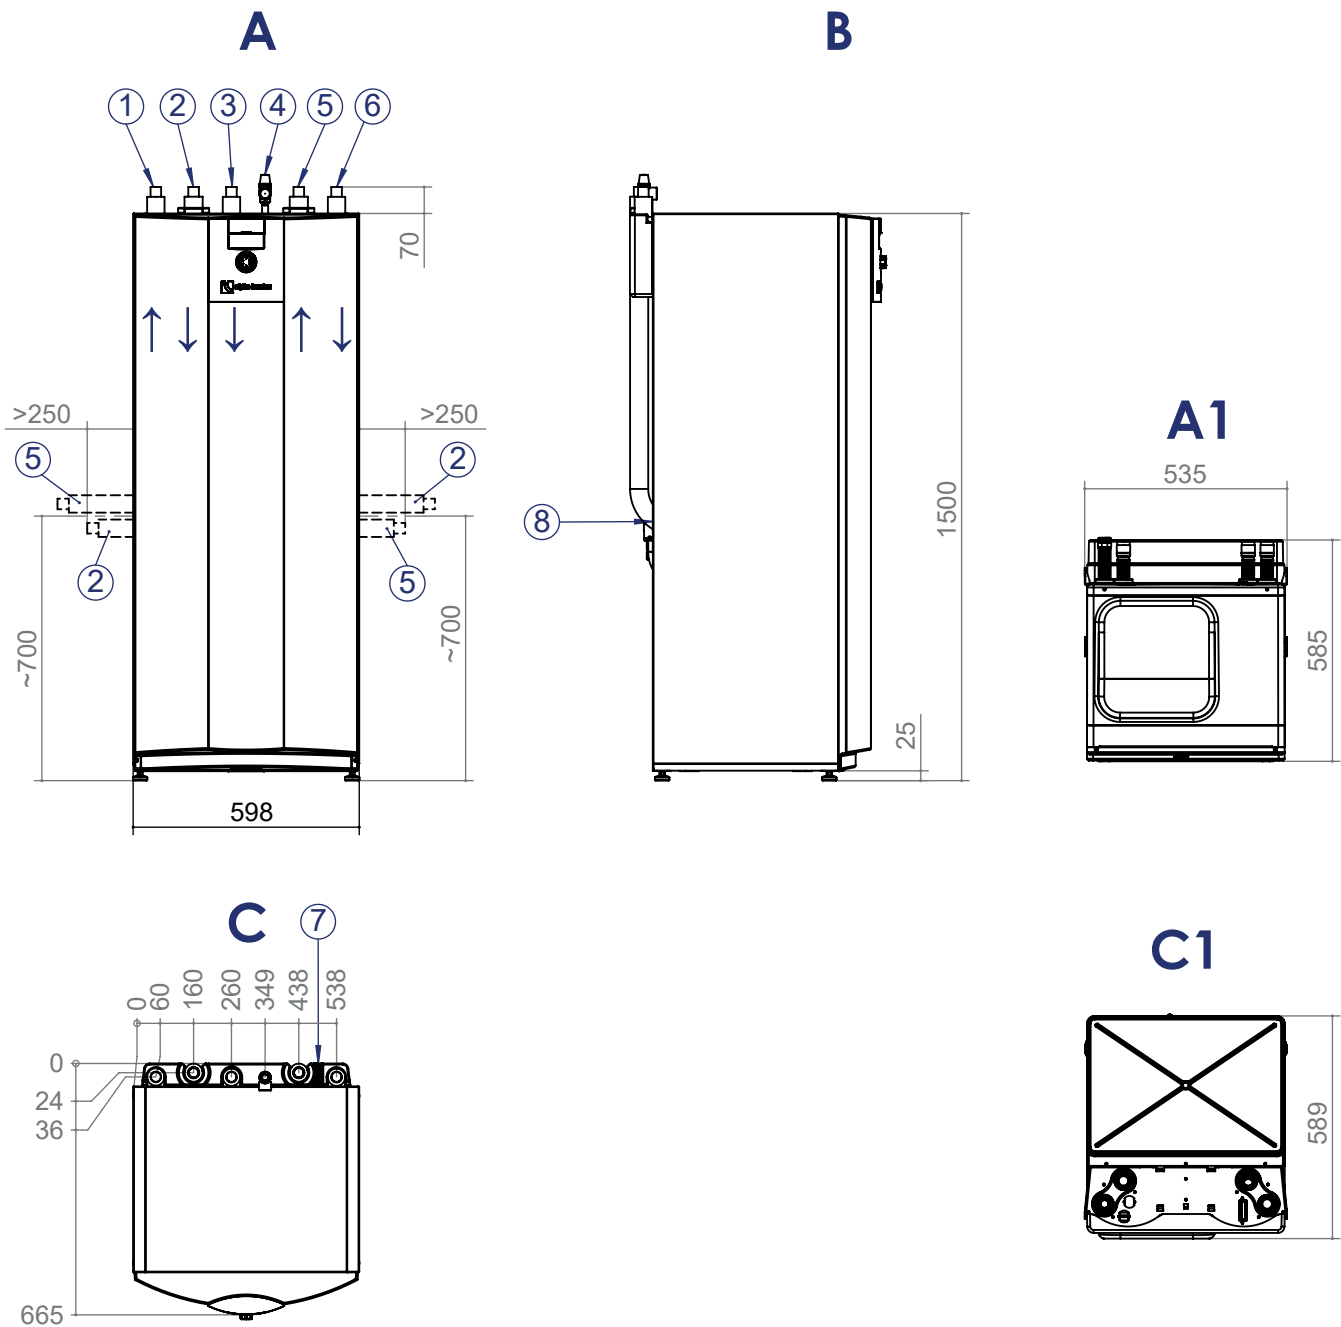

Keys: UK819451a

All dimensions in mm..


A	Front view
B	Side view from left
C	Plan view
A1	Front view of module box
C1	Top view of module box

Pos.	Name	outside diameter
1	Heating water outlet (flow)	Ø28
2	Heat source inlet (in heat pump) optionally at the top, on the right or left	Ø28
3	Heating water inlet (return)	Ø28
4	Heating circuit safety valve (in the separate package)	Rp 3/4" internal thread
5	Heat source outlet (from heat pump) optionally at the top, on the right or left	Ø28
6	Domestic hot water charging circuit inlet (return)	Ø28
7	Cable entry LIN bus cable	–
8	Cable entry connection cable	–




Dimensional drawings

Control unit

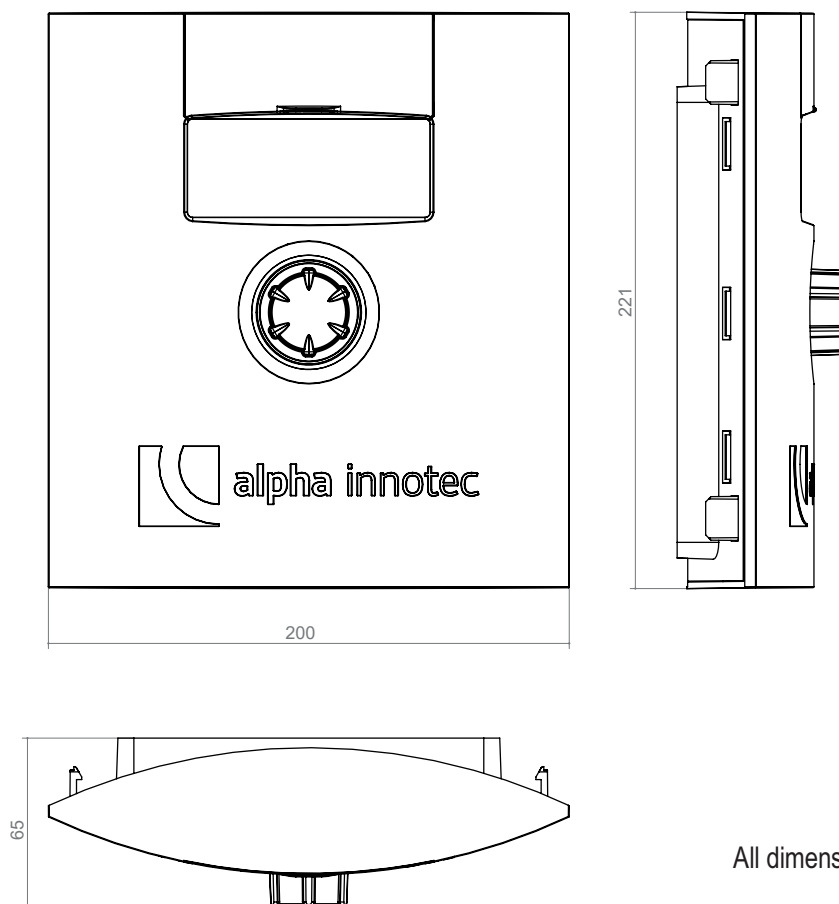

All dimensions in mm..



Wall-mounted bracket

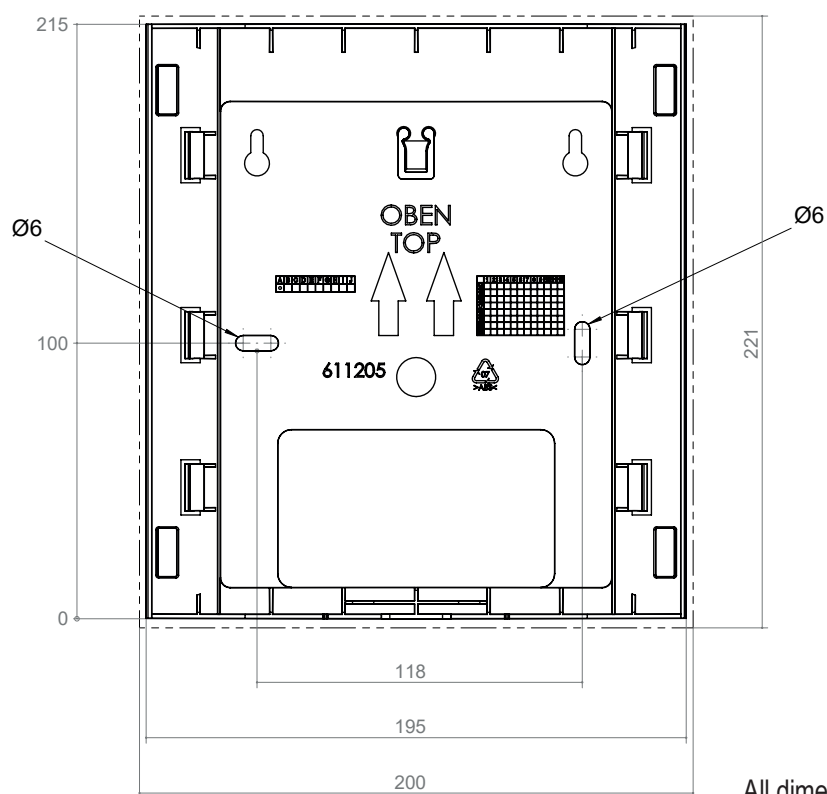

All dimensions in mm..



V1

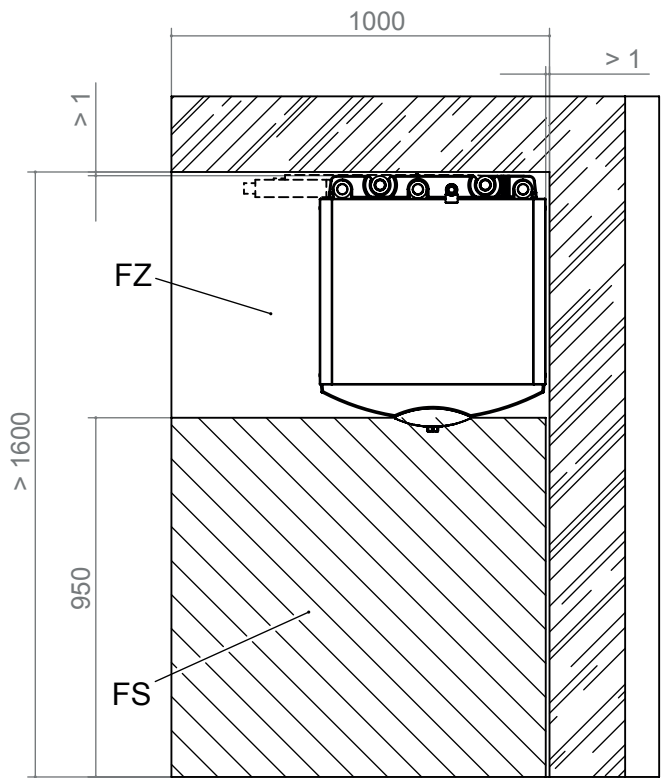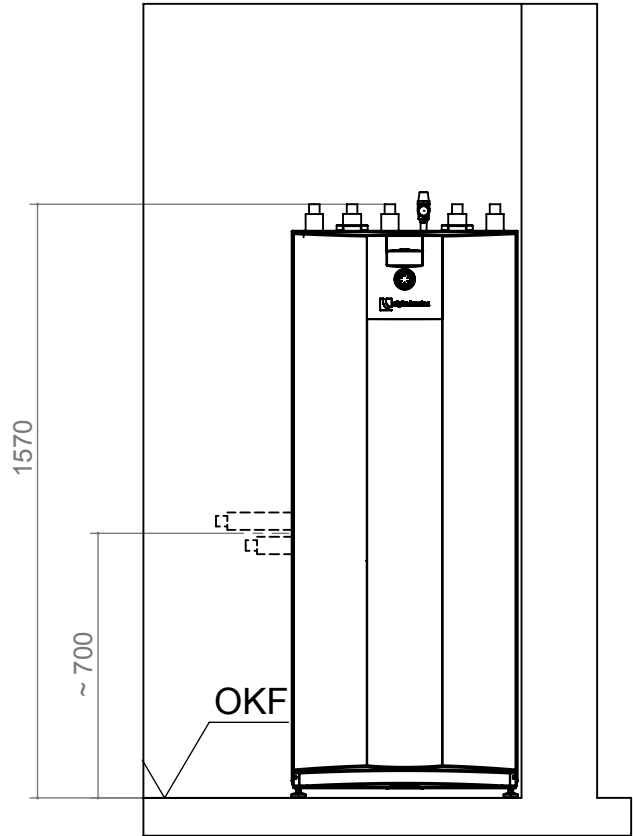

Keys: UK819452
All dimensions in mm.



V1	Version 1	FS	Free space for service purposes
OKF	Finished floor level	FZ	Free space for functionally necessary accessories



SWCV 63K(H)1/3

Installation plan 2

V2

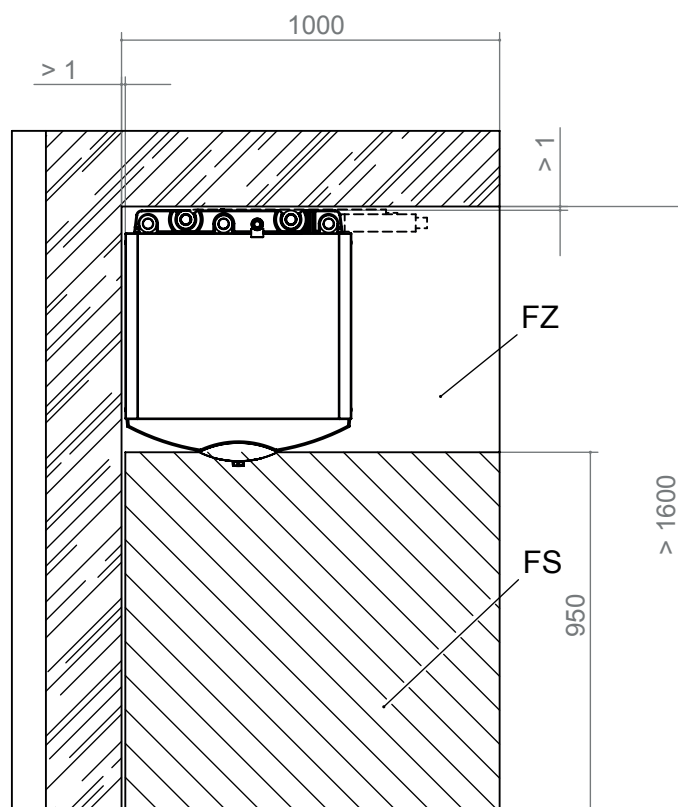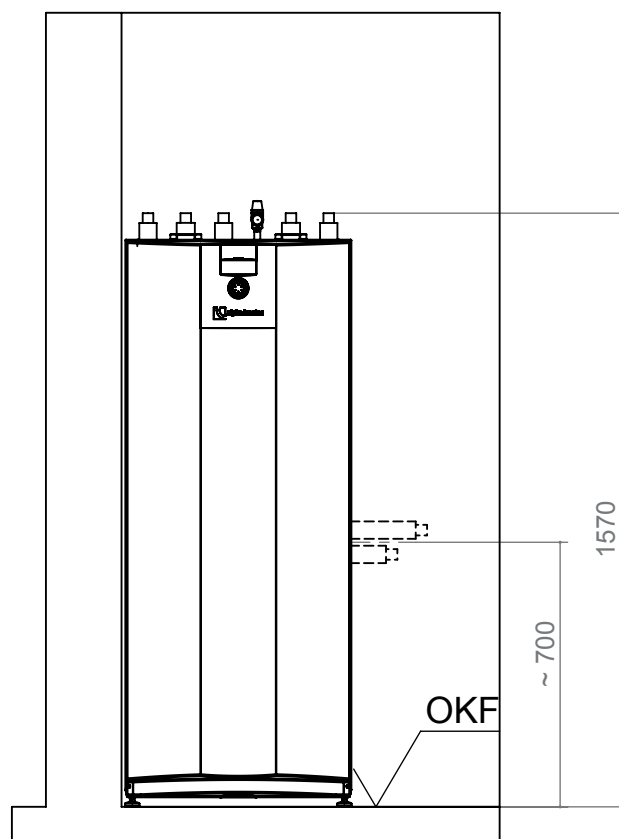



Keys: UK819452

All dimensions in mm.

V2	Version 2	FS	Free space for service purposes
OKF	Finished floor level	FZ	Free space for functionally necessary accessories



V3

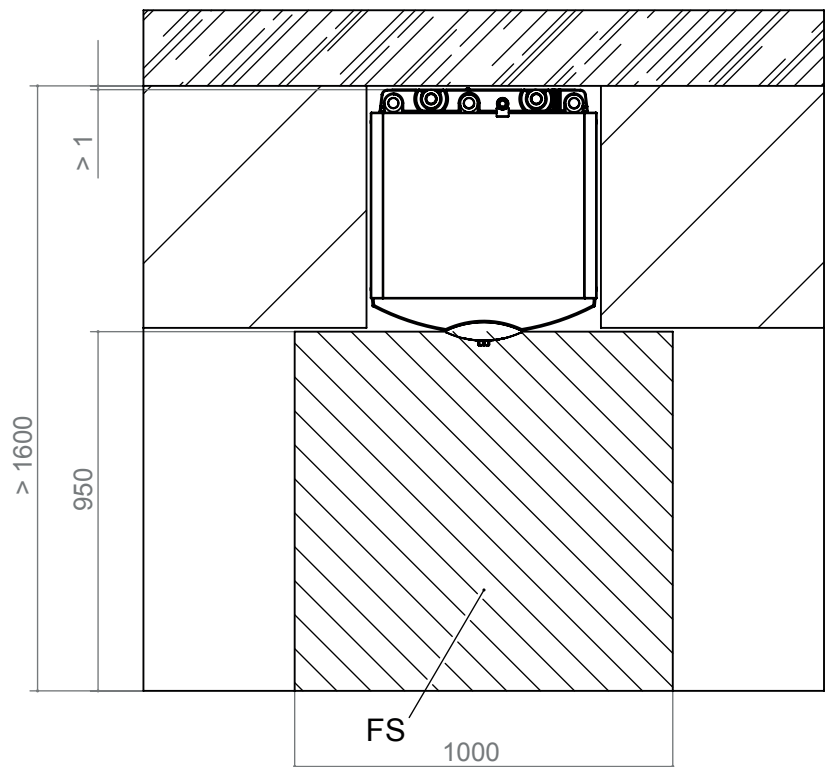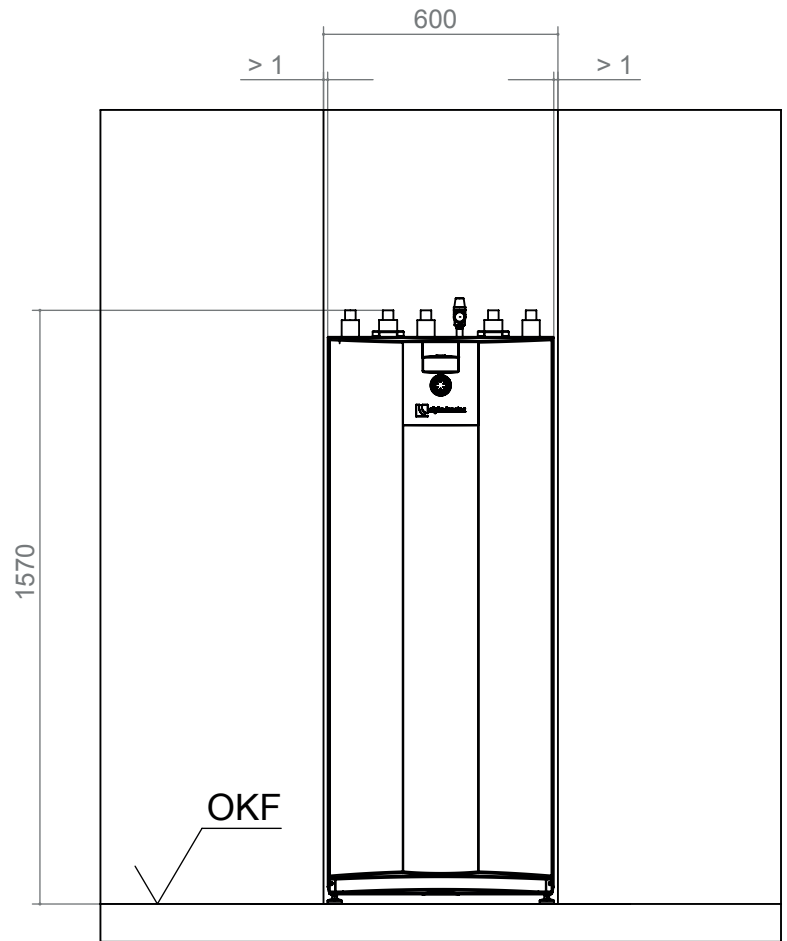

Keys: UK819452

All dimensions in mm.

V3 | Version 3


OKF | Finished floor level

FS | Free space for service purposes



Hydraulic integration (heating)


Unit variant H

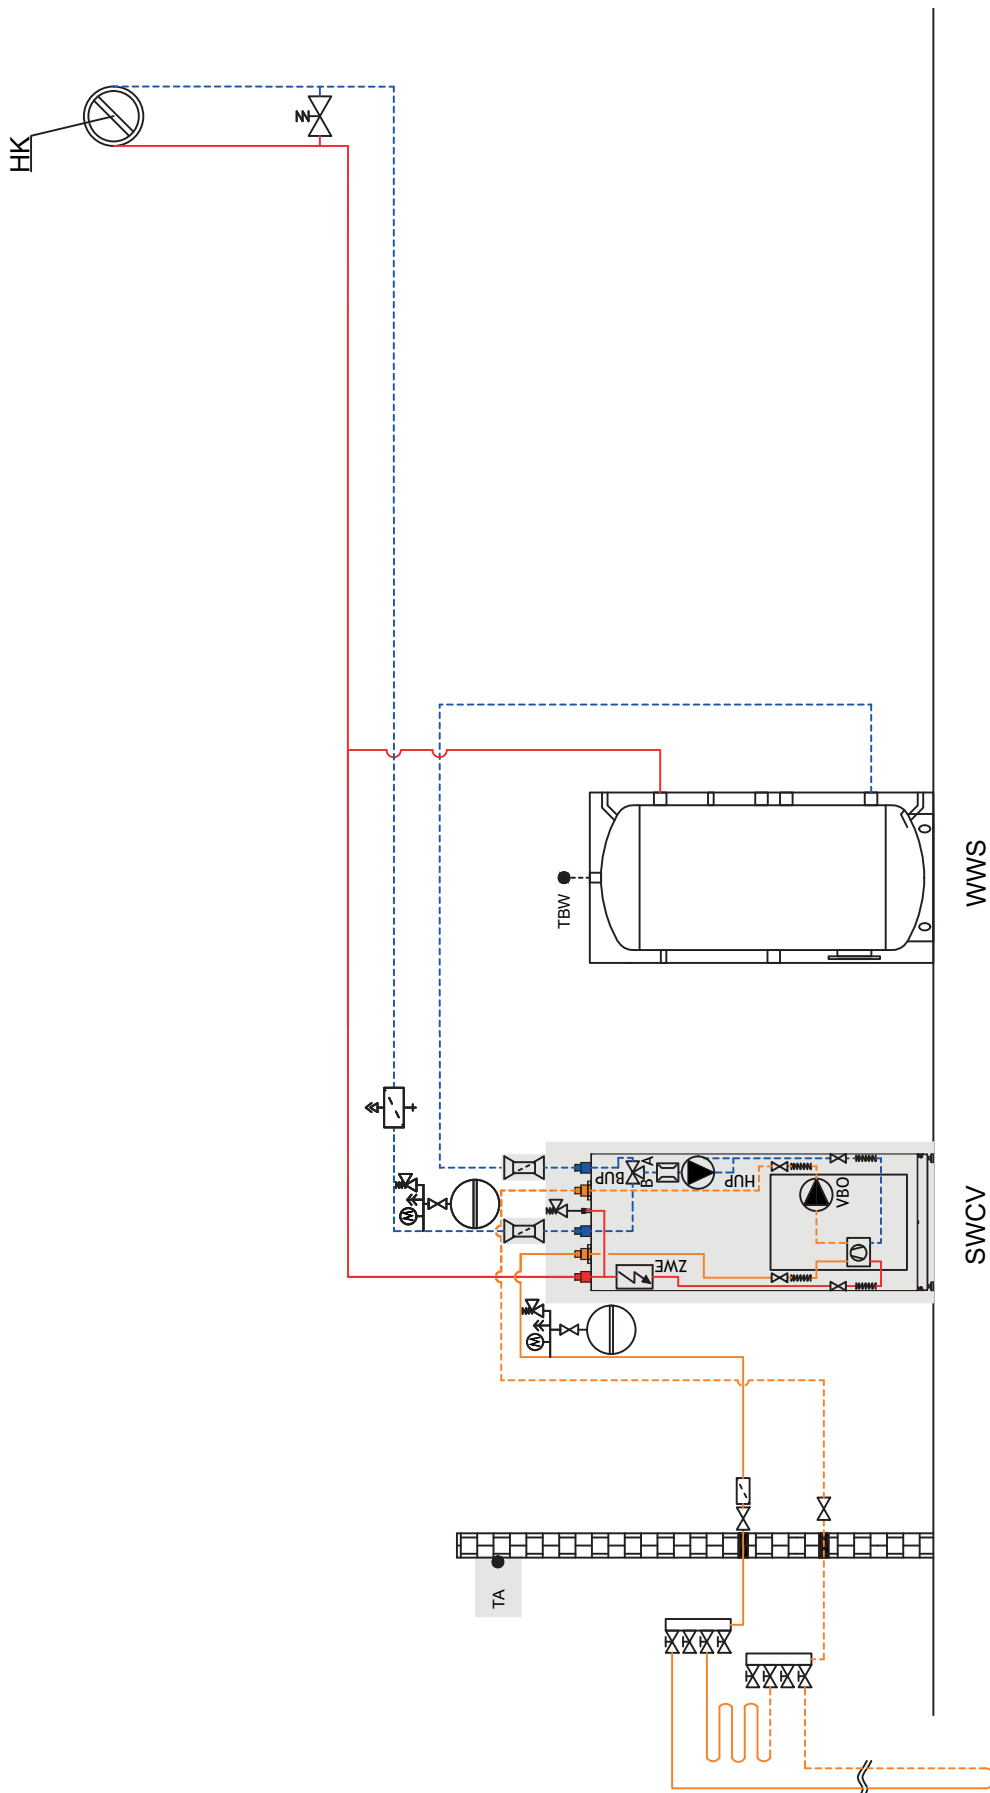



Unit variant H


with separate buffer tank

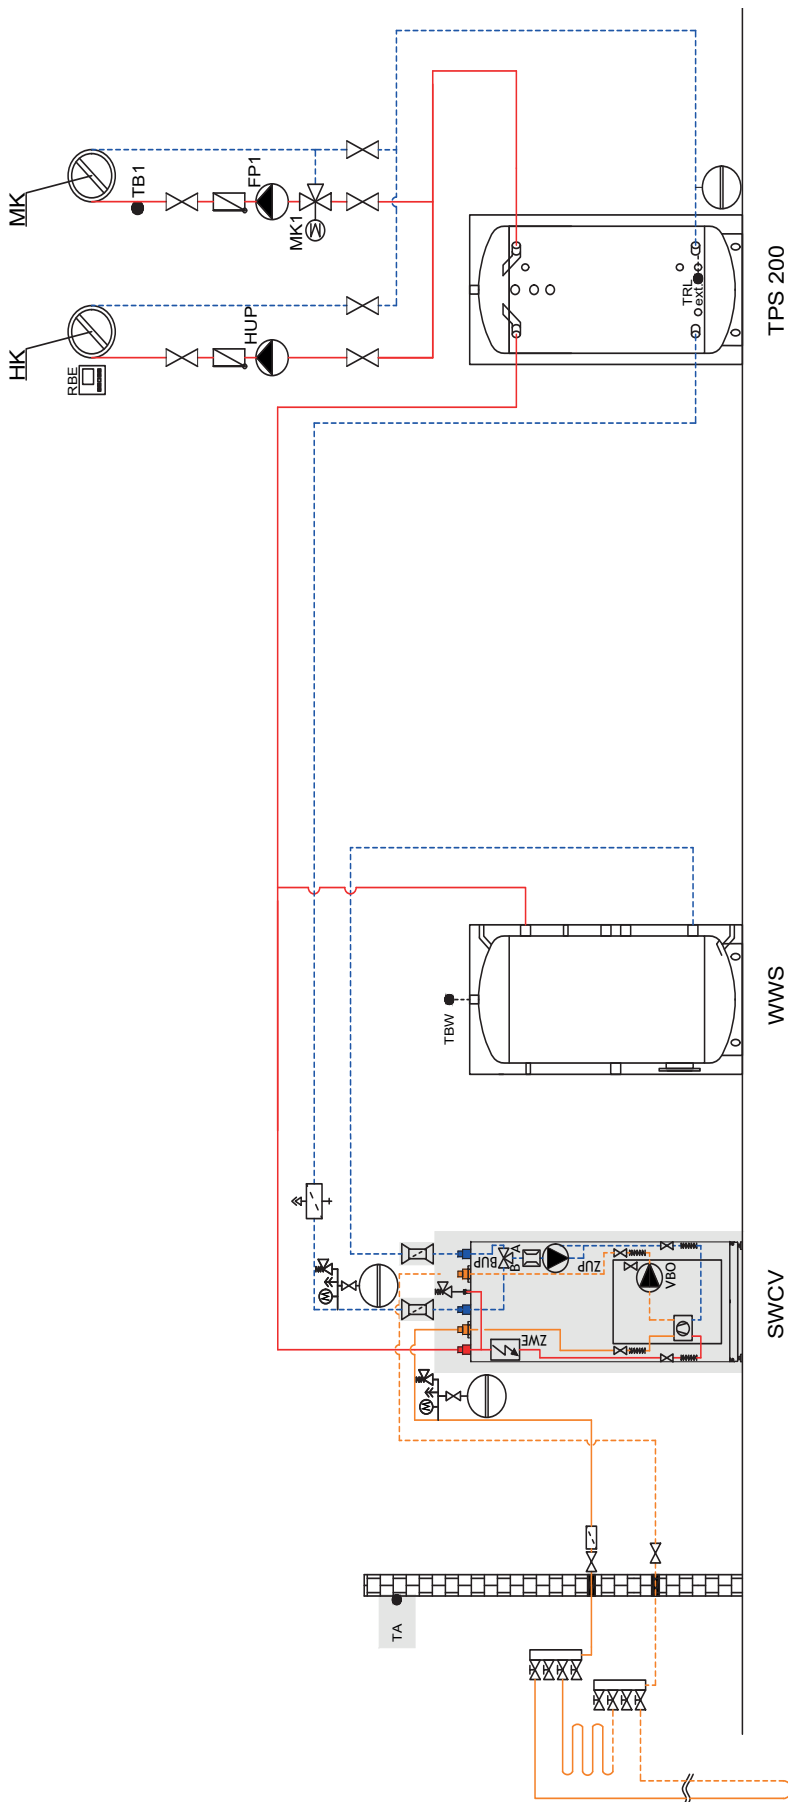



Hydraulic integration (cooling)

Unit variant K

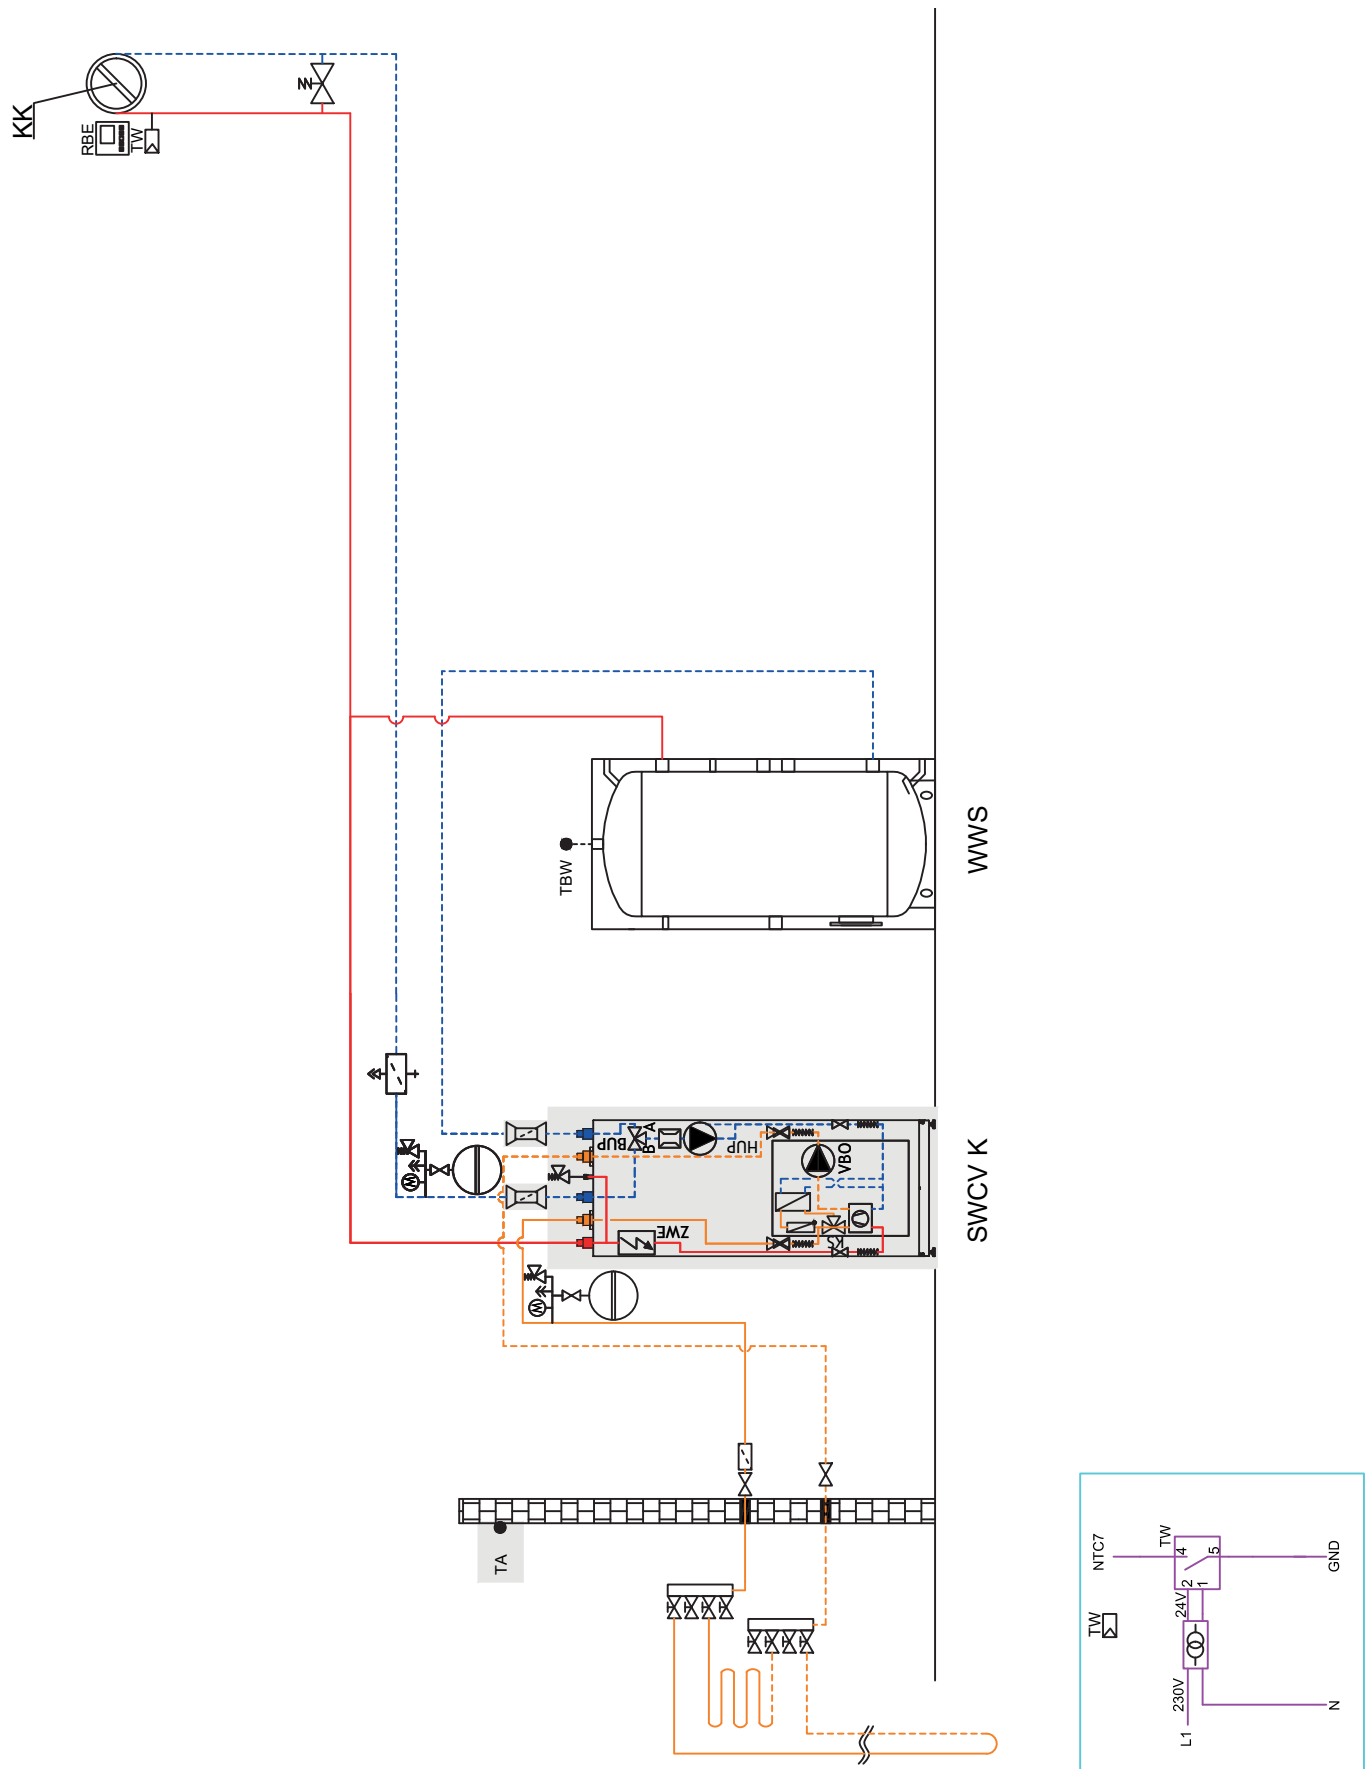



	Vibration isolation
	Shut-off device and drainage
	Shut-off device with dirt trap
	Safety group
	Shut-off device
	Circulation pump
	Non return valve/ one way valve
	Overflow valve
	Membrane expansion vessel
	Second heat generator (ZWE)
	3-way mixing valve / switching valve
	4-way mixing valve / switching valve
	Dirt-trap
	Wall breakthrough
	Brine manifold
	Ground slinkies
	Ground collector
	Flow switch
	Groundwater spring pump with flow direction groundwater
	Buffer tank: - TPS Stratified storage tank - RPS Series buffer tank - TPSK Stratified storage tank (cooling) - WTPSK Stratified storage tank, wall-mounted (cooling)
	Multifunction tank
	Domestic hot water tank
	Volume flow meter
	Heat meter

	Gas- or oil-boiler
	Wood boiler
	Brine pressure switch
	Swimming pool heat exchanger
	Separation heat exchanger / intermediate heat exchanger
	Solar domestic hot water tank
	Pipe lead-in
	Fresh water station (TWS)
	Room control unit
	Dew-point monitor
	Supply heat pump

	Circulation pump / switching valve domestic hot water
	Mixer circuit 1/2/3 (heating or cooling function)
	Circulation pump heating circuit
	Circulation pump / switching valve
	Feed circulating pump
	Circulation pump
	Domestic hot water charging pump
	Heat source circulation pump
	Outdoor temperature sensor
	Sensor domestic hot water
	Sensor mixer circuit
	Sensor external return
	Sensor return
	Flow sensor
	Sensor desuperheater
	Heating circuit
	Heating mixing circuit
	Cooling circuit
	Cooling mixing circuit
	Safety package primary
	Safety package secondary
	Circulation pump desuperheater
	Controls supplied by customer


Split:	Switching valve domestic hot water / heating
QN10	Switching valve cooling / heating
QN12	Mixing valve additional heating
QN11	Circulation pump
GP12	Outdoor temperature sensor
BT1	upper domestic hot water (displayed value)
BT7	Sensor return
BT3	Sensor domestic hot water
BT6	Flow sensor cooling
BT64	Temperature sensor, liquid state
BT15	Flow temperature heating
BT25	Return temperature heating / cooling
BT71	Sensor heating boiler
BT52	Room temperature sensor
BT50	Flow heating
XL1	Return heating / cooling
XL2	Cold water
XL3	Domestic hot water
XL4	Circulation
XL5	Flow cooling
X10	Liquid refrigerant
XL13	Gaseous refrigerant
XL14	Flow second heat generator
XL18	Return second heat generator
XL19	Terminal second heat generator
X2	Expansion board Split
EP Split	(not included in scope of delivery)


Controls supplied by customer / on-site components:

Parts and components shown in the colour "grey" must be provided by the customer and also operated with a regulation provided by the customer.
The temperature difference control SLP of the additional board is excepted from this.

General:

Pipes, fittings and fixtures must be designed and insulated in accordance with the current and valid standards, guidelines and recognised rules of technology (e.g.: vapour diffusion-tight insulation if the temperature falls below the dew point).

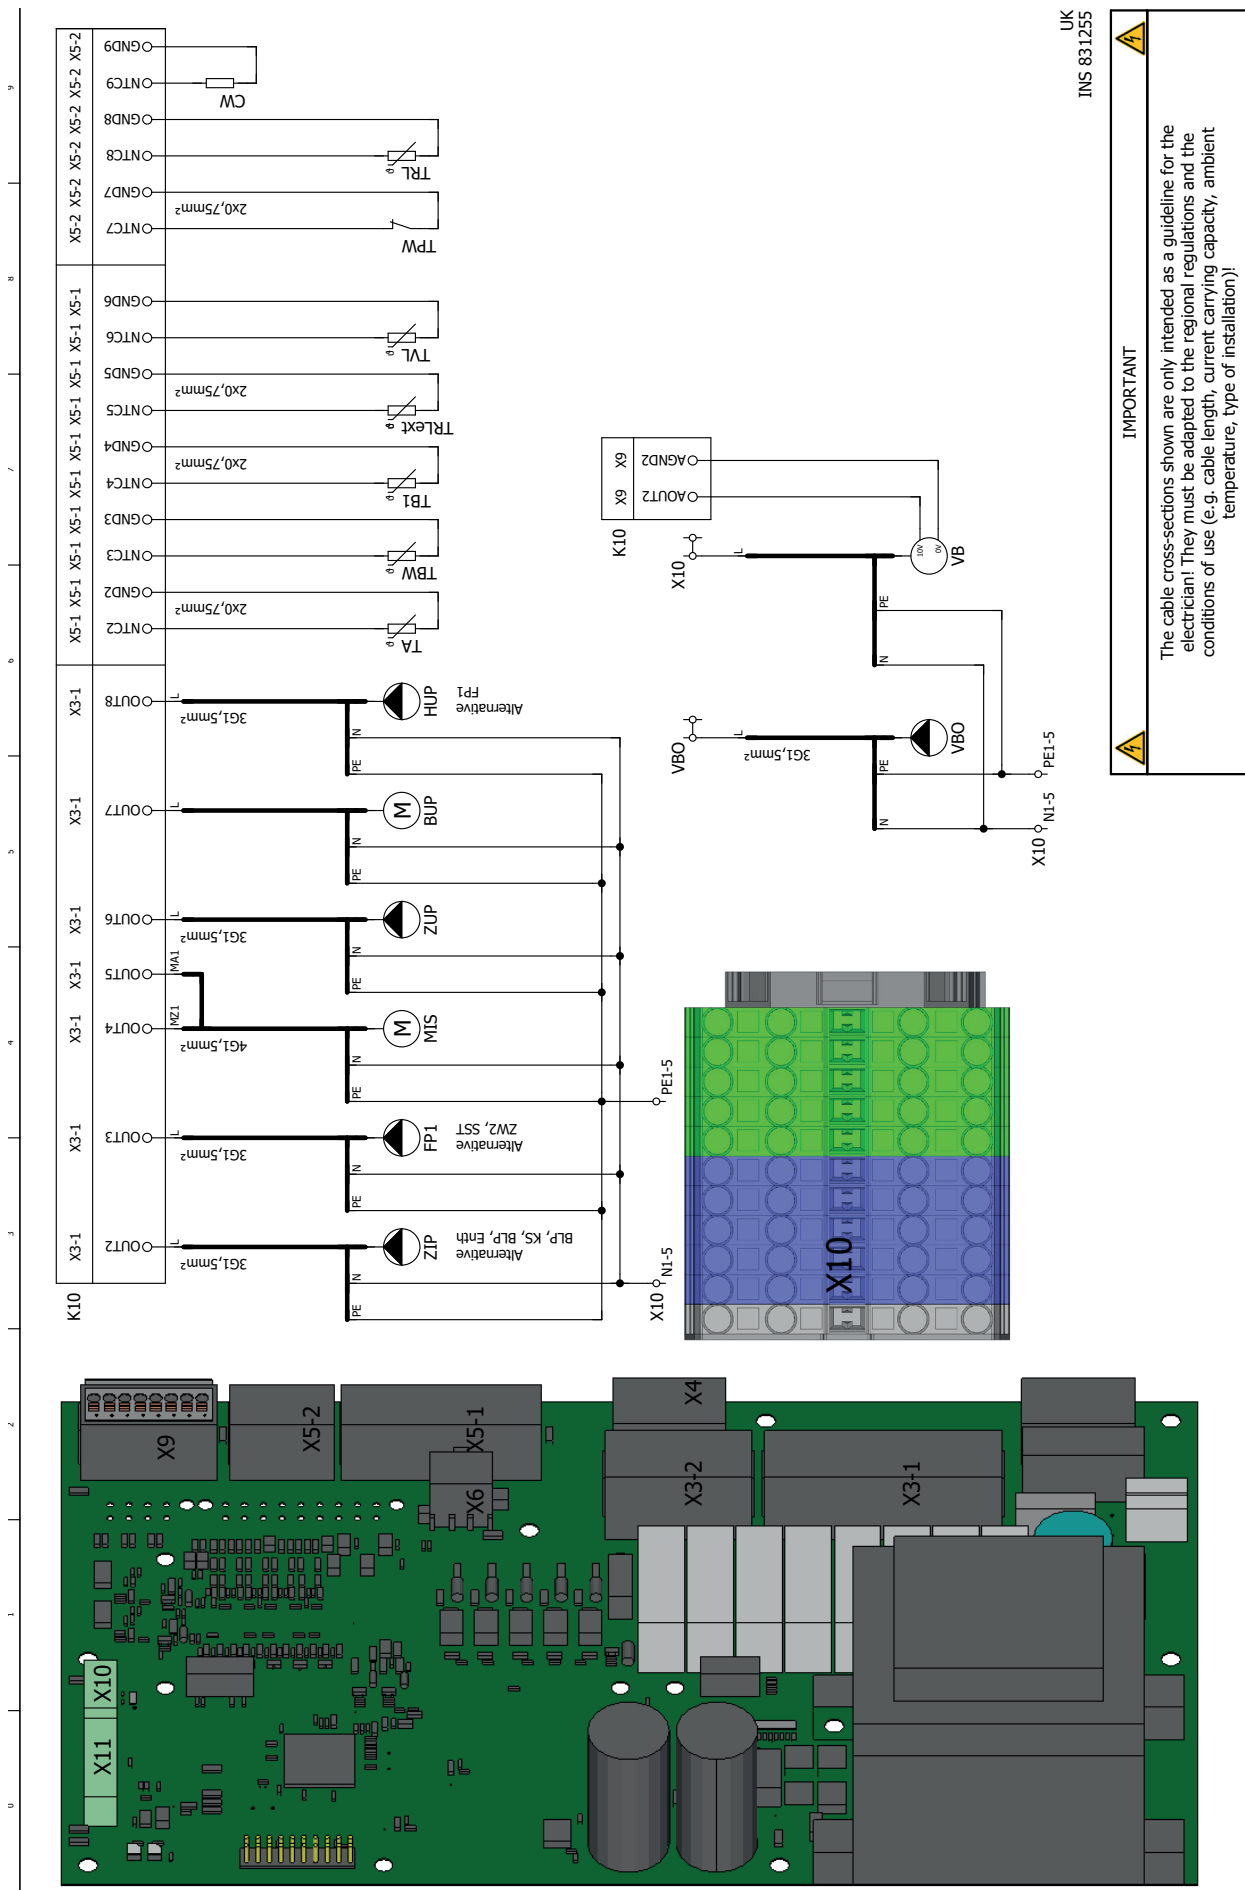

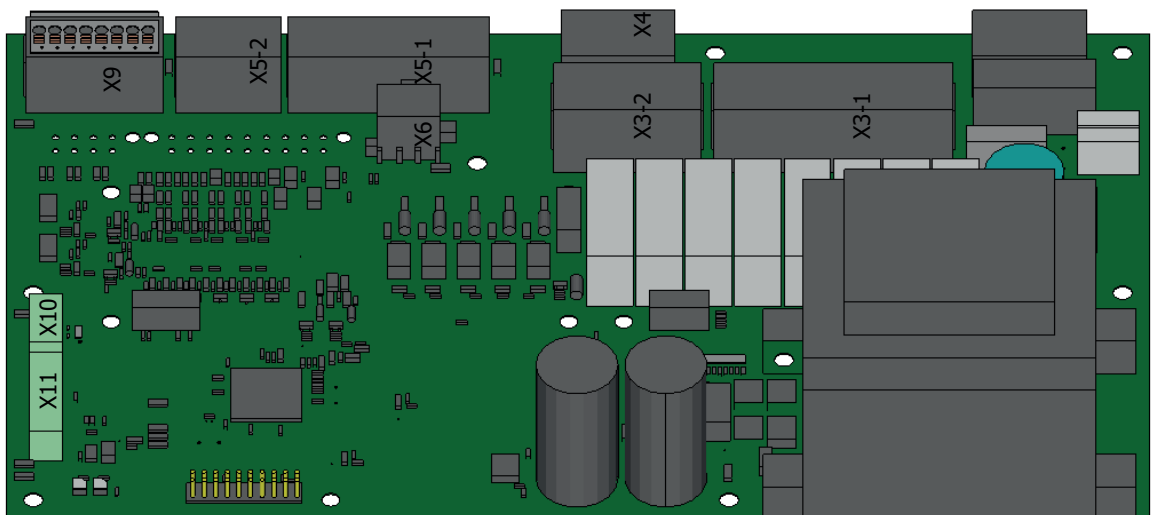UK
INS 831255


The cable cross-sections shown are only intended as a guideline for the electrician! They must be adapted to the regional regulations and the conditions of use (e.g. cable length, current carrying capacity, ambient temperature, type of installation)!

35



Circuit diagram 1/9


SWCV 63K(H)1/3

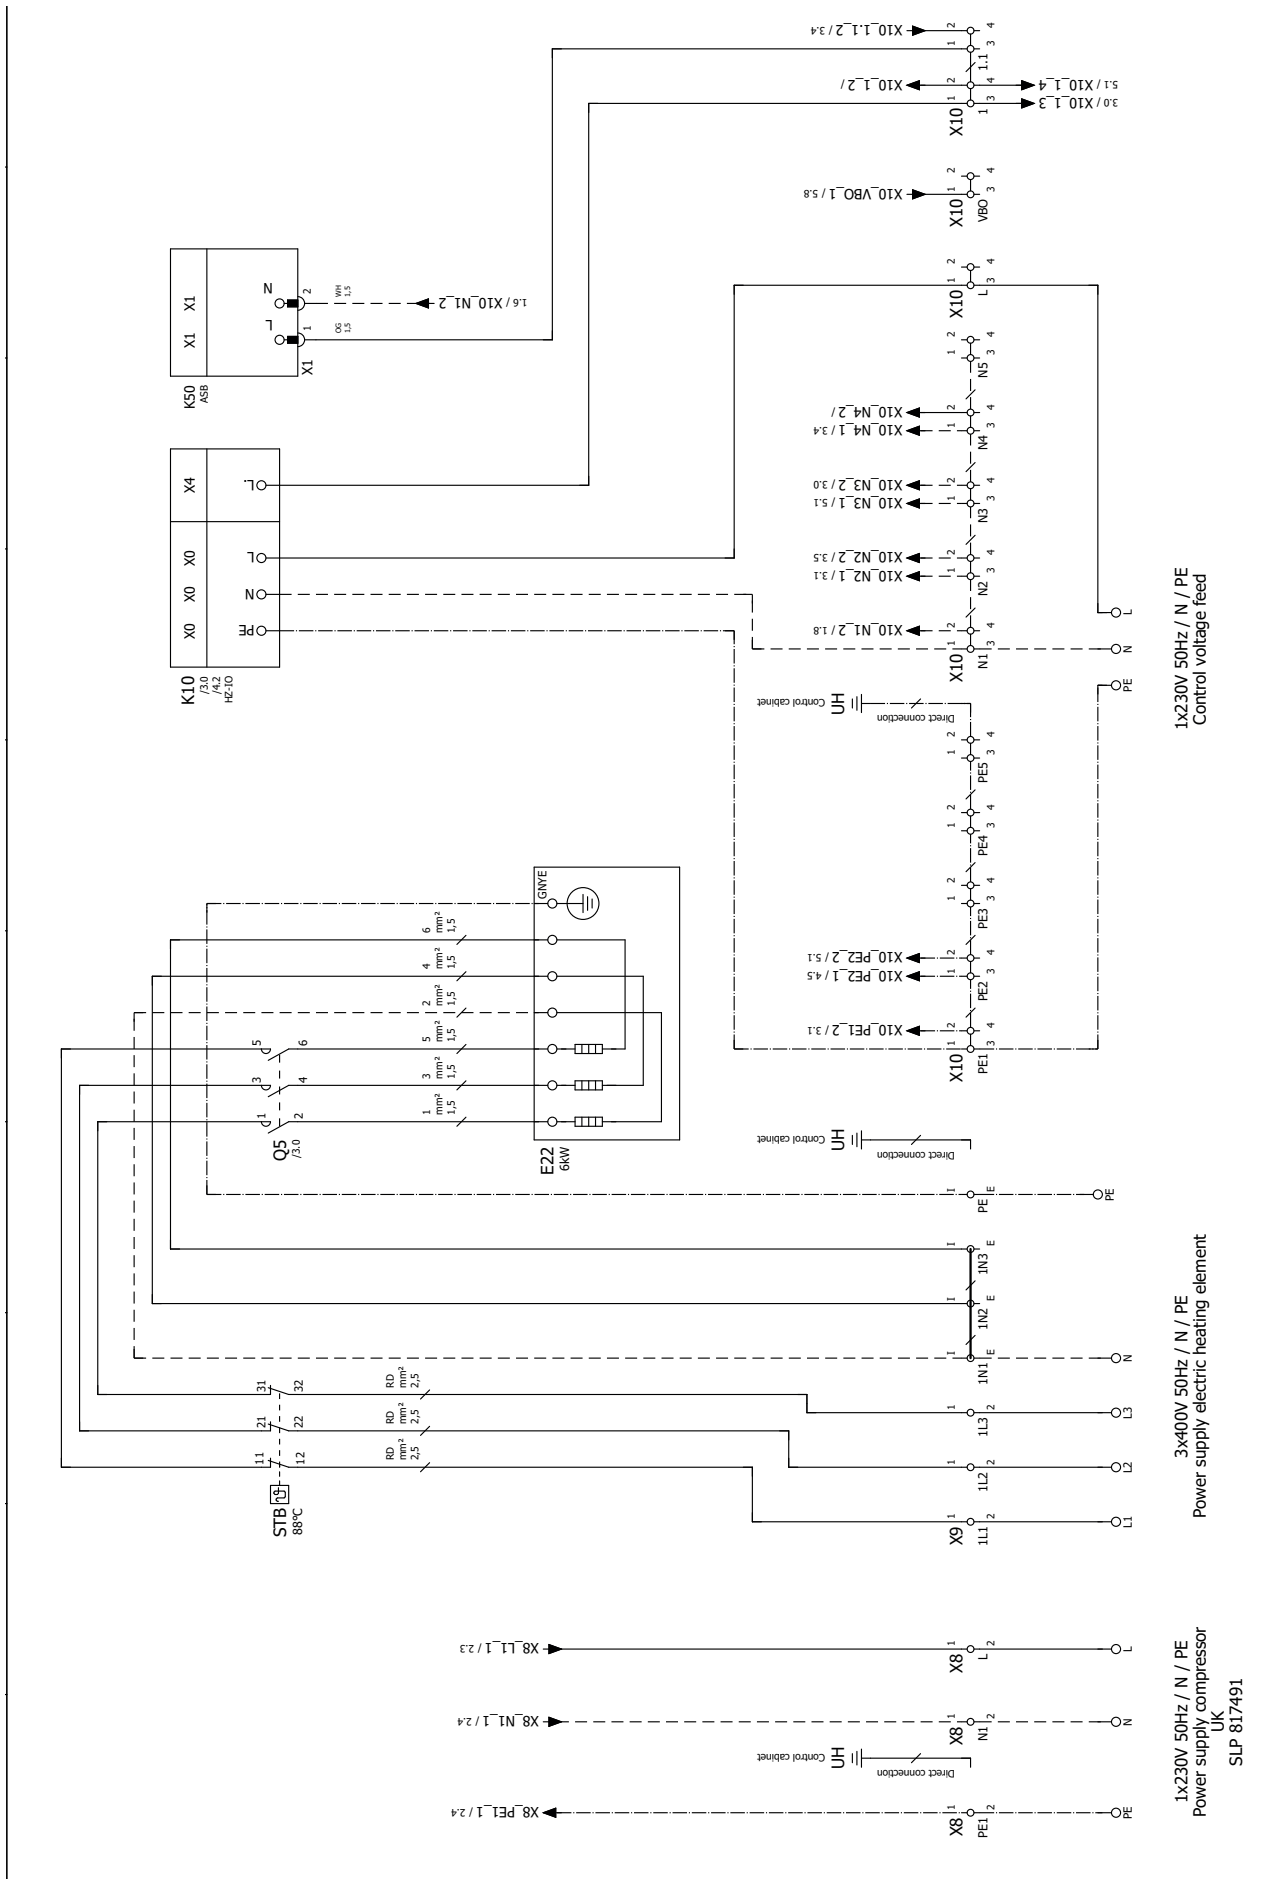




SWCV 63K(H)1/3

Circuit diagram 2/9

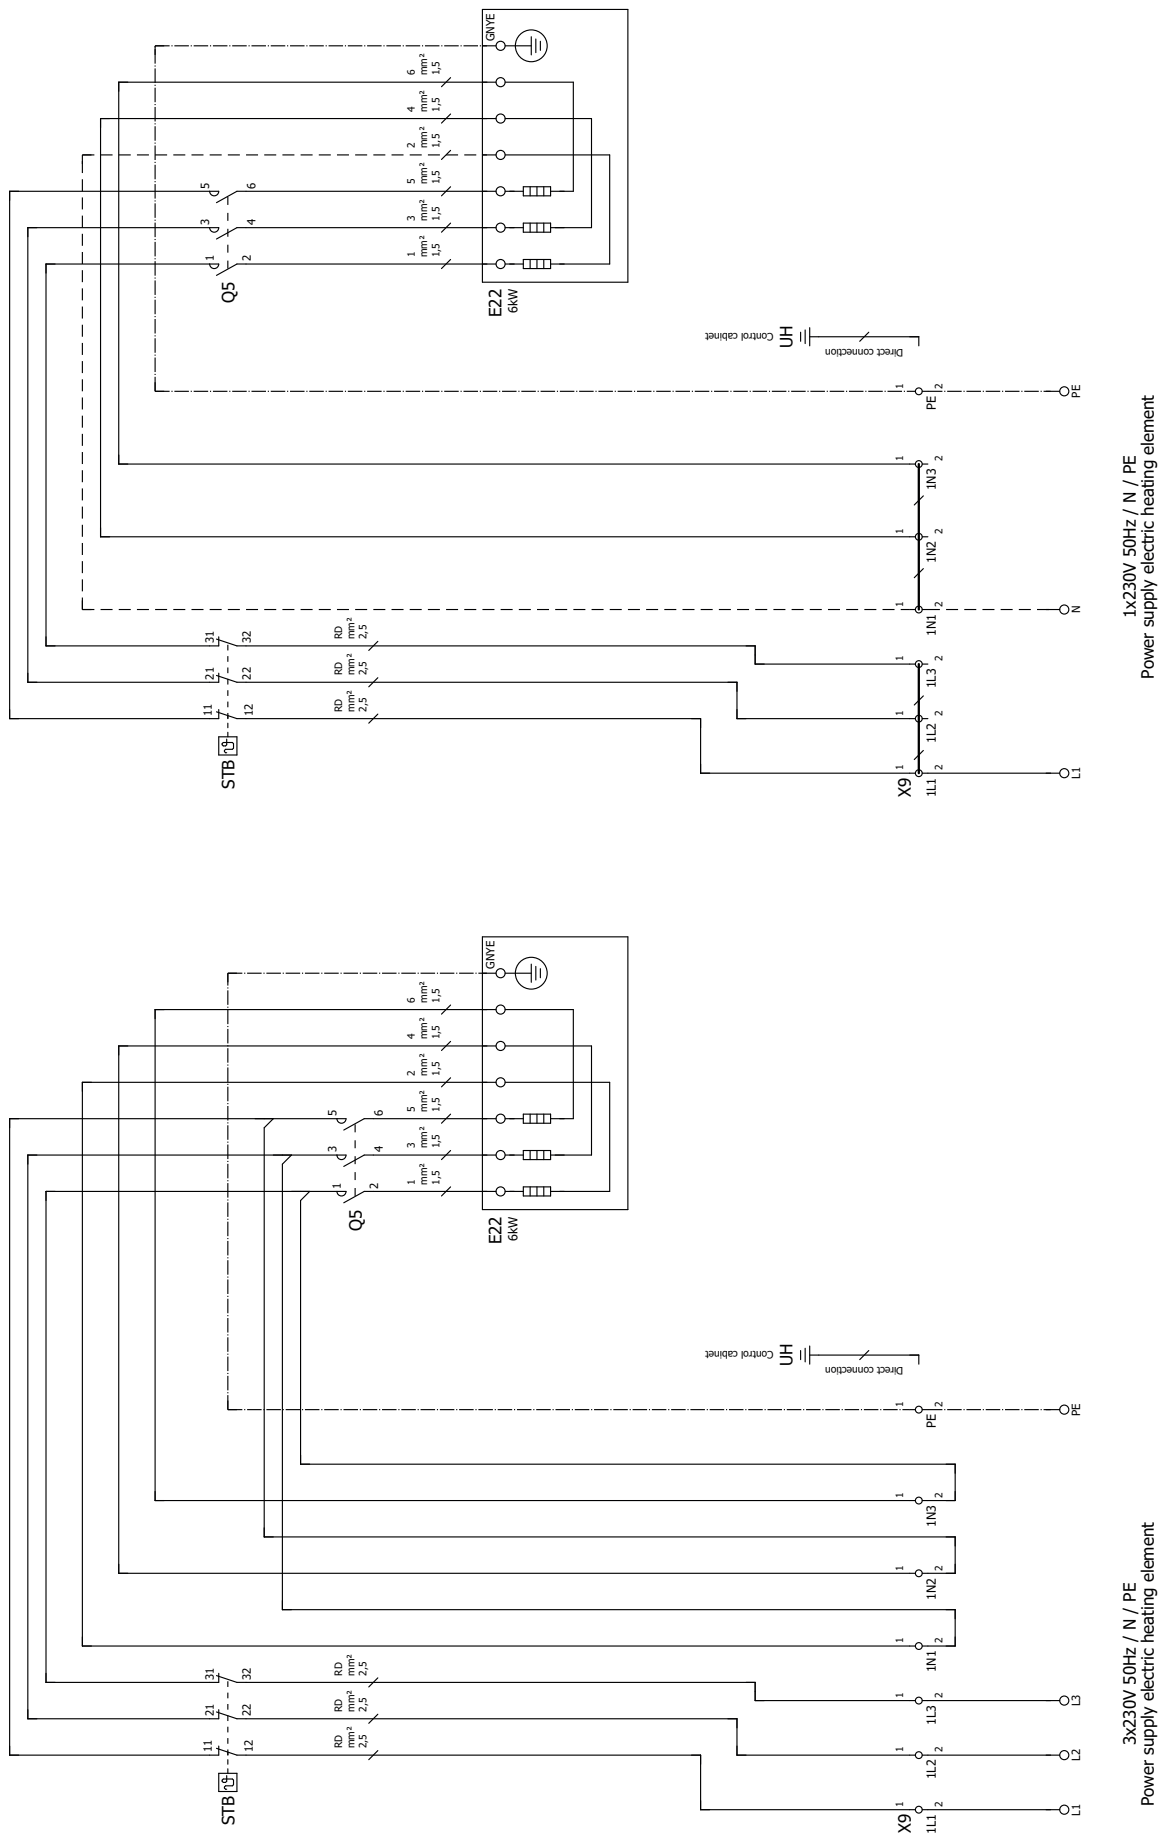






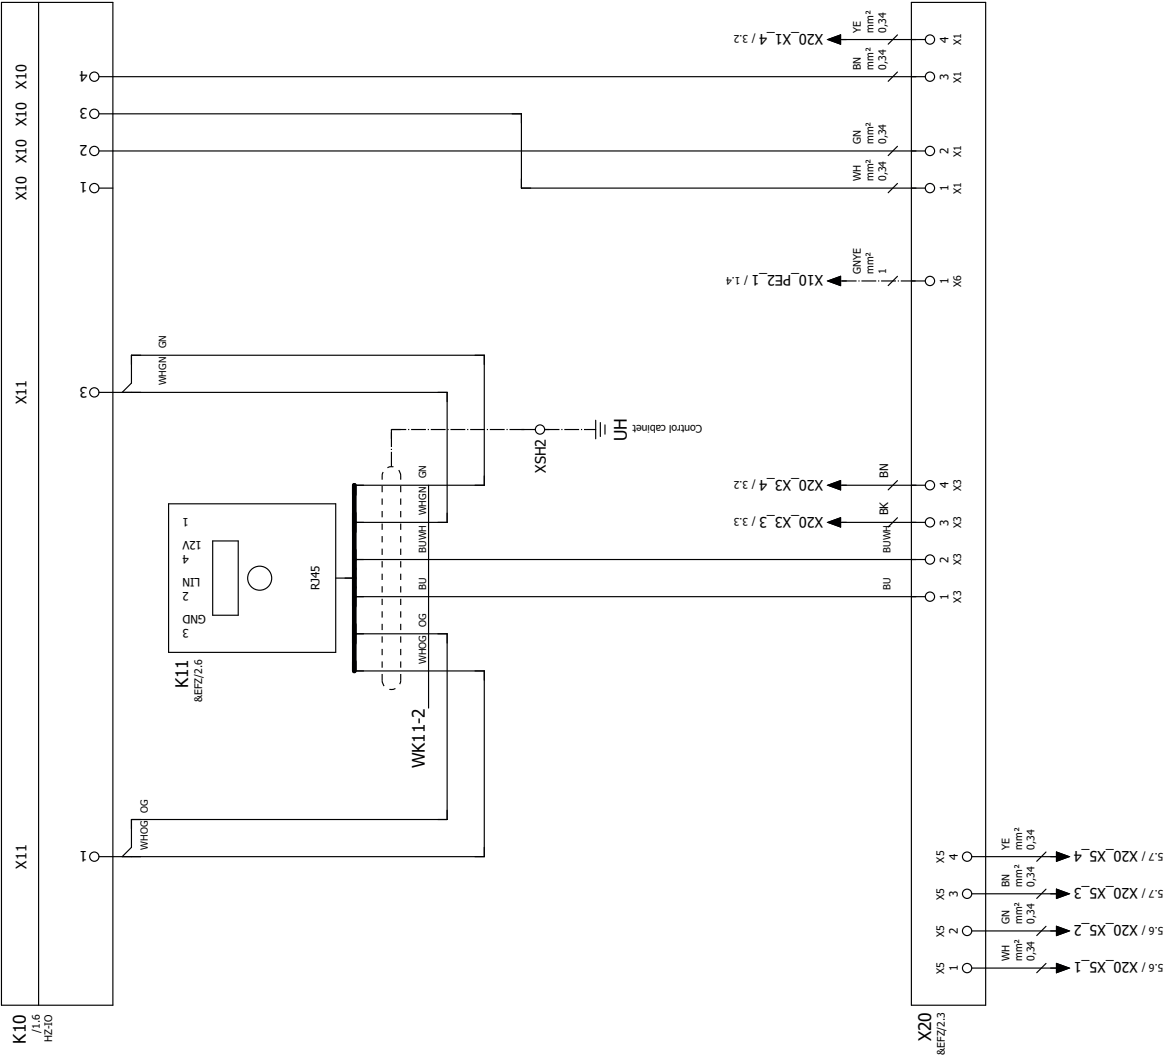





42

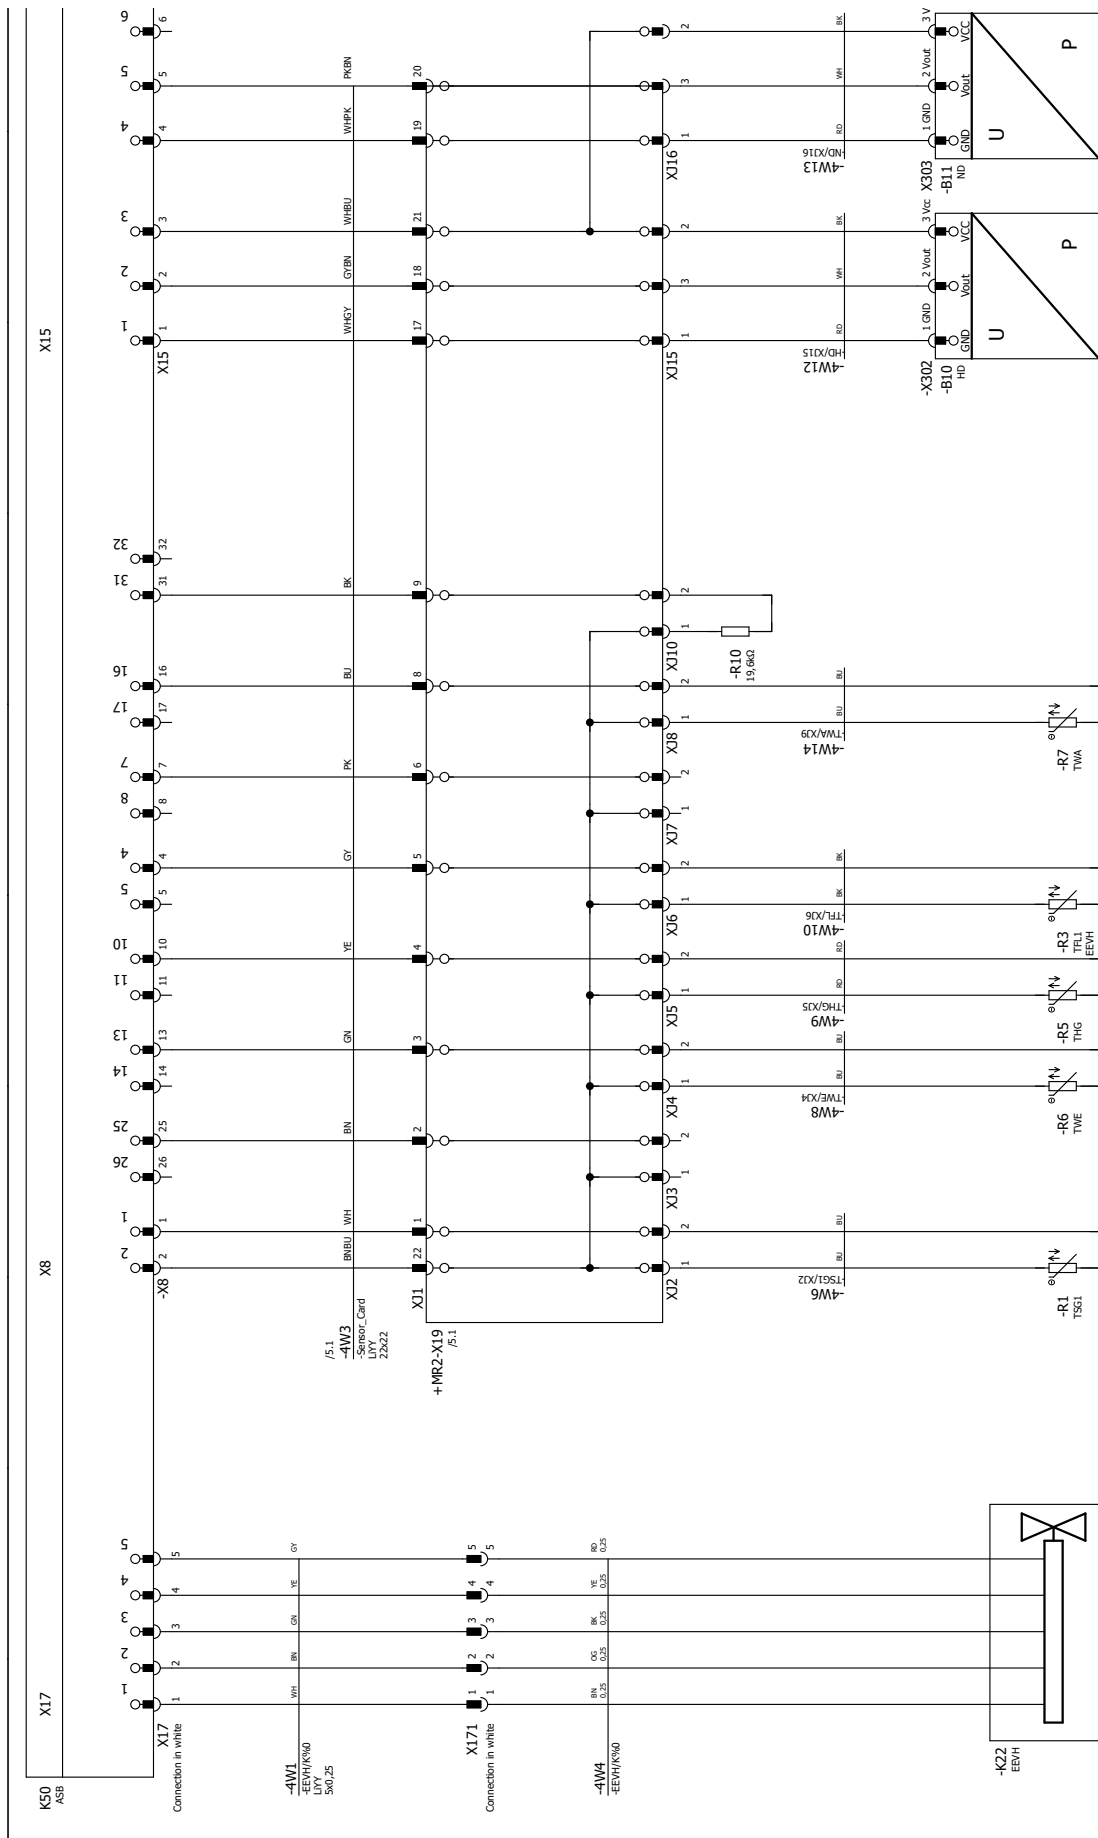



0	1	2	3	4	5	6	7	8	9
Eléments		Description							
B10	Capteur haute pression								
B11	Capteur basse pression								
K22	Soupape d'expansion électronique chauffage								
K50	Platine ASB								
R1	Capteur de gaz d'aspiration compresseur								
R2	Sonde chauffage de compresseur								
R3	Température du liquide chauffage								
R4	Température du liquide rafraîchissement								
R5	Sonde de gaz chaud								
R6	Sonde entrée source de chaleur								
R10	Résistance à codage; 19,6kOhm								





alpha innotec –
a brand of
ait-deutschland GmbH

Subject to technical changes.

ait-deutschland GmbH

Industriestr. 3
95359 Kasendorf
Germany

[T] +49 9228 / 9906-0
[F] +49 9228 / 9906-189
[E] info@alpha-innotec.de

www.alpha-innotec.com

