
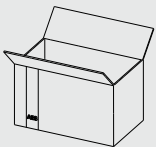


SACE Tmax XT


AUE - Contatti anticipati alla chiusura XT7.
AUE - Early contacts at closing XT7.
AUE - Verfrüht kontakte für die Einsschaltung XT7.
AUE - Contacts anticipé permettant la clôture XT7.
AUE - Contactos temprano para al cierre XT7.
AUE - 合闸预先动作辅助触点 XT7.

XT7

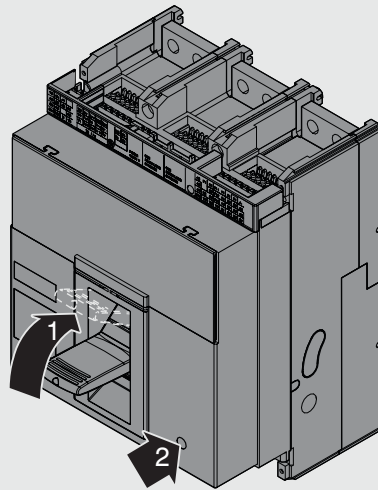

A

1

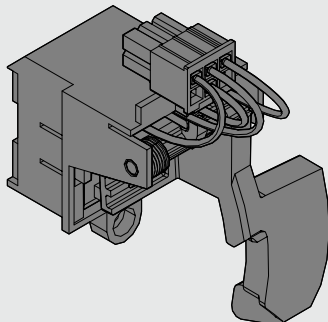


B

1




C

 2




1



F

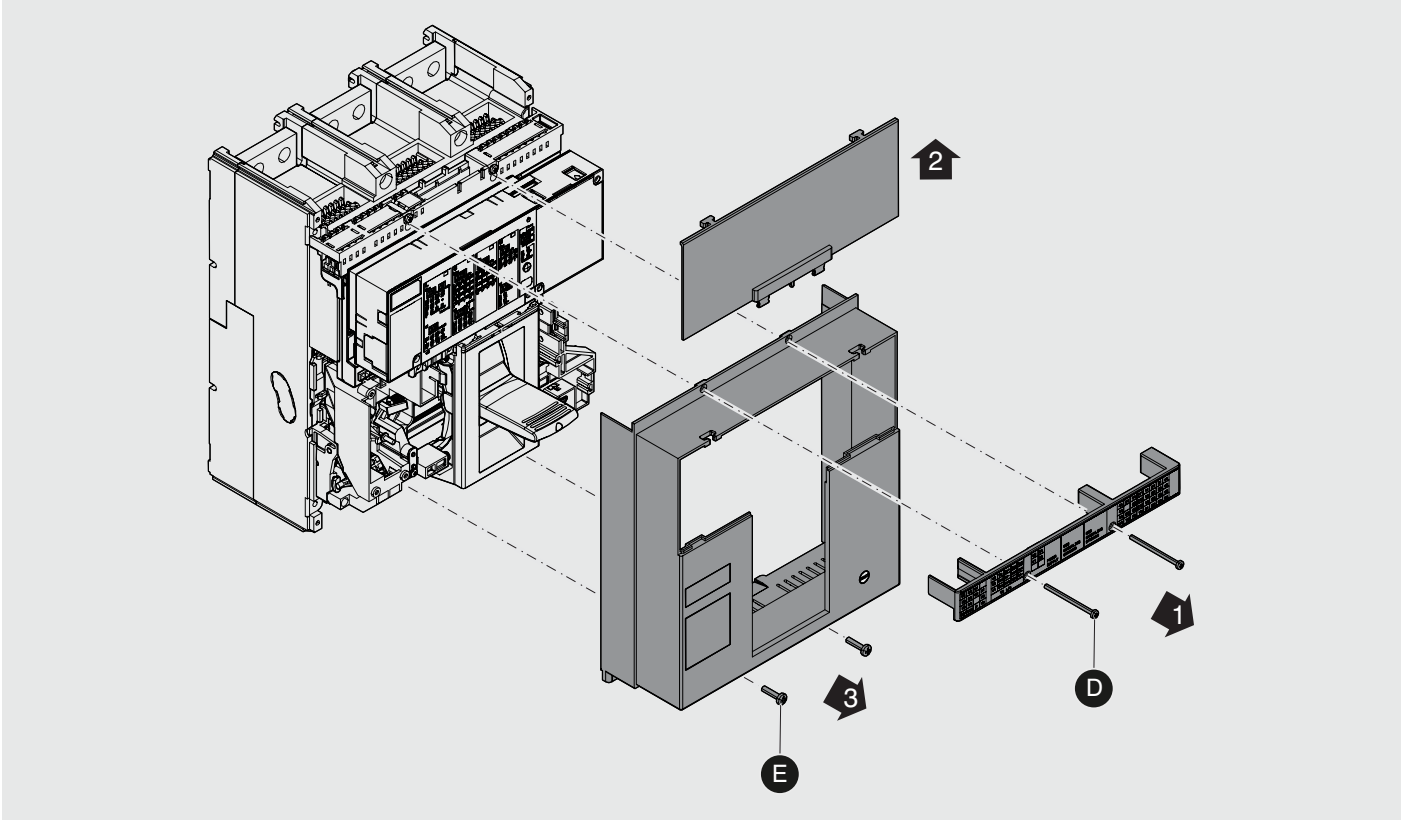



2

F

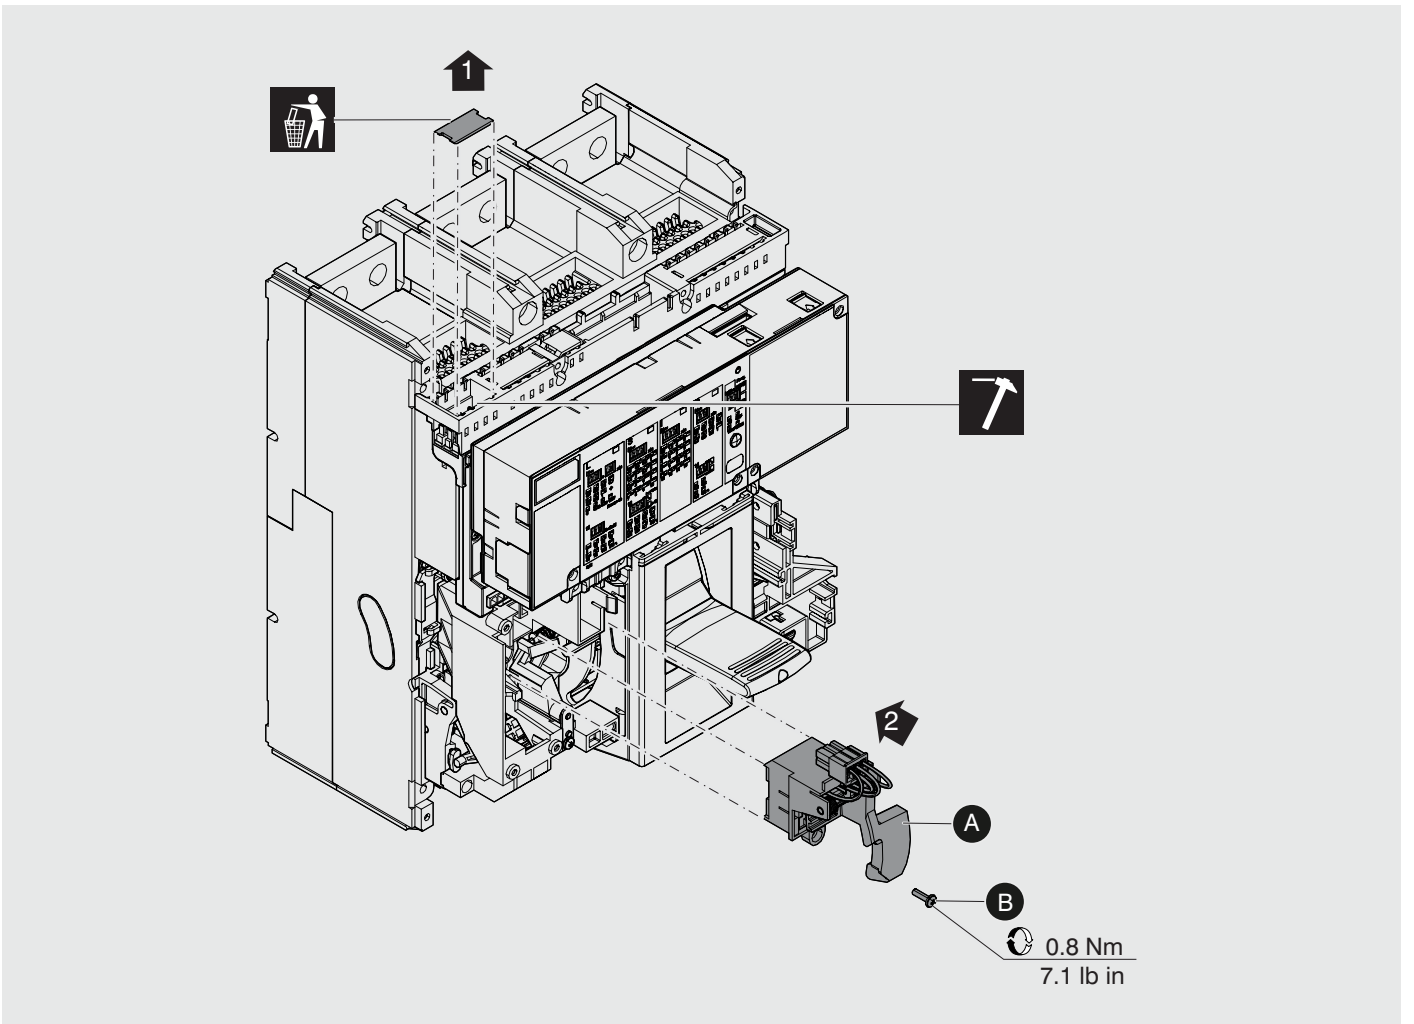

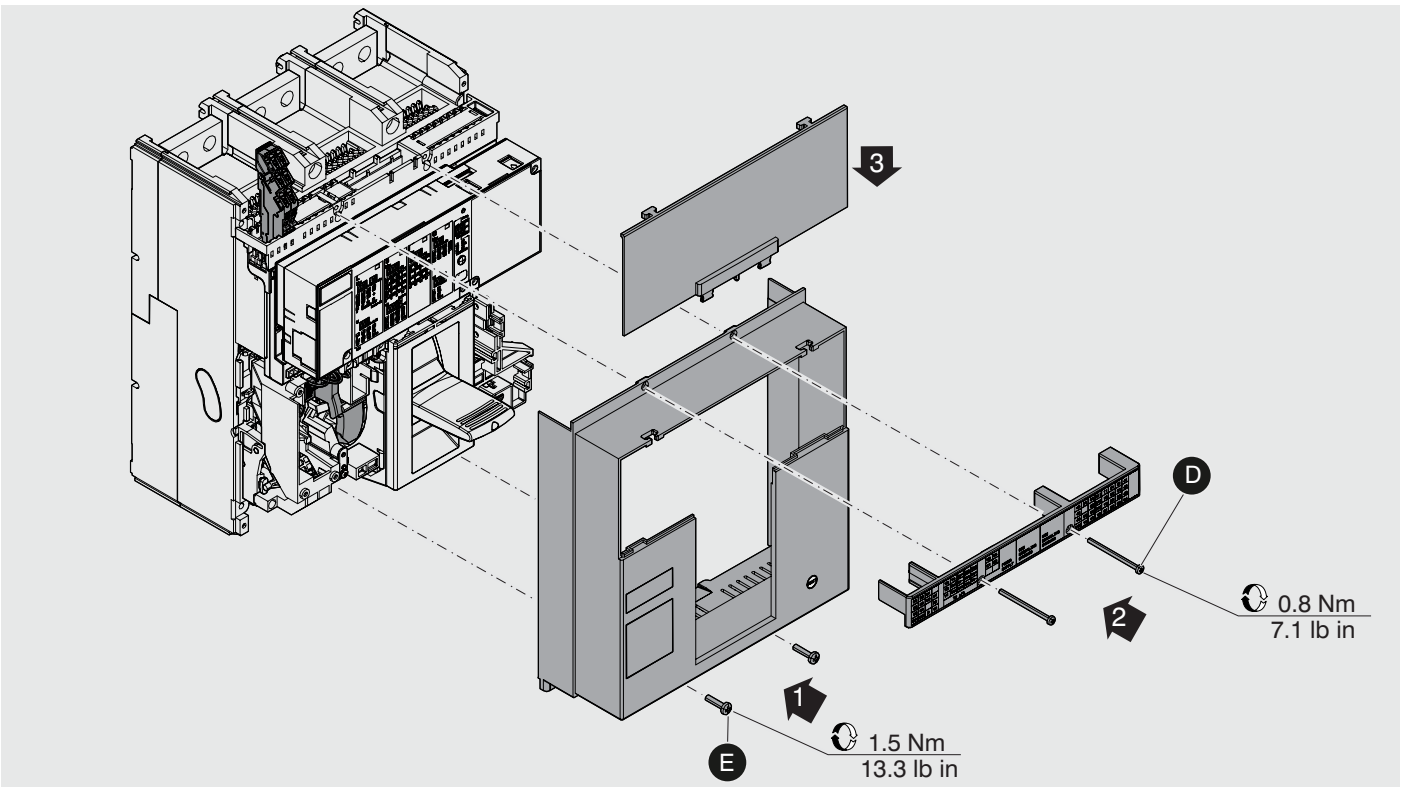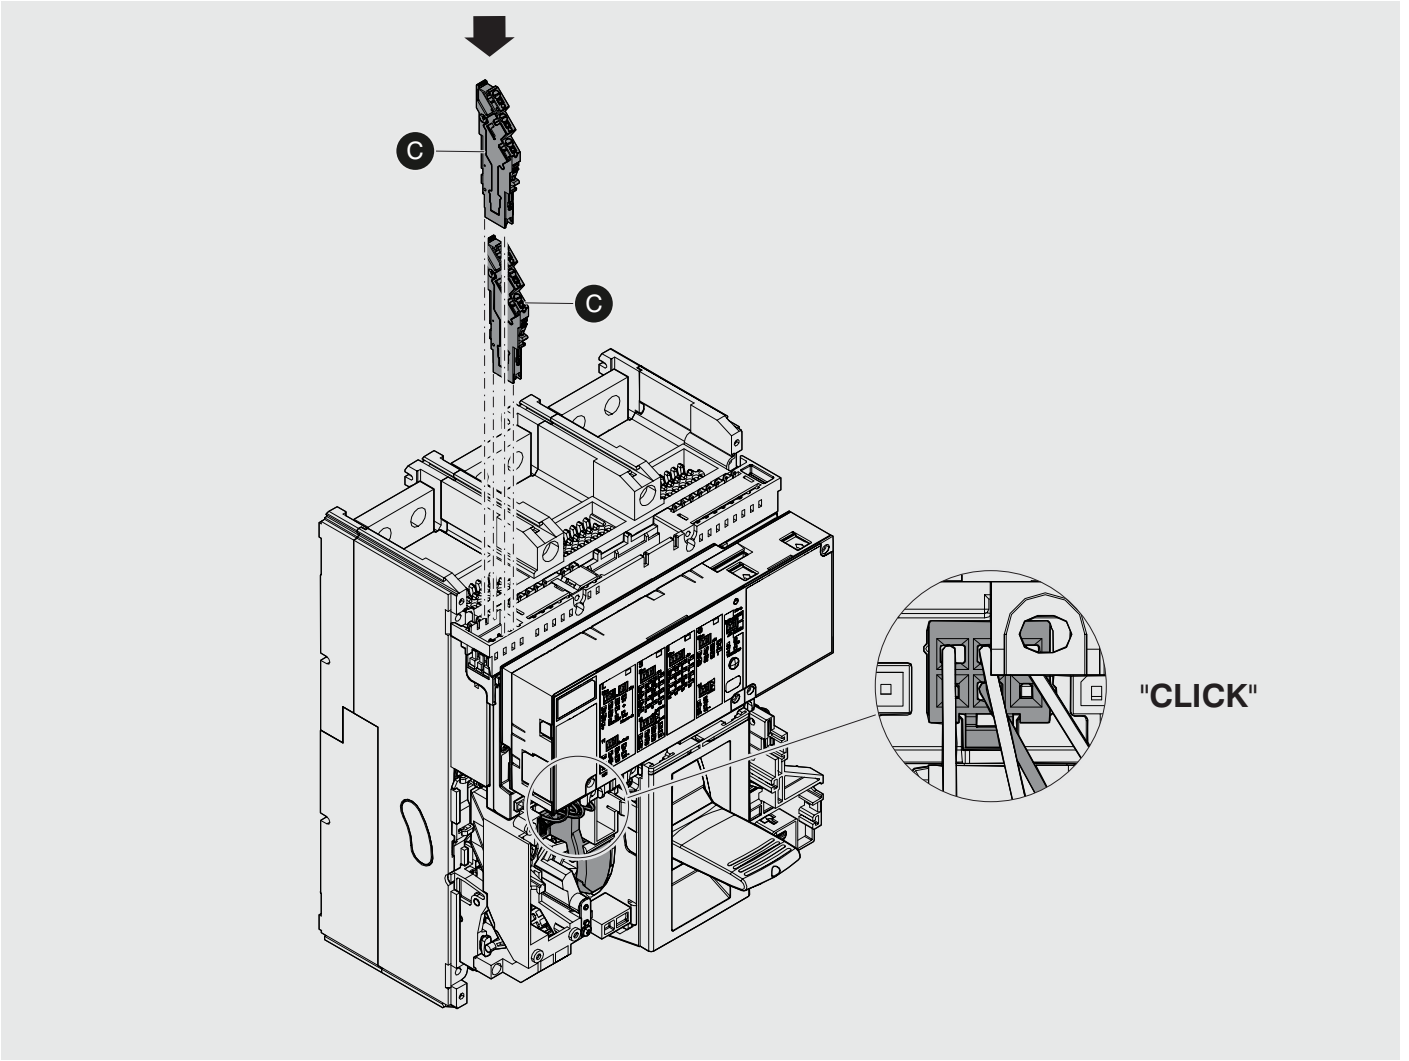



95	15	37	47	V3	Vn	Ge+	Szi	Ne-	24Vdc ONLY	K2	W4					25	D1	C11	11	21	31	41
96	16	38	48	V2	Rct	Ge-	Szo	Ne+		K1	W3					26		C13	12	22	32	42
98	18			V1	Gzo	Szc	Gzi	Rca								28	D2	C12	14	24	34	44
S51	SY	S4/1	S4/2	Trip Unit I/O				EKIP Supply				Module	Module	S52	YU YO2	YO	Q1	Q2	Q3	Q4		

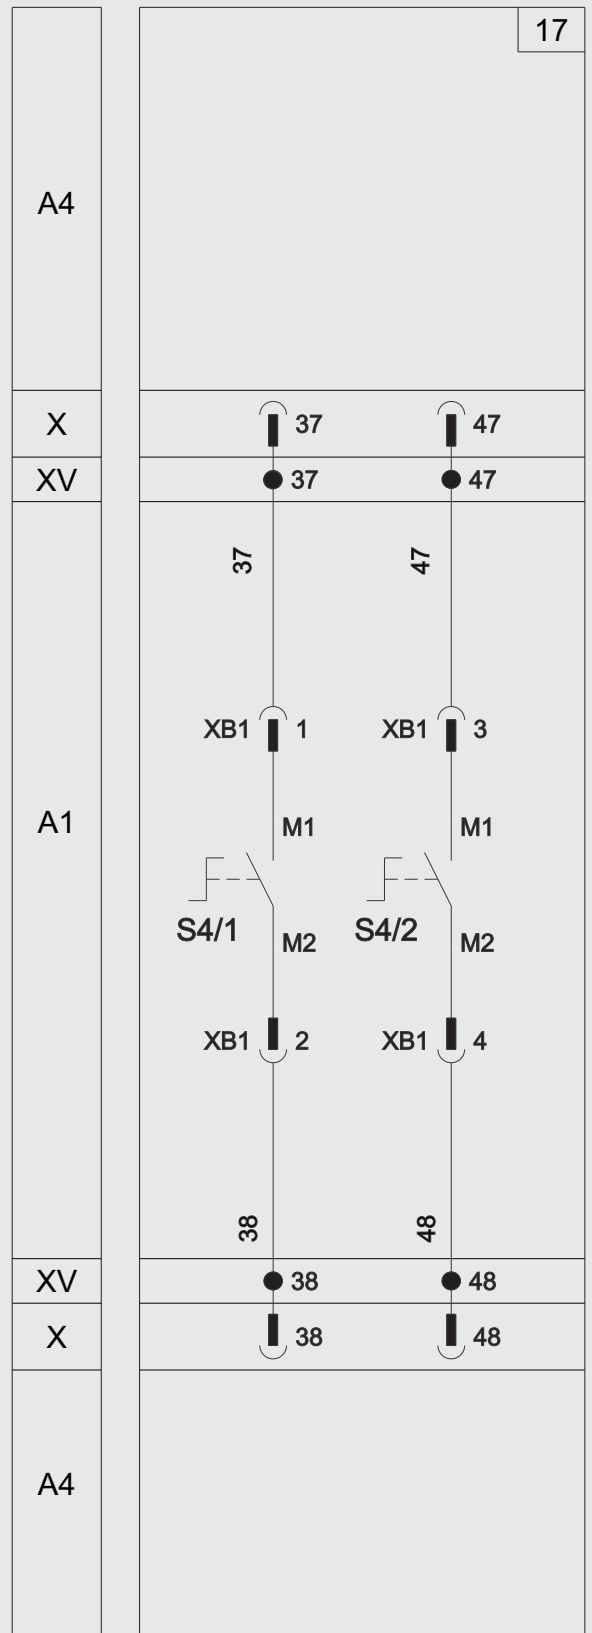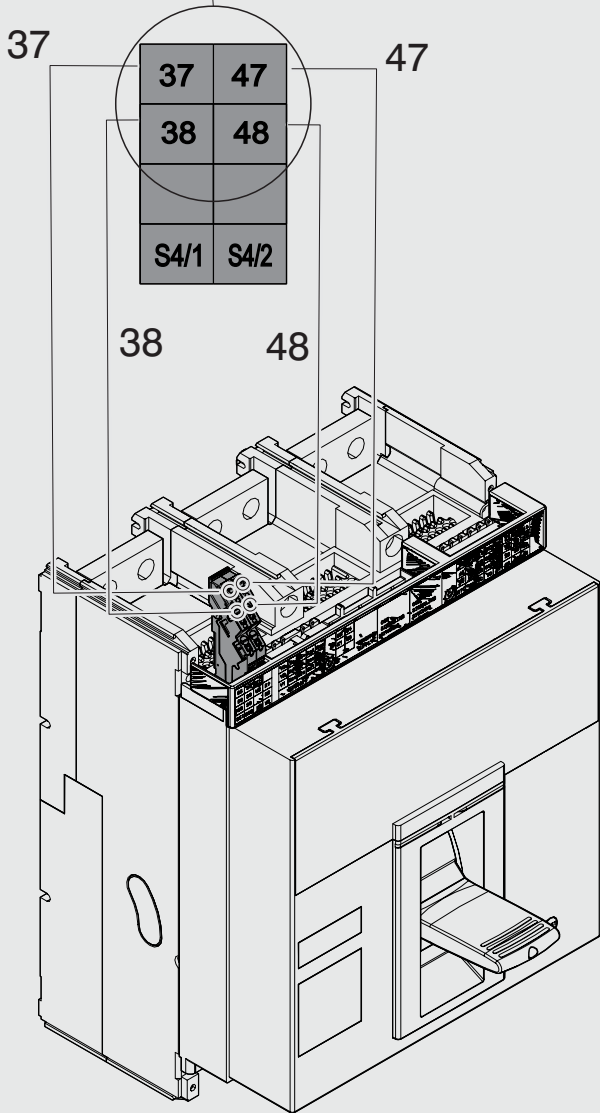

6

W 7

W

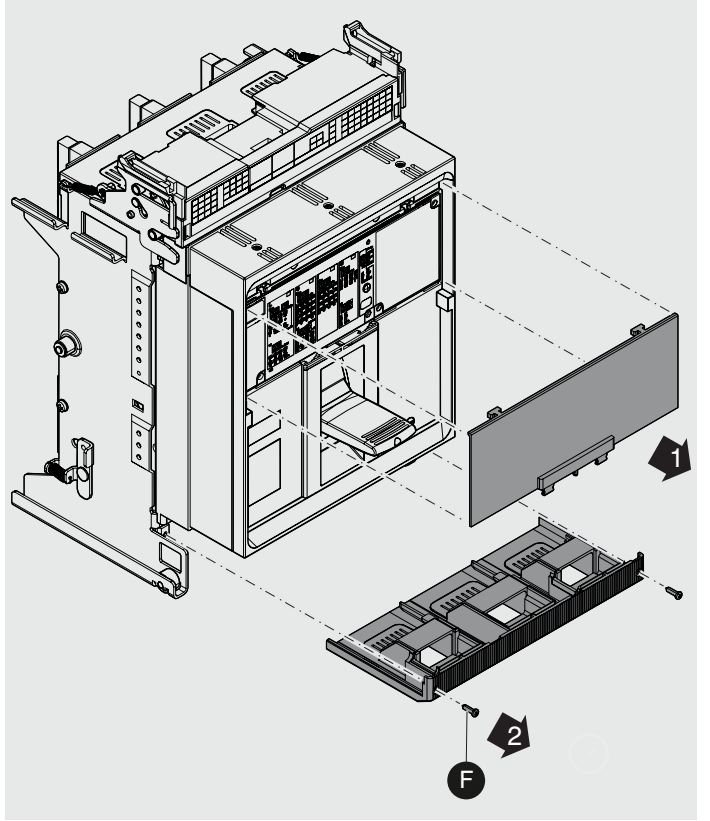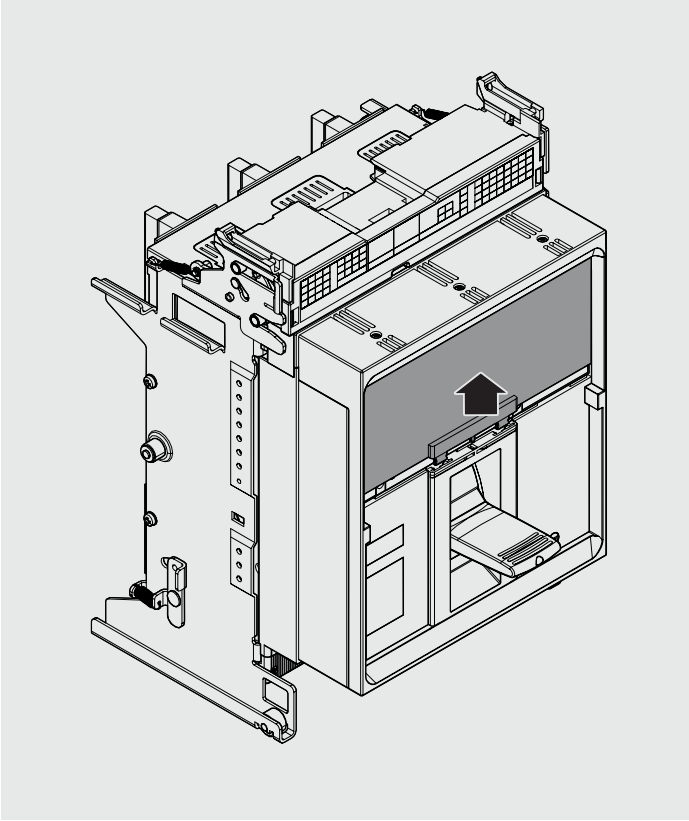

8

W 9

W

