

Addressable base sounder
 Base con sirena per collegamento su loop
 Basis met sirene voor aansluiting op loop
 Base con sirena para conexión en bucle
 Base avec sirène pour connexion sur boucle

CERTIFIED MANAGEMENT SYSTEMS



WWW.comelitgroup.com
 Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy




22

1293

Dop No: 058

EN 54-3:2001+A1:2002+A2:2006
 EN 54-17:2005/AC:2007
 Sounder Type: A

A-weighted sound level diagram
 A-Schema diffusione potenza sonora
 A - gewogen schema van de geluidsssterkte
 A diagramma esaminando de fuerza del sonido
 Diagramme, puissance sonore (pondération A)

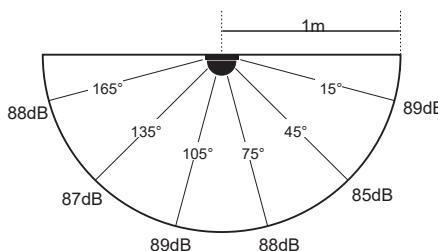

Installation - Installazione - Installatie - Installatie - Instalación - Installation

IP21C with detector only

-10°C ÷ +55°C

~125g


0.4 ÷ 2.0 mm²

Indoor use - Uso Interno - Interne montage - Montage interno - Montage à l'intérieur

Outdoor use - Uso Esterno - Externe montage - Montage esterno - Montage à l'extérieur



1

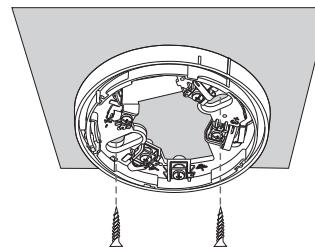

2 Address Programming

Programmazione indirizzo

Het adres programmeren

Programar dirección


Attribution d'adresse

You can program the address also directly from the panel. - È possibile programmare l'indirizzo direttamente dalla centrale. - Het adres kan ook direct van het paneel worden geprogrammeerd. - Ud. podrá programar la dirección también directamente desde el panel. - Vous pouvez également programmer l'adresse directement à partir du panneau.




3

Installation - Installazione - Installatie - Instalación - Installation

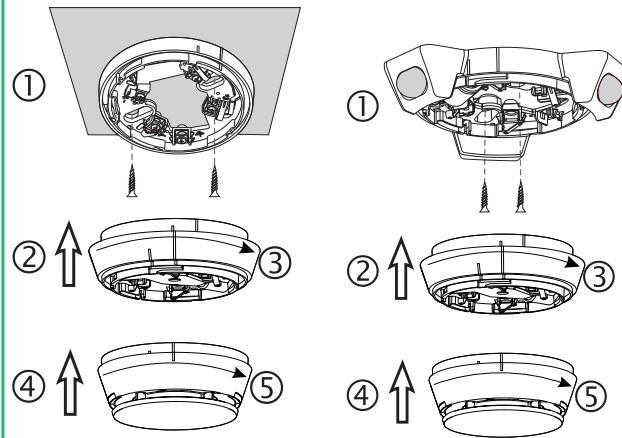

4 Wiring Diagram - Schema di collegamento - Verbindingsschema - Esquema de conexión - Schéma de raccordement

Fire Panel - Centrale - Brandmeldpaneel - Panel de alarma incendio

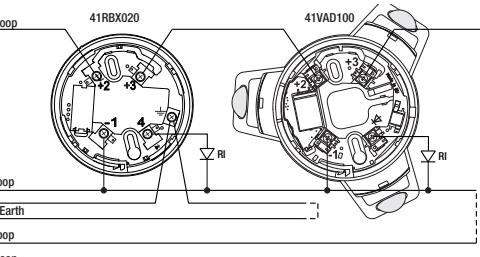

Legend - Legenda - Legende - Leyenda - Légende:

RI - Remote Indicator - Indicazione remota (LED fuoriporta) - Afgelegen paneel (over de deur) - Indicador exterior - Indicateur d'huisserie

+Loop - Positive loop wire - Positivo del Loop - Positieve pool - Bucle positivo - (Boucle) Sortie positive

-Loop - Negative loop wire - Negativo del Loop - Negatieve pool - Bucle negativo - (Boucle) sortie positive

Earth - Earth point - Messa a terra - Aardingspool - Bucle de toma de tierra - Sortie de mise à la terre

Tone types and description - Tipologia di toni e descrizioni - Geluidtypes en beschrijving - Tipos de sonidos y su descripción - Tonalités et leurs descriptions

Tone Toni Geluid Tono Tonalité	Tone Type Tipi di toni Type Tipo	Tone Description Descrizioni dei toni Beschrijving Descripción
1	—	970Hz
2		800Hz/970Hz @ 2Hz
3		800Hz - 970Hz @ 1Hz
4	— — —	970Hz 1s OFF/1s ON
5		970Hz, 0.5s/ 630Hz, 0.5s
6	— — —	554Hz, 0.1s/ 440Hz, 0.4s (AFNOR NF S 32 001)
7	↑↑↑	500 - 1200Hz, 3.5s/ 0.5s OFF (NEN 2575:2000)
8	— — —	420Hz 0.625s ON/0.625s OFF (Australia AS1670 Alert tone)
9	↑↑↑	500 - 1200Hz, 0.5s/ 0.5s OFF x 3/1.5s OFF (AS1670 Evacuation)
10		550Hz/440Hz @ 0.5Hz
11	---	970Hz, 0.5s ON/0.5s OFF x 3/ 1.5s OFF (ISO 8201)
12	---	2850Hz, 0.5s ON/0.5s OFF x 3/1.5s OFF (ISO 8201)
13		1200Hz - 500Hz @ 1Hz (DIN 33 404)
14	—	400Hz
15		550Hz, 0.7s/1000Hz, 0.33s
16		1500Hz - 2700Hz @ 3Hz
17	—	750Hz
18	—	2400Hz
19	—	660Hz
20	— — —	660Hz 1.8s ON/1.8s OFF
21	— — —	660Hz 0.15s ON/0.15s OFF
22		510Hz, 0.25s/ 610Hz, 0.25s
23		800/1000Hz 0.5s each (1Hz)
24		250Hz - 1200Hz @ 12Hz
25		500Hz - 1200Hz @ 0.33Hz
26		2400Hz - 2900Hz @ 9Hz
27		2400Hz - 2900Hz @ 3Hz (2500Hz - main sound frequency/ frequenza tono principale/ Hoofdgeluidfrequentie/ frecuencia básica/ fréquence de base)
28		800Hz - 970Hz @ 100Hz
29		800Hz - 970Hz @ 9Hz
30		800Hz - 970Hz @ 3Hz
31	—	800Hz, 0.25s ON/1s OFF
32	↑↑↑↑↑	600Hz - 1100Hz, 2.6s/0.4s OFF

