

Quick Start Guide POWERdrive 45D/90D/180D


(PWRxxxD1)

Colour
is our nature

Connecting and configuring the POWERdrive 45D/90D/180D



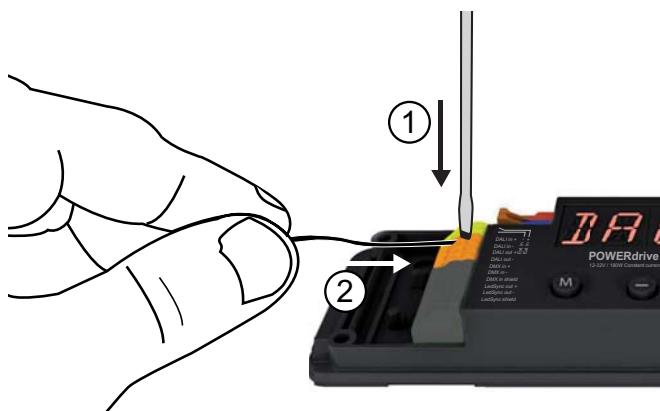
A Removing the cover



E Optional: Connecting external control device or network cabling



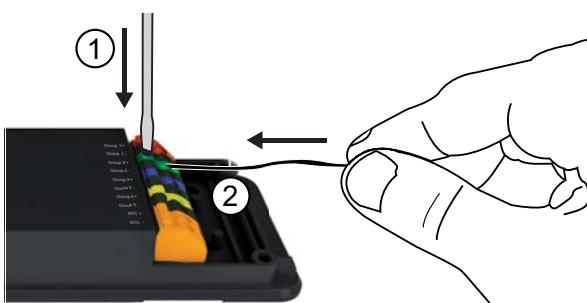
B Removing the strain reliefs



C Connecting LED wires






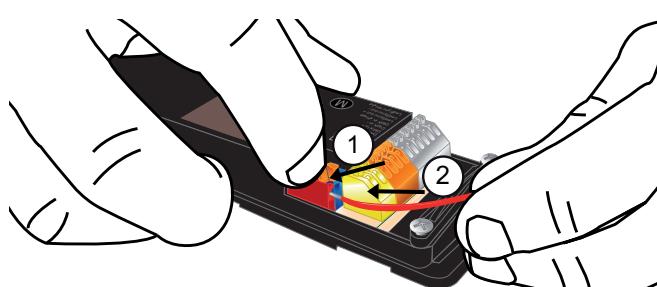
F Fastening the strain reliefs




D Connecting power supply wires



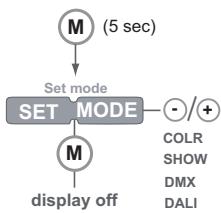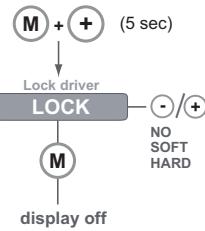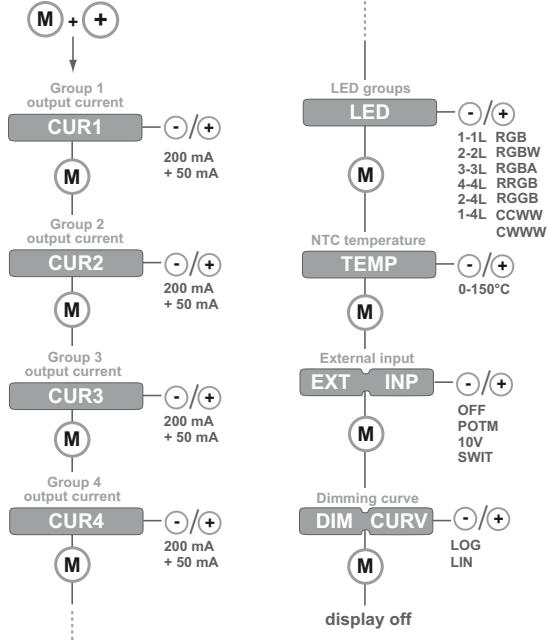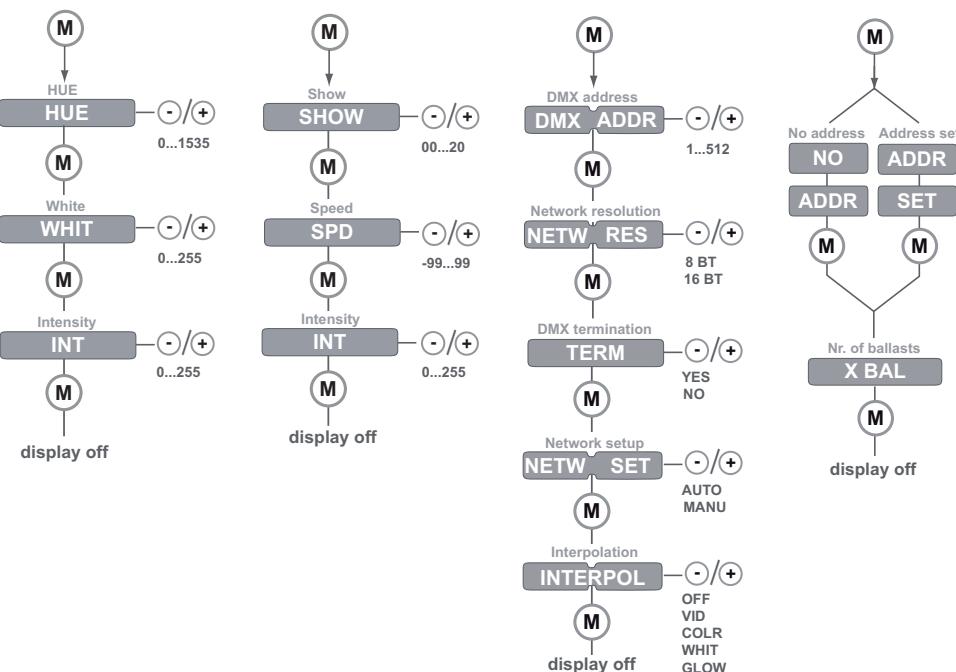G Configuring the POWERdrive

Manual configuration**1. Select mode of operation:****Other features****Locking the configuration****2. Set LED current and LED groups:****3. Standalone operation - Colour*- or Standalone operation - Show - or Networked operation - DMX or DALI -**

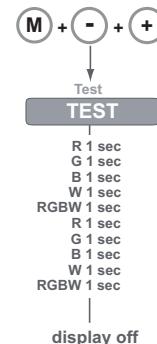* The colour menu depends on the LED group settings you have selected in step 2.

Visual test run**Reset to factory defaults**