

Wireless two-channel transmitter according to the Easywave protocol

410-00362



The wireless two-channel transmitter is suitable for flush mounting and may only be used to control wireless receivers. By using this two-channel transmitter, you can expand the switching function of existing switches or push buttons via a receiver. The two-channel transmitter checks whether a switch/push button is live and transmits the corresponding code (A, B, C or D) to the wireless receiver, which in turn switches the consumer. This wireless two-channel transmitter cannot be used in Niko Home Control installations.



Technical data

Wireless two-channel transmitter according to the Easywave protocol

- Not compatible with the wireless bridge, nor with the wireless smart hub
- Wireless communication protocol: Easywave
- Dimensions (HxWxD): 25 mm x 48 mm x 48 mm
- Marking: CE

Wiring diagram

