

Data Sheet | Item Number: 210-836
Push-button marker; for frames, to be snapped in or glued in place; 27 x 17.5 mm;
silver-colored
<https://www.wago.com/210-836>



Color: ■ silver-colored

Technical data	
Suitable	for Siemens push-button frame
Marking method	Thermal transfer
Marking	plain
Delivery form	Roll
Delivery form configuration	350 markers/reel; 1 line
Printing device	Smart Printer (thermal transfer printer)
Physical data	
Height	27 mm
Width	17.5 mm
Depth	0.65 mm
Marking surface	27 x 17.5 mm
Mechanical data	
Mounting type	Snap-in or adhesive mounting
Smear resistance	in conjunction with 258-5005 Ink Ribbon
Material data	
Color	silver-colored
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	Acrylic; permanent; foamed
Halogen-free	Yes
Weight	110 g
Fire load	0 MJ




Environmental requirements	
Ambient temperature (storage)	≥+22 °C
Relative humidity	40 ... 50 %

Commercial data	
ETIM 9.0	EC001288
ETIM 8.0	EC001288
PU (SPU)	1 pcs
Packaging type	Bag
Country of origin	DK
GTIN	4055143965422
Customs tariff number	39191080888


Environmental Product Compliance	
RoHS Compliance Status	Compliant,No Exemption

Downloads

Environmental Product Compliance

Compliance Search	
Environmental Product Compliance 210-836	

Documentation

Operating Instructions			
210-852 Information on handling print material	1	pdf	1004.72 KB
	28.08.2020		

1 Compatible Products

1.1 Required Accessories

1.1.1 Cover

1.1.1.1 Cover

[Item No.: 210-837](#)
Cover; for frames, snap-in type, 27 x 17.5 mm; halogen-free; transparent

Installation Notes

Stick on frame



Remove the push-button label from the carrier film.



Stick the push-button label onto the push-button frame.



WAGO's push-button label is attached to the push-button frame. A cover cannot be applied.

Snap into frame



Remove the push-button label from the carrier film. Press and hold the pre-punched carrier film to do this.



Snap the push-button label, with the carrier film on the back, on to the push-button frame. Only the area of the push-button label outside the remaining carrier film is adhesive.



Optional: A cover may also be installed on a push-button frame equipped with latches.



Push-button label and cover are snapped on to the push-button frame.