



finder[®]
RELAYING INNOVATION

**THREE PHASE ENERGY
METER 7E.85**

RISK INFORMATION 2

INTRODUCTION

- PRODUCT INTRODUCTION 3
- PRODUCT CHARACTERISTICS 3
- MEASUREMENTS 3
- SETUP 3
- MODELS TABLE 4

TECHNICAL PARAMETERS

- TECHNICAL PARAMETERS 4
- ACCURACY 4
- COMMUNICATION 5
 - RS485 MODBUS RTU 5
 - ETHERNET MODBUS TCP (ONLY FOR 7E.85.8.400.0410) 5
 - M-BUS COMMUNICATION (FOR 7E.85.8.400.0312) 5
- PERFORMANCE CRITERIA 5
- DIMENSIONS 6
- WIRING DIAGRAM 6
 - CURRENT AND VOLTAGE INPUTS 6
 - DEFINITIONS OF OTHER TERMINALS 7
 - WIRING GUIDE 7
 - DEFINITIONS OF OTHER TERMINALS 8

OPERATION

- INSTALLATION DISPLAY 8
- BUTTON FUNCTIONS 9
- MEASUREMENTS 10
 - VOLTAGE AND CURRENT 10
 - FREQUENCY, POWER FACTOR AND DEMAND 11
 - POWER 12
 - ENERGY 13
 - SETUP MODE 15
 - PASSWORD VALIDATION 15
 - COMMUNICATION ADDRESS 15
 - M-BUS SETUP (ONLY FOR 7E.85.8.400.031X) 16
 - M-BUS SECONDARY ADDRESS SETTING 16
 - BAUD RATE SETTING 16
 - PARITY 17
 - STOP BITS 17
 - RS485 MODBUS RTU SETUP (FOR 7E.85.8.400.021X) 18
 - BAUD RATE SETTING 18
 - PARITY 18
 - STOP BITS 19
 - CT SETTING 19
 - PT SETTING 20
 - PULSE SETUP (NOT AVAILABLE ON 7E.85.8.400.0410) 20
 - PULSE RATE SETUP 20
 - PULSE DURATION SETUP 21
 - DEMAND INTERVAL TIME SETUP 21
 - BACKLIT POWER TIME SETUP 22
 - SYSTEM TYPE SETUP 22
 - CO2 SETUP 22
 - ETHERNET MODBUS TCP SETUP (ONLY FOR 7E.85.8.400.0410) 23
 - DHCP FUNCTION SETUP 23
 - TCP IP ADDRESS SETUP 23
 - SUBNET MASK ADDRESS SETUP 24
 - TCP GATEWAY ADDRESS SETUP 24
 - TCP IP PORT SETUP 25
 - CLR SET-UP 25
 - PASSWORD MODIFICATION SET-UP 25
 - CURRENT DIRECTION SET-UP 26

RISK INFORMATION

INFORMATION FOR YOUR OWN SAFETY

This manual does not contain all of the safety measures operating the equipment (module, device) for different conditions and requirements. However, it does contain information which you must know for your own safety and to avoid damages. These information are highlighted by a warning triangle indicating the degree of potential danger.



WARNING

This means that failure to observe the instruction can result in death, serious injury or considerable material damage.



CAUTION

This means hazard of electric shock and failure to take the necessary safety precautions will result in death, serious injury or considerable material damage.

QUALIFIED PERSONNEL

Operation of the equipment (module, device) described in this manual may only be performed by qualified personnel. Qualified personnel in this manual means person who are authorized to commission, start up, ground and label devices, systems and circuits according to safety and Regulatory standards.

PROPER HANDLING

The prerequisites for perfect, reliable operation of the product are proper transport, proper storage, installation and proper operation and maintenance. When operating electrical equipment, parts of this equipment automatically carry dangerous voltages. Improper handling can therefore result in serious injuries or material damage.

- Use only insulating tools
- Do not connect while circuit is live (hot)
- Place the meter only in dry surroundings
- Do not mount the meter in an explosive area or expose the meter to dust, mildew and insects
- Make sure the wires are suitable for the maximum current of this meter
- Make sure the AC wires are connected correctly before activating the current/voltage to the meter
- Do not touch the meter connecting clamps directly with metal, blank wire and your bare hands as you may get electrical shock
- Make sure the protection cover is placed after installation
- Installation, maintenance and reparation should only be done by qualified personnel
- Never break the seals and open the front cover as this might influence the function of the meter, and will cause no warranty
- Do not drop, or allow strong physical impact on the meter as the high precisely components inside may be damaged
- Designed to be mounted inside of switchboards or cabinet on DIN RAIL
- This device must have a suitable sized Circuit Breaker feeding the Multi Function Energy Meter so it does not exceed the maximum rated current
- The supply wiring of this device shall be suitable sized cable to match the installed circuit breaker
- A Disconnection Device (Circuit Breaker) should be installed close to the Multi Function Energy Meter
- The Disconnection Device shall be marked as the Disconnection Device for the Multi Function Energy Meter

DISCLAIMER

We have checked the contents of this publication and every effort has been made to ensure that the descriptions are as accurate as possible.

However, deviations from the description cannot be completely ruled out, so that no liability can be accepted for any errors contained in the information given.

The data in this manual is checked regularly and the necessary corrections are included in subsequent editions.

We are grateful for any improvements that you suggest.

PRODUCT INTRODUCTION

The 7E.85 energy meters measures and displays the characteristics of single phase two wire (1p2w), single phase three wire (1p3w), three phase three wire (3p3w,) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVAh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product. The requisite current input(s) are obtained via current transformers(CT). The 7E.85 energy meters can be configured to work with a wide range of CTs with 1A/5A output, giving the unit a wide range of operation. Three types of communication port are available on the meter for remote data transmission: RS485 Modbus , M-Bus and Ethernet Modbus TCP.

This unit can be powered from a separate auxiliary AC powersupply. Alternatively it can be powered from the monitored supply, where appropriate.

PRODUCT CHARACTERISTICS

- Bi-directional measurement IMPORT and EXPORT
- Ethernet Modbus TCP (Only for 7E.85.8.400.0410)
- Modbus RS485 RTU (For 7E.85.8.400.0210, 7E.85.8.400.0212)
- M-Bus EN13757-3 (Only for 7E.85.8.400.0312)
- Multi-parameters measurement
- LCD with white backlit, adjustable backlit time

MEASUREMENTS

- Phase voltage: V1, V2, V3
- Line voltage: V1-2, V2-3, V3-1
- Current: I1, I2, I3,IN
- Active power: P1, P2, P3, P_total (total active power)
- Reactive power: Q1, Q2, Q3, Q_total (total reactive power)
- Apparent power: S1, S2, S3, S_Total (total apparent power)
- Frequency: Hz
- Power factor: PF
- Active energy: Ep_imp (import active energy), Ep_exp (export active energy), Ep_total (total active energy)
- Reactive energy: Eq_imp (import reactive energy), Eq_exp (export reactive energy), Eq_total (total reactive energy)
- THD-I and THD-U
- Maximum demand: MD

SETUP

- Ethernet Modbus TCP setup
- Modbus RS485 RTU & M-bus EN13757-3 Setup
- Demand Interval Time
- Backlit time
- Supply system 1p2w, 3p3w,3p4w
- Reset
- Password modification

MODELS TABLE

MODEL	RS485 MODBUS	MBUS EN13757-3	TARIFFS (RTC)	DUAL SOURCES	ETHERNET TCP	DIGITAL INPUT
7E.85.8.400.0210	●	Uscita	5.001			
7E.85.8.400.0212	●			●		
7E.85.8.400.0312		●		●		
7E.85.8.400.0410					●	

TECHNICAL PARAMETERS

TECHNICAL PARAMETERS

Voltage AC (Un)	3*230/400VAC
Voltage range	100 - 276V a.c. (not for 3p3w supplies)
Voltage between phase	172 to 480V a.c (3p supplies only)
Current input	0.05-5(6)A, Max.6A
Over current withstand	20Imax for 0.5S
Frequency rating value	50/60Hz
Frequency range	45 - 65Hz
AC voltage withstand	4KV/1min
Impulse voltage withstand	6kV – 1.2μS waveform
Power consumption	≤ 2W/10VA
Display	LCD with white backlit
Max. reading	9999999.9 kWh/kVArh

ACCURACY

Voltage	0.5% of range maximum
Current	0.5% of normal
Frequency	0.2% of mid frequency
Power factor	1% of unity(0.01)
Active Power	±1% of range maximum
Reactive power	±1% of range maximum
Apparent power	±1% of range maximum
Active energy	Class1 IEC 62053-21/ Class 0.5S IEC62053-22/ Class B or C EN50470-3:2022
Reactive energy	Class2 IEC 62053-23

COMMUNICATION

RS485 MODBUS RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Baud Rate	2400,4800,9600,19200,38400bps
Parity	NONE(default)/ ODD / EVEN
Stop bits	1 or 2
RS485 network address	nnn 3-digit number, 001 to 247Port: 502

ETHERNET MODBUS TCP (ONLY FOR 7E.85.8.400.0410)

For Ethernet Modbus TCP, the following communication parameters can be configured from the Set-up menu:

Type	Ethernet
Protocol	Modbus-TCP
Modbus address range	1-247
IP	192.168.1.200 (default)
Port	502
MASK	255.255.255.0
Gateway	192.168.1.1
DHCP	Off (default)

M-BUS COMMUNICATION (FOR 7E.85.8.400.0312)

The meter provides an M-Bus port for remote communication. The protocol fully comply with EN13757-3.

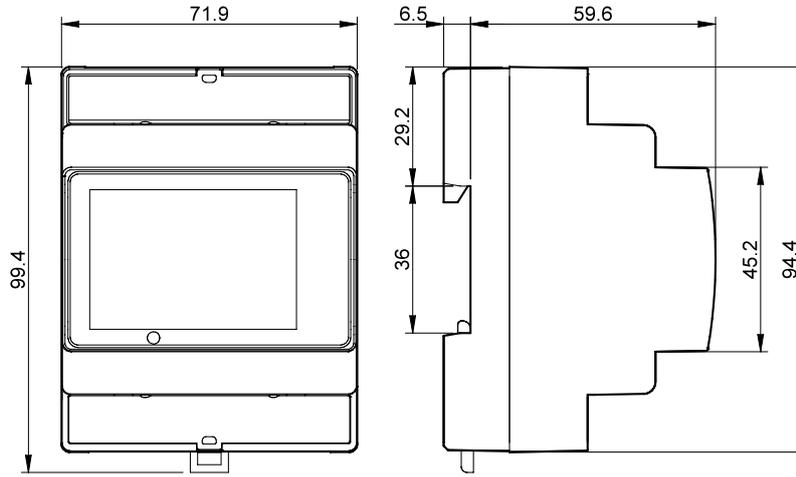
The following communication parameters can be configured via M-bus communication:

Baud Rate	300,600,1200, 2400, 4800, 9600bps
Parity	NONE(default)/ ODD / EVEN
Stop bits	1 or 2
M-Bus network primary address	nnn - 3 digits number from 001 to 250
M-Bus network secondary address	00 00 00 00 to 99 99 99 99

PERFORMANCE CRITERIA

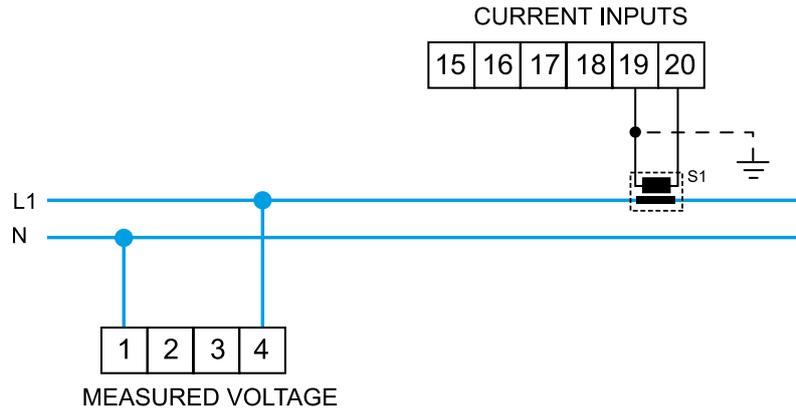
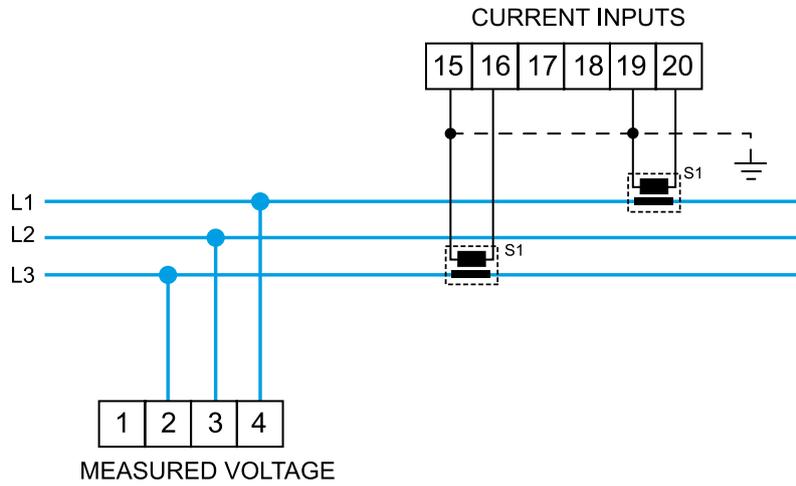
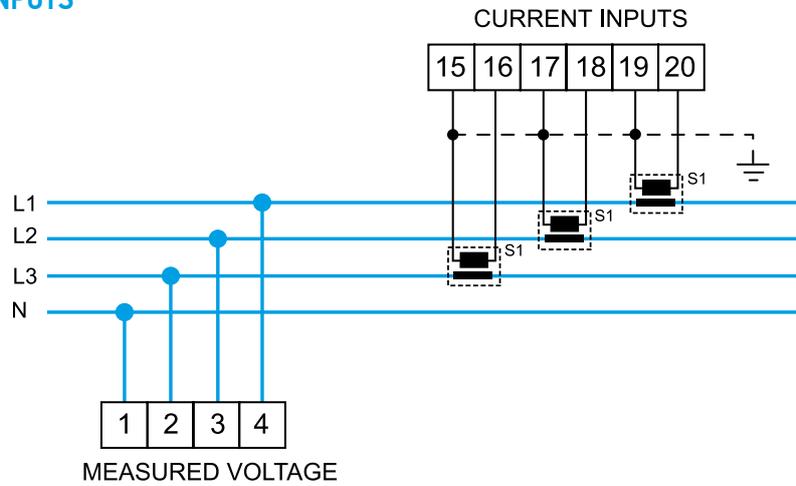
Operation humidity	≤90%
Storage humidity	≤95%
Operating temperature	-40°C~+70°C
Storage temperature	-40°C~+80°C
International standard	IEC62053-21
Installation category	CATIII
Protection against penetration of dust and water	front panel IP51 (indoor)
Insulating encased meter of protective class	II
Altitude	≤2000m

DIMENSIONS

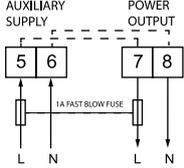
 
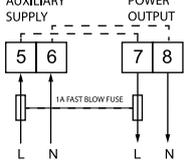
 
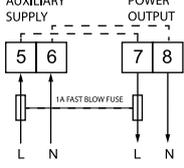
 
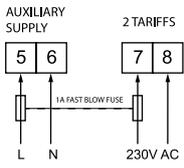
 
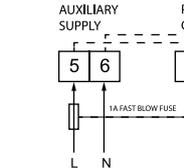
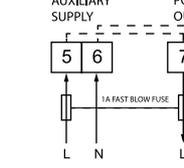
 


WIRING DIAGRAM

 
CURRENT AND VOLTAGE INPUTS

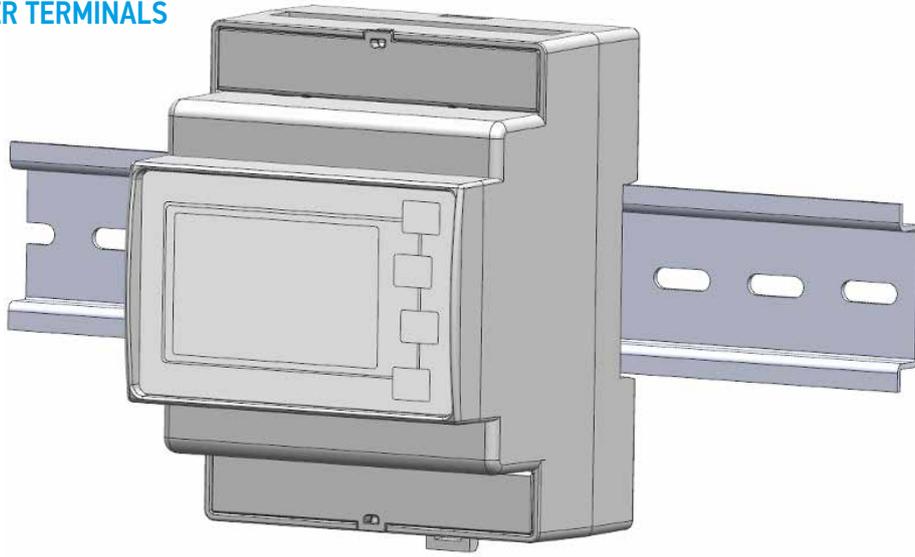


DEFINITIONS OF OTHER TERMINALS

<p>7E.85.8.400.021x Modbus RS485 RTU, Dual tariffs For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu: Baud rate: 2400, 4800, 9600, 19200, 38400 bps Parity: NONE (default)/ODD/EVEN Stop bits: 1 or 2 RS485 network address nnn - 3-digit number, 001 to 247</p>	 <p>7E.85.8.400.0210, Single tariff</p> 
<p>7E.85.8.400.031x Mbus, Dual Tariffs The meter provides an M-Bus port for remote communication. The protocol fully comply with EN13757-3. The following communication parameters can be configured via M-bus communication. Baud rate: 300, 600, 1200, 2400, 4800, 9600 bps Parity: NONE/EVEN/ODD Stop bits: 1 or 2 M-Bus network primary address: nnn - 3 digits number from 001 to 250 M-Bus network secondary address: 00 00 00 00 to 99 99 99 99</p>	 <p>7E.85.8.400.0212, Dual tariffs</p>   <p>7E.85.8.400.0310, Single tariff</p>   <p>7E.85.8.400.0312, Dual tariffs</p> 
<p>7E.85.8.400.410 Modbus (ETH) TCP For Ethernet Modbus TCP, the following communication parameters can be configured from the Set-up menu: Modbus address range: 1-247 IP: 192.168.1.200 (default) Port: 502 MASK: 255.255.255.0 Gateway: 192.168.1.1 DHCP: on / off (default)</p>	 <p>Ethernet RJ45</p> 
<p>7E.85.8.400.510 LoRaWAN wireless</p>	 

WIRING GUIDE

<p>Terminal</p> 	<p>Measurement Connection</p> <p>Screw Connection</p>	<p>Screw Connection</p> <p>6-7mm</p> <p>M3</p> <p>0.5-2.5mm² (30 ~ 14AWG)</p> <p>0.2Nm</p> <p>PZ0</p>	<p>Diameter 3.0mm*PH1</p> 
<p>Terminal</p> 	<p>Measurement Connection</p> <p>Screw Connection</p>	<p>Screw Connection</p> <p>6-7mm</p> <p>M3</p> <p>0.5-2.5mm² (30 ~ 14AWG)</p> <p>0.2Nm</p> <p>PZ0</p>	<p>Diameter 3mm*PH1</p> 



OPERATION

INSTALLATION DISPLAY

<p>1.L 2.L 2 MD (IMPORT) (EXPORT) </p> <p>L¹⁻² T -0.0.0.0 M kWh L²⁻³ VI%THD N Σ -0.0.0.0 M kVarh L³⁻¹ Hz -0.0.0.0 M kVA PF C1C2</p>	<p>The first screen lights up all display segments and can be used as a display check</p>
<p>50Fl 16 0 1.0 1</p>	<p>The second screen and the third screen indicates the firmware installed in the unit</p> <p>NOTE The actual display might be different with the left on here</p>
<p>E3 0455</p>	
<p>1 nSt tEst PASS</p>	<p>The interface performs a self-test and indicates the result if the test passes</p>

BUTTON FUNCTIONS

BUTTON	SHORT CLICK		LONG PRESS (3s)	
	DISPLAY MODE	SETUP MODE	DISPLAY MODE	SETUP MODE
	V1 V2 V3 V1-2 V2-3 V3-1 I1 I2 I3 IN V %THD I %THD	Return to previous menu		
	Hz PF PF1 PF2 PF3 MD of I1 I2 I3 MD of Power	Previous page or increase value		
	P1 P2 P3 Q1 Q2 Q3 S1 S2 S3 P-t Q-t S-t	Next page or decrease value		
	Active E-t Reactive E-t Imp Active E Exp Active E Imp Reactive E Exp Reactive E	Move to right side	Enter Setup mode	Confirm setting

MEASUREMENTS

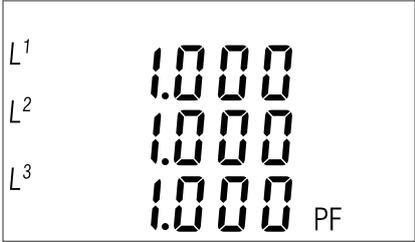
VOLTAGE AND CURRENT

Each successive pressing of the  button selects a new range:

	Phase to neutral voltage
	Phase to phase voltage
	Current on each phase
	Neutral current
	Phase to neutral voltage THD%
	Phase to neutral current THD%

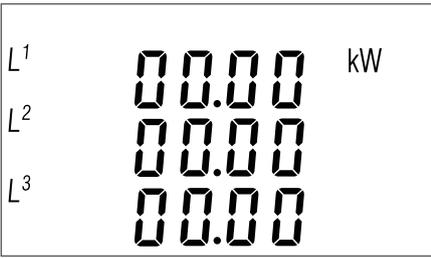
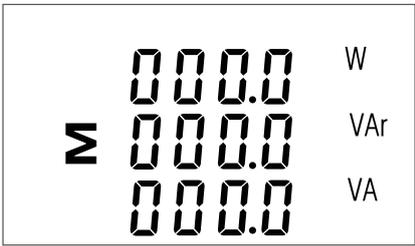
FREQUENCY, POWER FACTOR AND DEMAND

Each successive pressing of the  button selects a new range:

	Frequency and Power Factor (total)
	Power Factor of each phase
	Maximum current demand on each phase
	Maximum total power demand

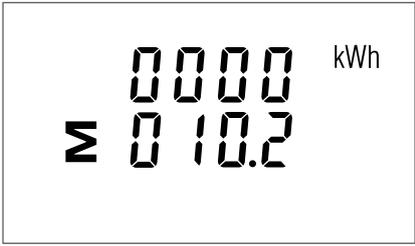
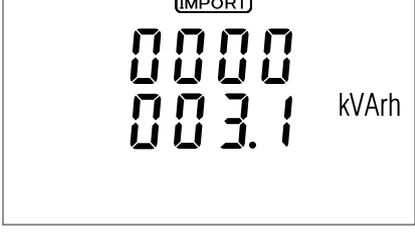
POWER

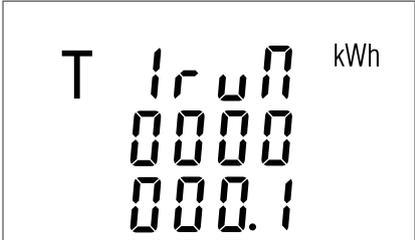
Each successive pressing of the  button select a new range:

	Instantaneous Active Power in kW
	Instantaneous Reactive Power in kVAr
	Instantaneous Volt-amps in kVA
	Total W, VAr, VA

ENERGY

Each successive pressing of the  button shows following measurements:

	<p>Total active energy in kWh</p>
	<p>Total reactive energy in kVArh</p>
	<p>Imported active energy in kWh *Not shown on multi tariffs meter</p>
	<p>Exported active energy in kWh *Not shown on multi tariffs meter</p>
	<p>Imported reactive energy in kVArh *Not shown on multi tariffs meter</p>
	<p>Exported reactive energy in kVArh *Not shown on multi tariffs meter</p>

	<p>T1 Active Energy in kWh. For Multi Tariffs version only (7E.85...12)</p>
	<p>T2 Active Energy in kWh. For Multi Tariffs version only (7E.85...12)</p>
	<p>T1 Reactive Energy in kWh. For Multi Tariffs version only (7E.85...12)</p>
	<p>T2 Reactive Energy in kWh. For Multi Tariffs version only (7E.85...12)</p>
	<p>Carbon emissions per kWh of electricity</p>

SETUP MODE

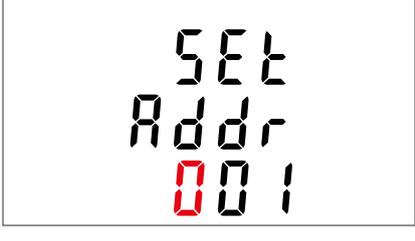
The meter's settable parameters are password protected.

By long pressing the 4th button "E", the user can get into the setup mode.

PASSWORD VALIDATION

	<p>Press button  and  to enter password</p> <p>Long press button  for password confirmation</p> <p>If an incorrect password is entered, the display will show "Err"</p> <p>If the password is correct, the unit will show the setup menu</p> <p>Password: default 1000</p>
---	--

COMMUNICATION ADDRESS

	<p>Communication address setup</p> <p>Long press  to enter the setup</p> <p>Address range 001~247</p> <p>Address range 001~250 (Mbus protocol)</p>
	<p>Communication address setup</p> <p>Long press button  to enter the setup mode</p>
	<p>Press button  and  set the addresses</p> <p>Long press button  to confirm</p>

M-BUS SETUP (ONLY FOR 7E.85.8.400.031X)

M-BUS SECONDARY ADDRESS SETTING

	<p>Secondary address: 00000001 to 99999999</p> <p>From the Set-Up Menu, use and buttons to find the setting page</p>
	<p>Long press to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use and buttons to set the secondary address.</p>

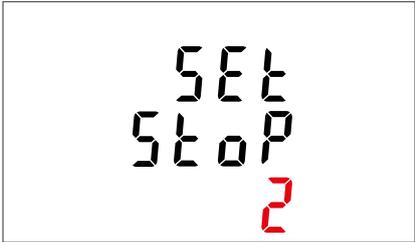
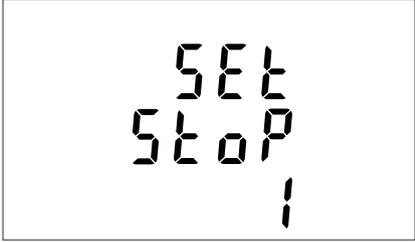
BAUD RATE SETTING

	<p>From the Set-up menu, use and buttons to select the Baud Rate option</p>
	<p>Press to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use and buttons to choose Baud rate 0.3k, 0.6k, 2.4k, 4.8k, 9.6k</p>

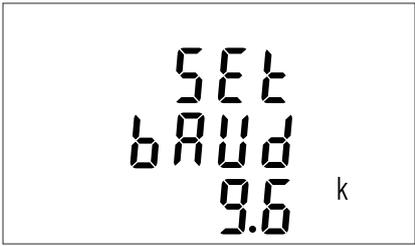
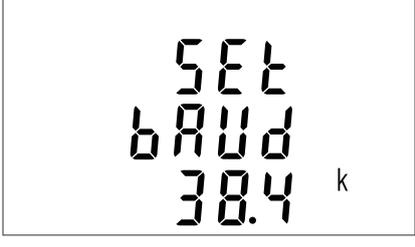
PARITY

	<p>From the Set-up menu, use  and  buttons to select the Parity option</p>
	<p>Press  to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use  and  buttons to choose Parity (EVEN / ODD / NONE)</p>

STOP BITS

	<p>From the Set-up menu, use  and  buttons to select the Stop Bit option</p>
	<p>Press  to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use  and  buttons to choose Stop Bit (2 or 1)</p>

BAUD RATE SETTING

	<p>From the Set-up menu, use  and  buttons to select the Baud Rate option</p>
	<p>Press  to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k</p>

PARITY

	<p>From the Set-up menu, use  and  buttons to select the Parity option</p>
	<p>Press  to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use  and  buttons to choose Parity (EVEN / ODD / NONE)</p>

STOP BITS

	<p>From the Set-up menu, use and buttons to select the Stop Bit option</p>
	<p>Press to enter the selection routine</p> <p>The current setting will flash</p>
	<p>Use and buttons to choose Stop Bit (2 or 1)</p>

CT SETTING

	<p>From the Set-up menu, use and buttons to select the CT option</p>
	<p>Secondary CT setting</p> <p>Press to enter the CT secondary current selection routine.:5A/1A</p>
	<p>Set CT 1 value</p> <p>Press to enter the CT Ratio setting screen</p> <p>The range is from 0001 to 9999</p>

PT SETTING

	<p>From the Set-up menu, use and buttons to select the PT option</p> <p>The screen will show the voltage PT secondary voltage value</p> <p>The default value is 400 V</p>
	<p>Secondary PT setting</p> <p>Press to enter the PT secondary voltage selection routine</p> <p>The range is from 100 to 500 V</p>
	<p>Set PT 1 value</p> <p>Press to enter the PT ratio screen</p> <p>The range is from 0001 to 9999</p>

PULSE SETUP (NOT AVAILABLE ON 7E.85.8.400.0410)

PULSE RATE SETUP

	<p>Use this to set the energy represented by each pulse</p> <p>Rate can be set to 1 pulse per 0.01/0.1/1/10/100/1000kWh/kVArh</p>
	<p>From the Set-Up Menu, use and buttons to select the pulse rate option</p>
	<p>Press to enter the selection routine</p> <p>The current setting will flash</p> <p>0.01/0.1/1/10/100/1000kWh/ kVArh per pulse</p> <p>Use and and buttons to choose pulse rate</p> <p>Long press to confirm the setting and press to return to the main</p>

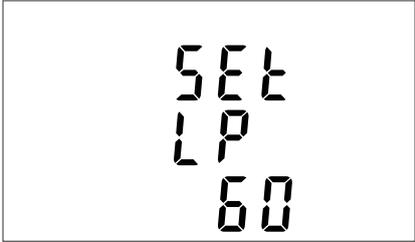
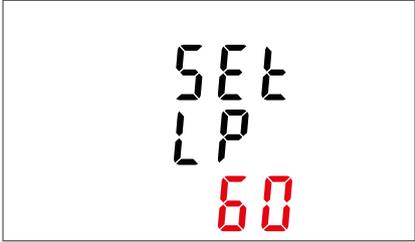
PULSE DURATION SETUP

	<p>The energy monitored can be active or reactive and the pulse width can be set as 200,100 or 60 ms</p>
	<p>From the Set-Up Menu, use and buttons to select the pulse width option</p>
	<p>Press to enter the selection routine</p> <p>The current setting will flash</p> <p>Use and buttons to choose pulse rate</p> <p>Long press to confirm the setting and press to return to the main Set-Up Menu</p>

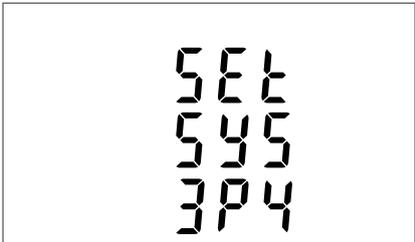
DEMAND INTERVAL TIME SETUP

	<p>Long press button to enter the setup</p>
	<p>Press button and to set the demand period value</p> <p>Long press button to confirm</p> <p>Option: 0,5, 8, 10, 15, 20, 30, 60(default) Unit: min</p>

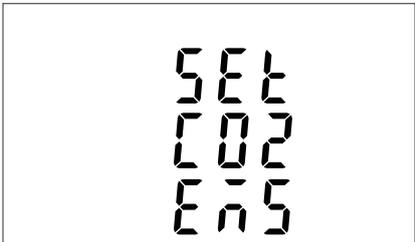
BACKLIT POWER TIME SETUP

	Long press button  to enter the setup
	Press button  and  to set the value Long press button  to confirm Option: ON, OFF, 5, 10, 30, 60(default), 120 mins ON means backlit always on, OFF means backlit always off

SYSTEM TYPE SETUP

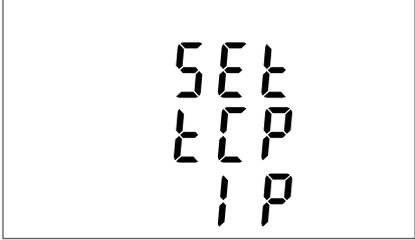
	Long press button  to enter the setup
	Press button  and  to setup the supply system Option: 3P4W, 3P3W, 1P2W Long press button  to confirm Option: 3P4W(default), 3P3W, 1P2W

CO2 SETUP

	Long press button  to enter the CO2 setup
	Press button  and  to setup the CO2 rate Default (0.5703)

ETHERNET MODBUS TCP SETUP (ONLY FOR 7E.85.8.400.0410)

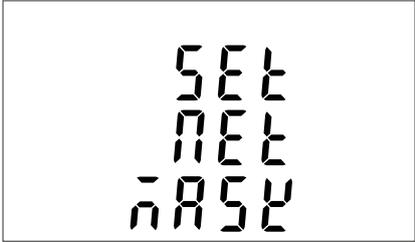
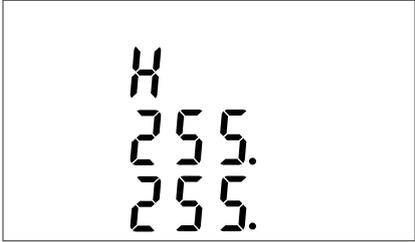
DHCP FUNCTION SETUP

	<p>Long press button  to enter the setup mode of TCP IP information</p>
	<p>Press button  and  to choose DHCP on or off</p> <p>Default: off</p>

TCP IP ADDRESS SETUP

	<p>Long press button  to set IP address</p>
	<p>IP-High 192.168 (default)</p>
	<p>IP-Low 001.200 (default)</p>

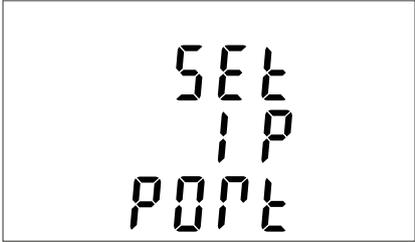
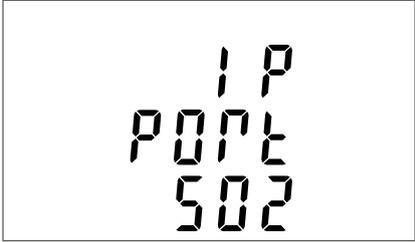
SUBNET MASK ADDRESS SETUP

	Long press button  to enter the setup mode
	Subnet mask-High 255.255 (default)
	Subnet mask-Low 255.0 (default)

TCP GATEWAY ADDRESS SETUP

	Long press button  to enter the setup mode of IP address of TCP gateway
	TCP gateway address - High: 192.168 (default)
	TCP gateway address - Low: 001.001 (default)

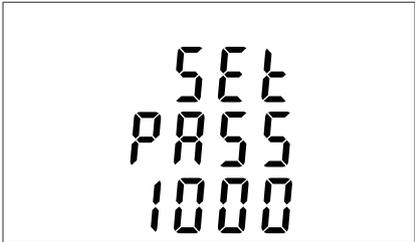
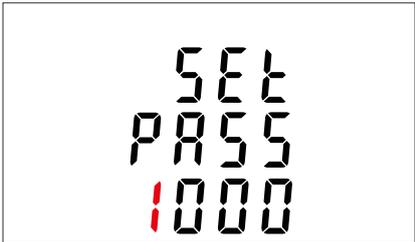
TCP IP PORT SETUP

	Long press button  to enter the setup mode of TCP IP port
	TCP IP port: 502 (default)

CLR SETUP

	From the Set-up menu, use  and  buttons to select the reset option
	Press  to enter the selection routine The MD will flash

PASSWORD MODIFICATION SETUP

	Long press button  to enter the setup mode
	Press button  and  to enter the new password Long press button  to confirm Range: 0000~9999, default 1000

CURRENT DIRECTION SET-UP

	<p>Use and buttons to select page "SET sys cont"</p>
	<p>Press to enter Phase A, the default is Frd (forward)</p>
	<p>Press button and to change the current direction Long press button to confirm</p>
	<p>Press to enter Phase B, the default is Frd (forward)</p>
	<p>Press button and to change the current direction Long press button to confirm</p>
	<p>Press to enter Phase C, the default is Frd (forward)</p>
	<p>Press button and to change the current direction Long press button to confirm</p>

