



—  
INSTALLATION INSTRUCTION

# Blank cable entry plate

## OEZXP\_120...380

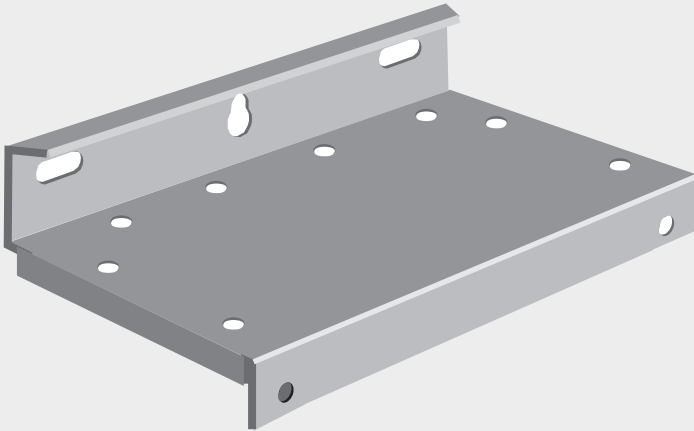


# OEZXP\_120...380

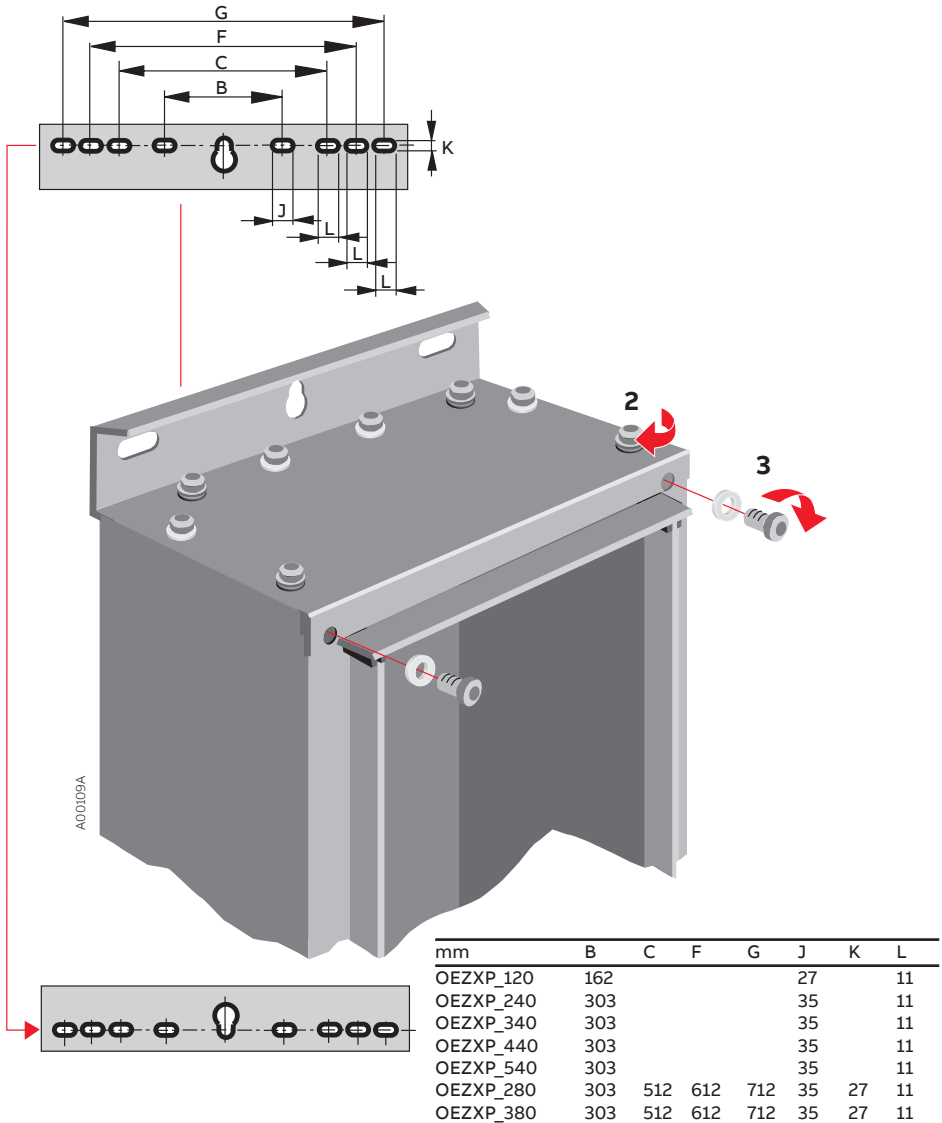

---

**OEZXP\_120, OEZXP\_240, OEZXP\_340,  
OEZXP\_440, OEZXP\_540,  
OEZXP\_280, OEZXP\_380**

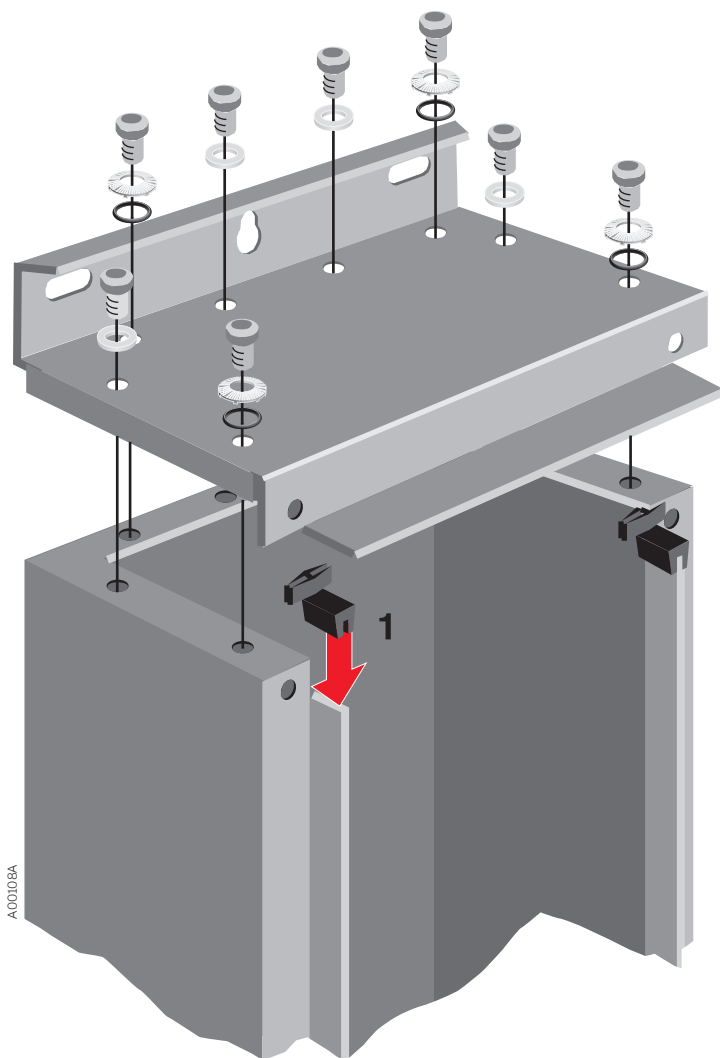



---

## Contact us

### **ABB Oy**

Muottitie 2A 65320

Vaasa, Finland

**[abb.com/lowvoltage](http://abb.com/lowvoltage)**