


—
INSTALLATION INSTRUCTION

Shaft alignment ring


OHZX11



OHZX11

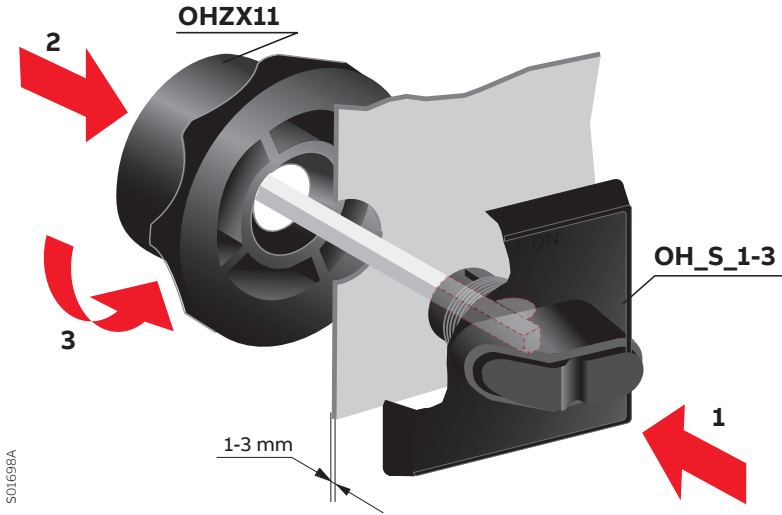

Dimension drawing

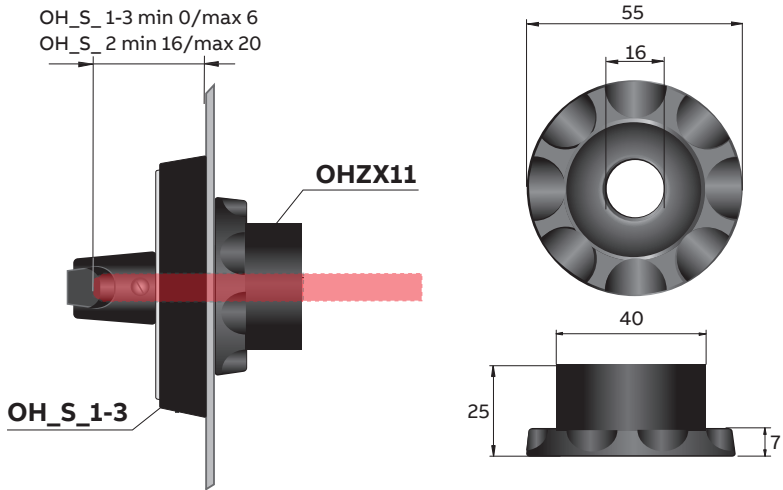



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage