



—
INSTALLATION INSTRUCTION


Handles OHBS5

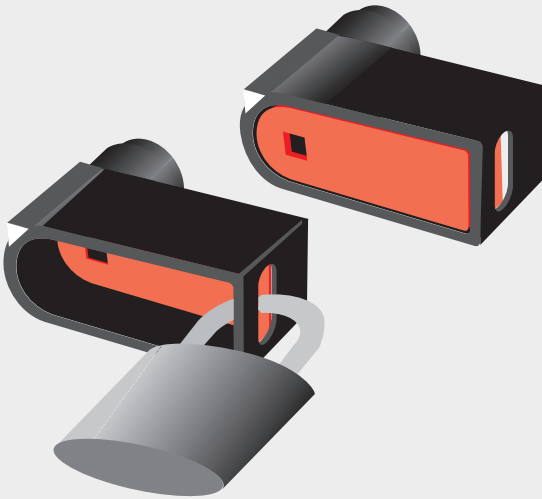

OHBS5

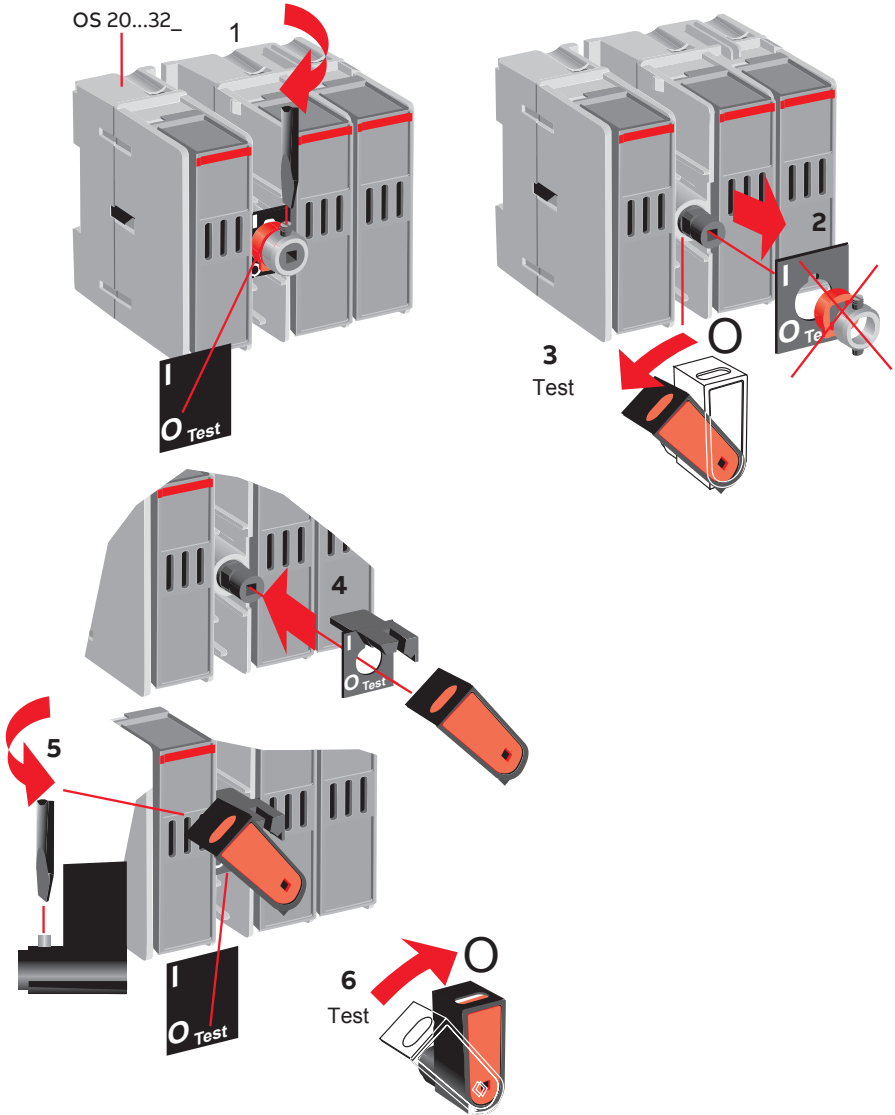

OHBS5

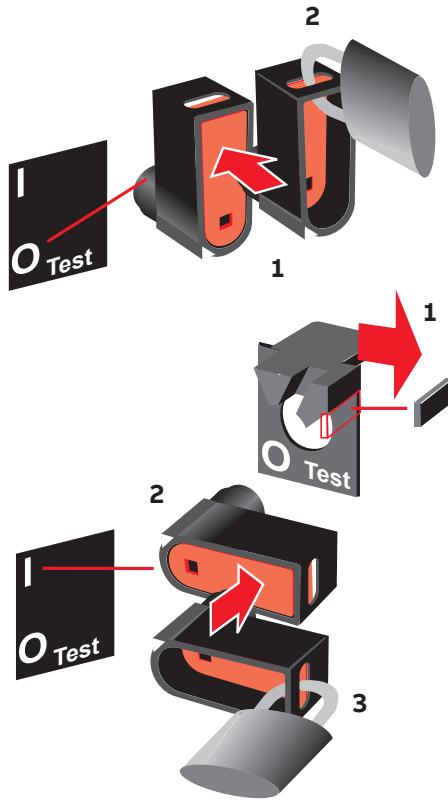



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage