



—
INSTALLATION INSTRUCTION



Handles YASDA_

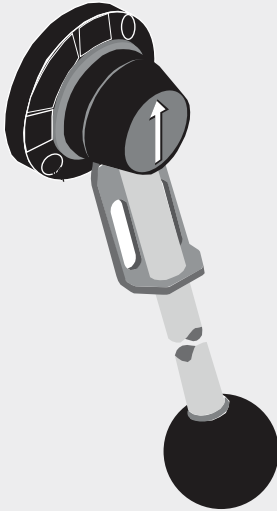

YASDA_

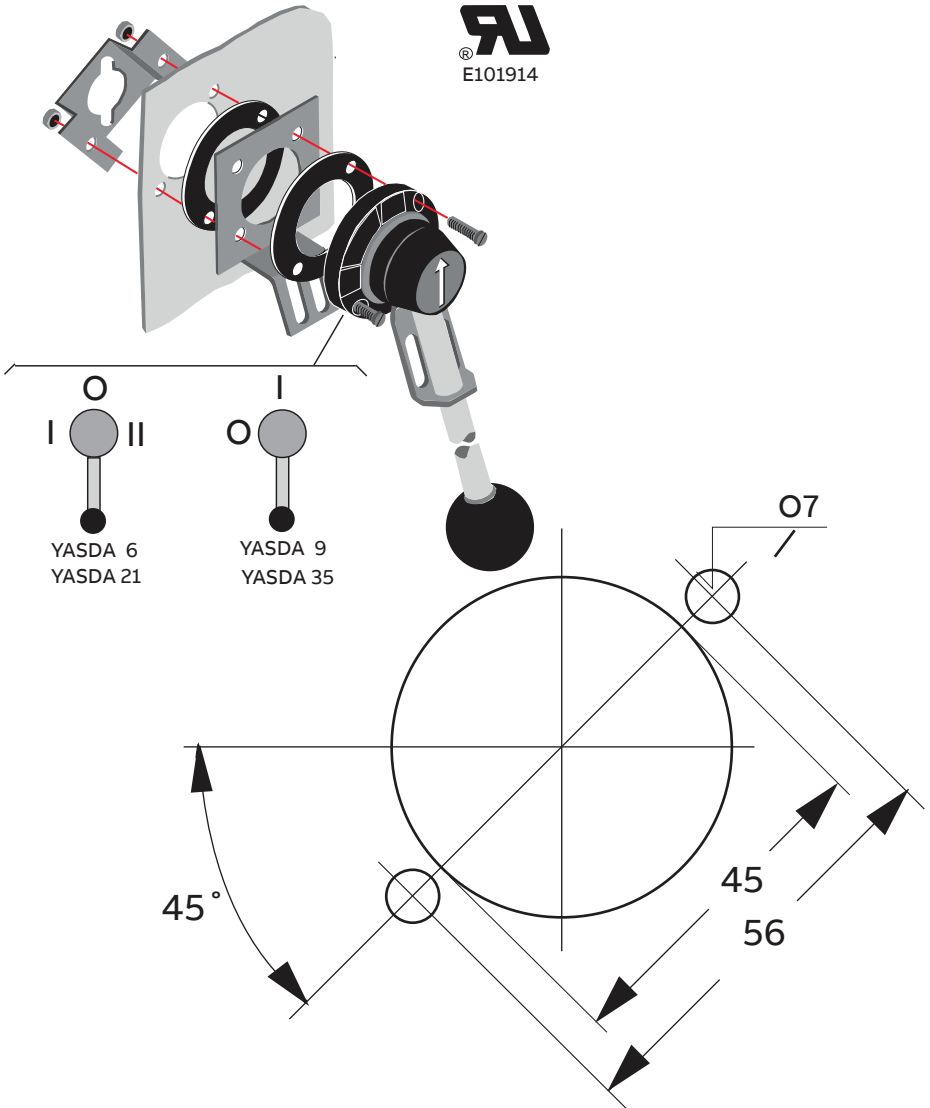

YASDA_

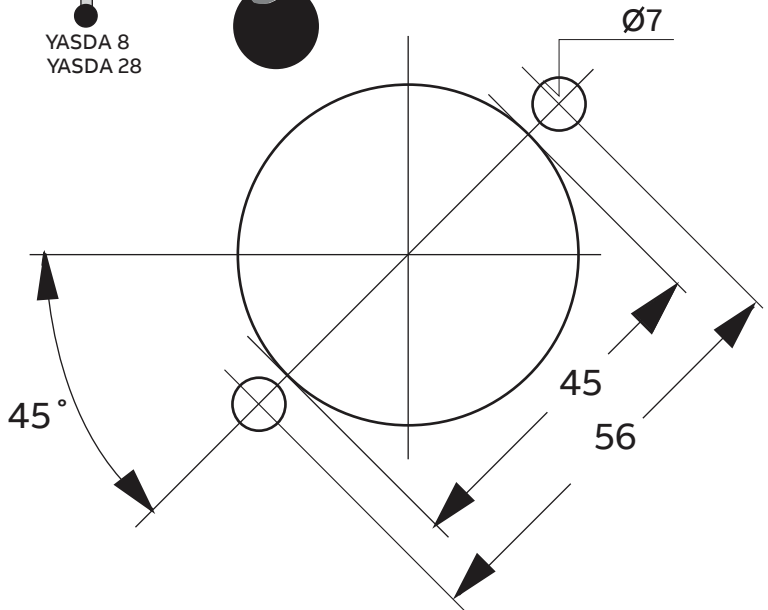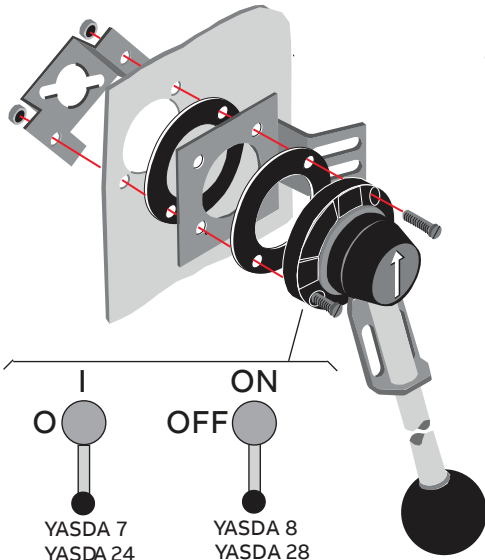



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage