
# TRONIX


## **RF Single Color Remote Controller** 214-146

Important: Read All Instructions Prior to Installation

**Function introduction** 

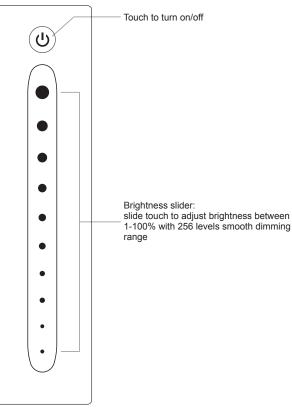

Front side

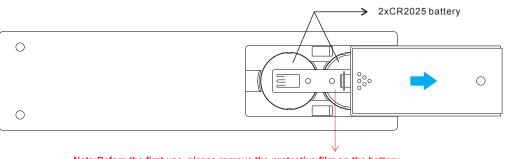

Note:Before the first use, please remove the protective film on the battery.

### **Product Data**

Output	RF signal	
Operation Frequency	868/915/434MHz	
Power Supply	6V(2xCR2025 battery)	
Operating temperature	0-40°C	
Relative humidity	8% to 80%	
Dimensions	141x35x8.5mm	

- Control 1 zone of RF receiver
- Single color controller
- · Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

#### Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- · DO NOT expose the device to moisture.

#### Operation

1. Pair with RF receivers:

Turn on the remote $\rightarrow$ Click "Learning Key" on RF receiver	$\rightarrow$	LED lights connected with the RF receiver will flicker once	The receiver is paired with the remote successfully.
--	---------------	--	--

How to delete the pairing:

Press and hold down "RF Code Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

#### If you use multiple receivers, you can have all the receivers in the same zone

