



—
INSTALLATION INSTRUCTION

Ring flange

OEZXR0

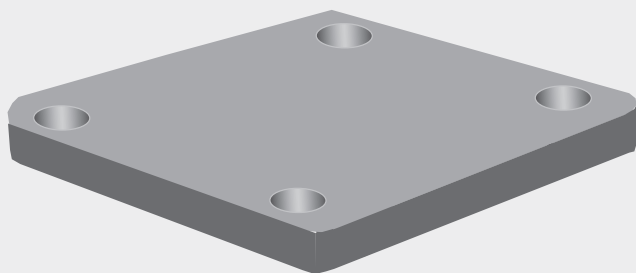

OEZXRO

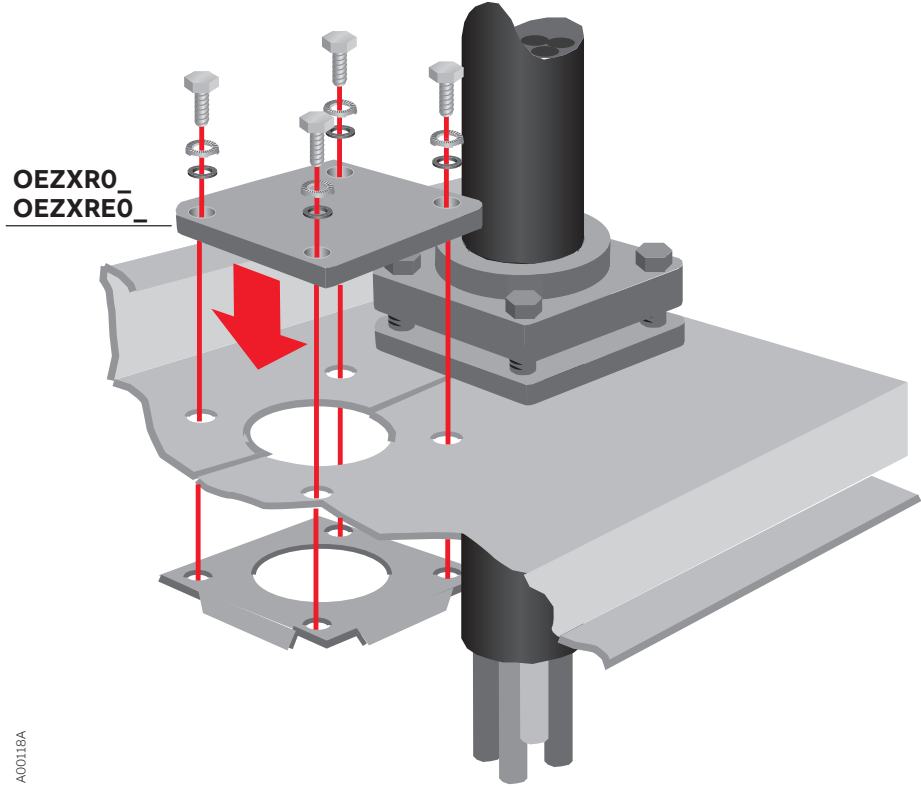



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage