



—
INSTALLATION INSTRUCTION

Fuse monitors



OFM_


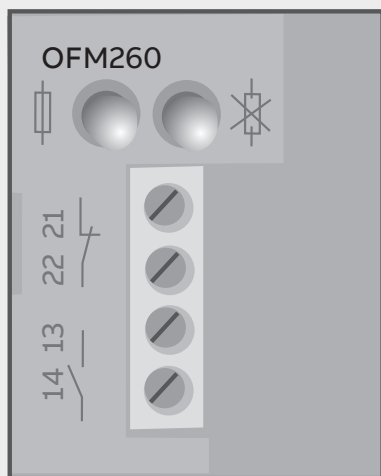


OS32...1250


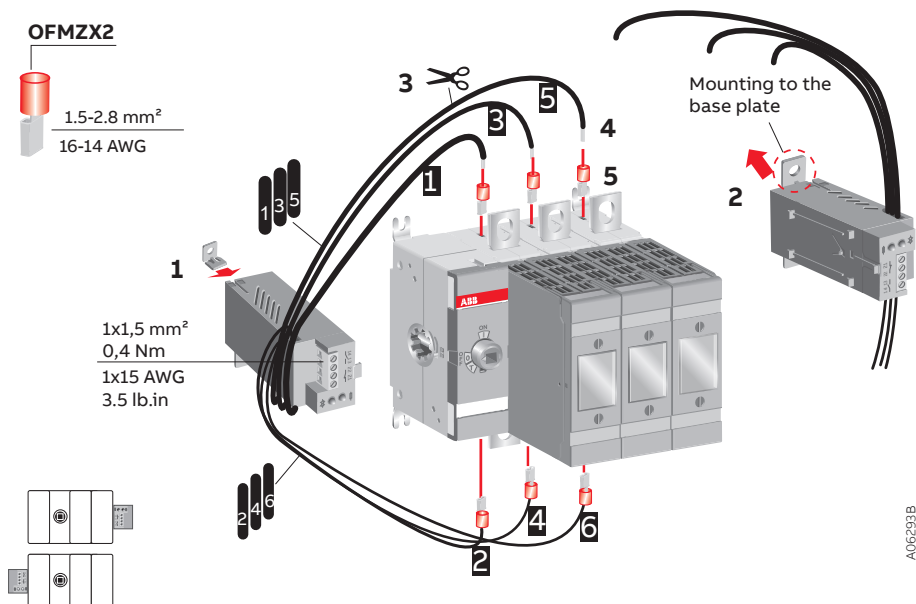


OSMini 20...40 + OFM_

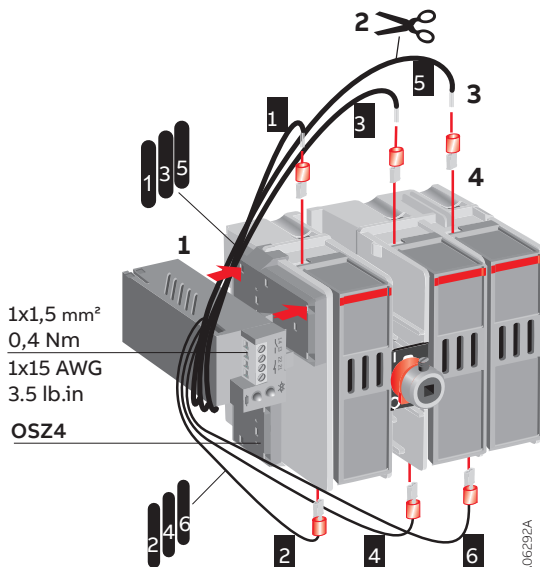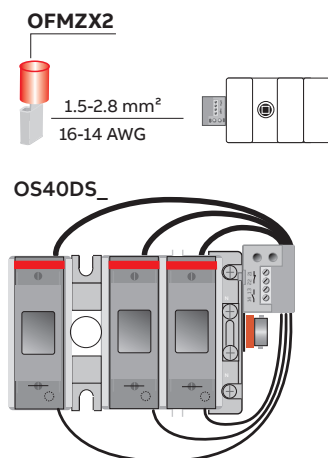

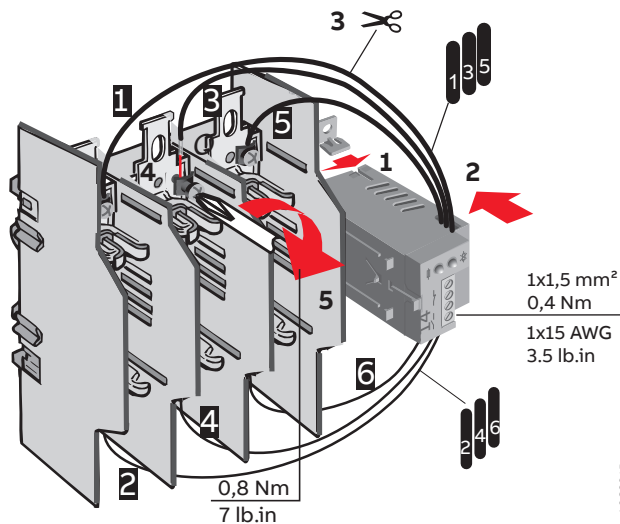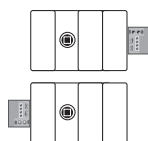
$$\frac{0,75 \text{ mm}^2}{18 \text{ AWG}}$$


0000

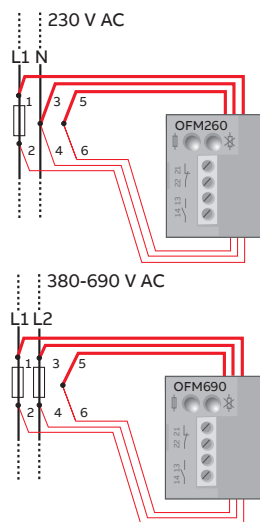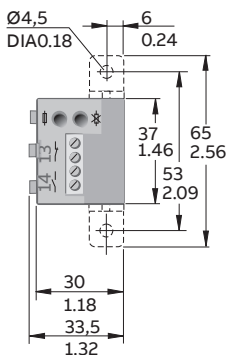[illegible]

A06294B

OFM_

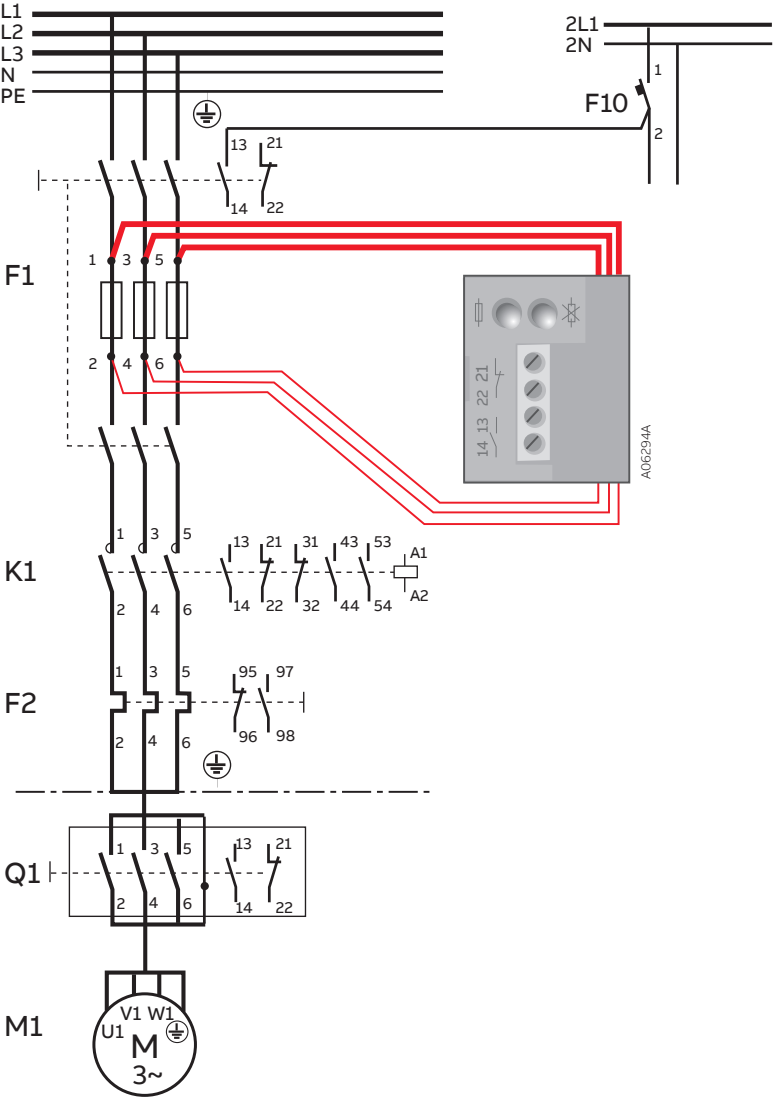



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage