


INSTALLATION INSTRUCTION

Electronic fuse monitor





OFS_




OS200...1250_ OS200...1250_

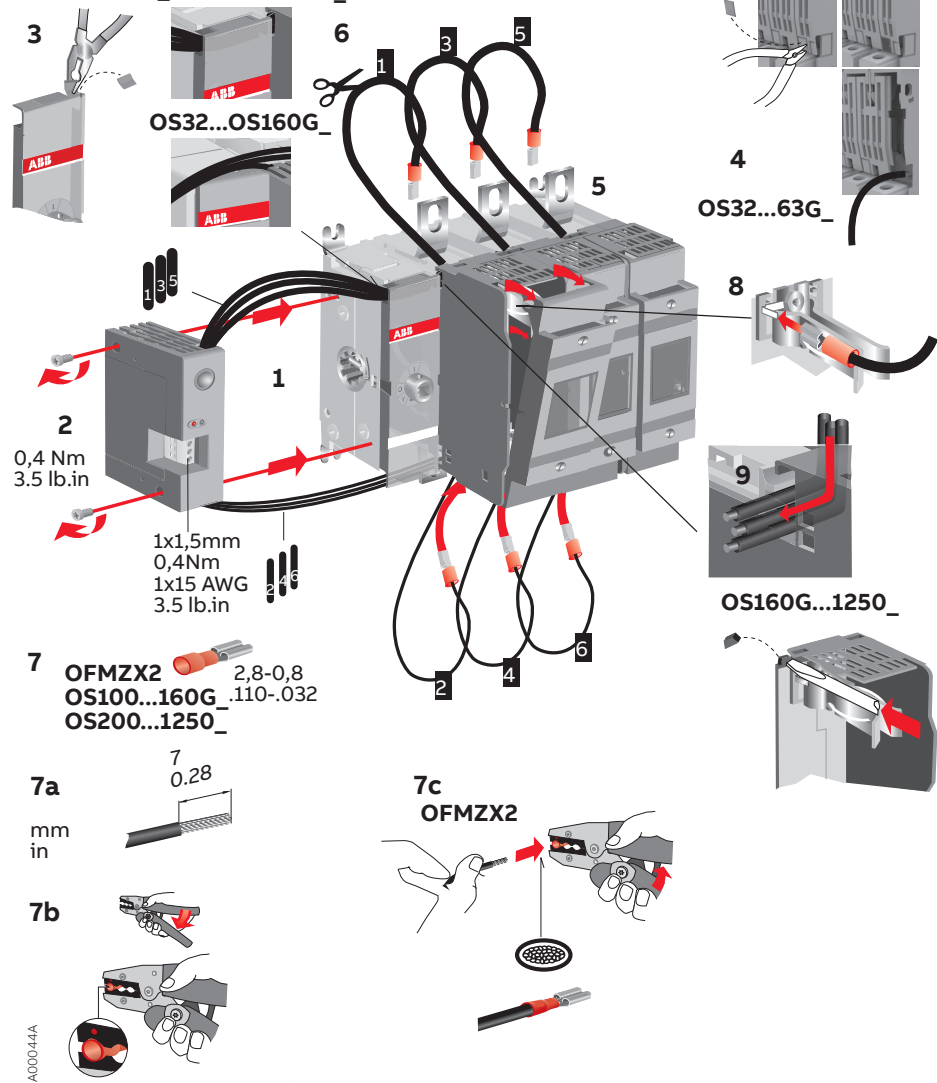





OFS_

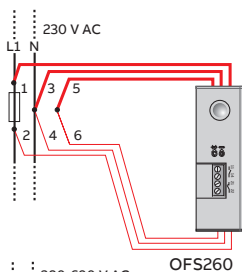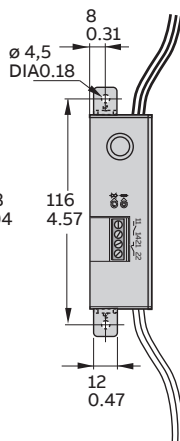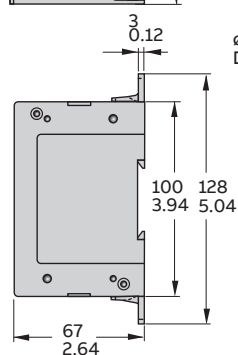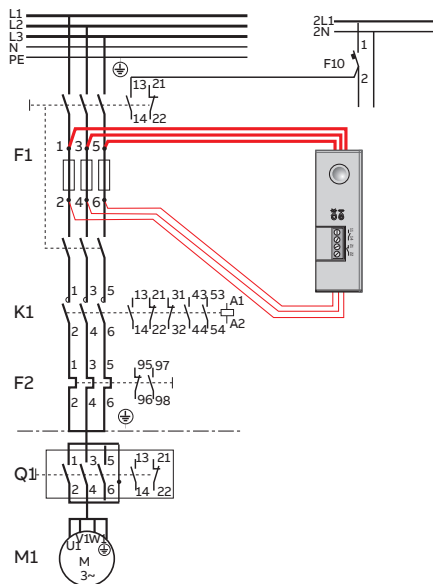



OFS260

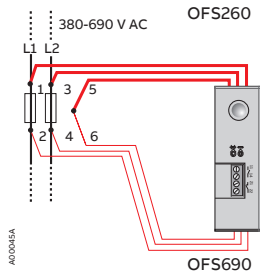

OFS690

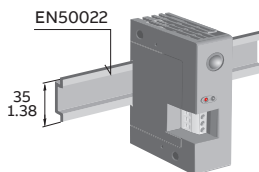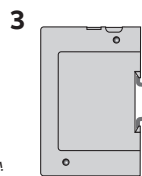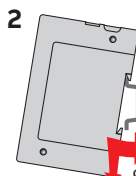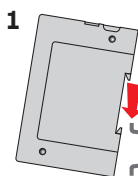

Remove

 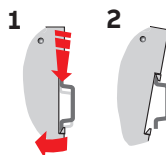



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage