 
 
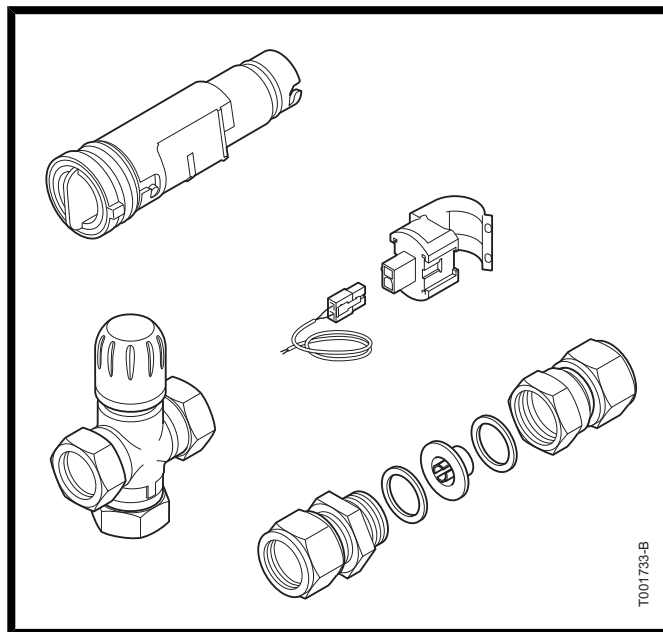 
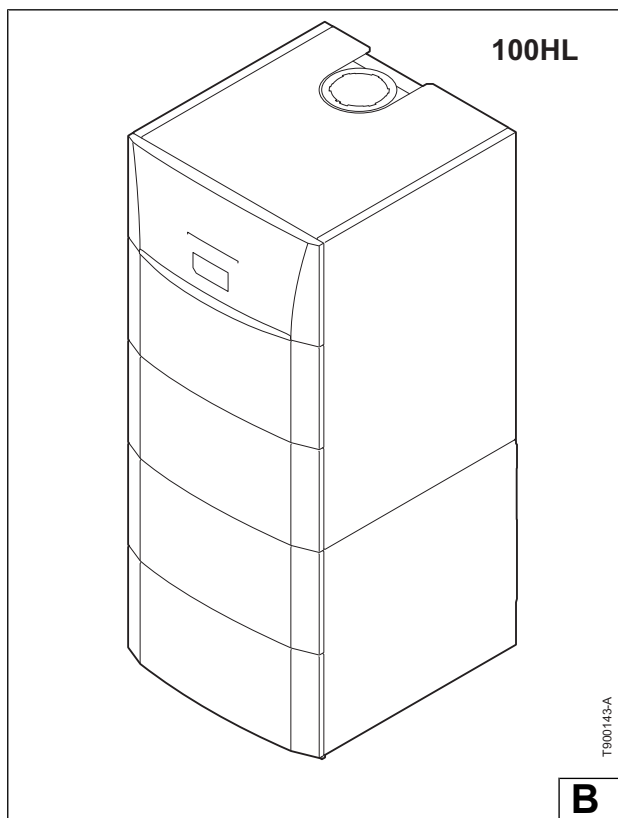 


Montage instructie
Assembly instructions
Instructions de montage
Montageanweisung
Instrucciones para el montaje
Istruzioni di montaggio

 
 
 
 
Zonneboileraansluitset
Solar system connection set
Kit de raccordement système solaire
Anschlussatz Solarsystem
Conjunto de conexión del sistema solar
Set collegamento pannelli solari

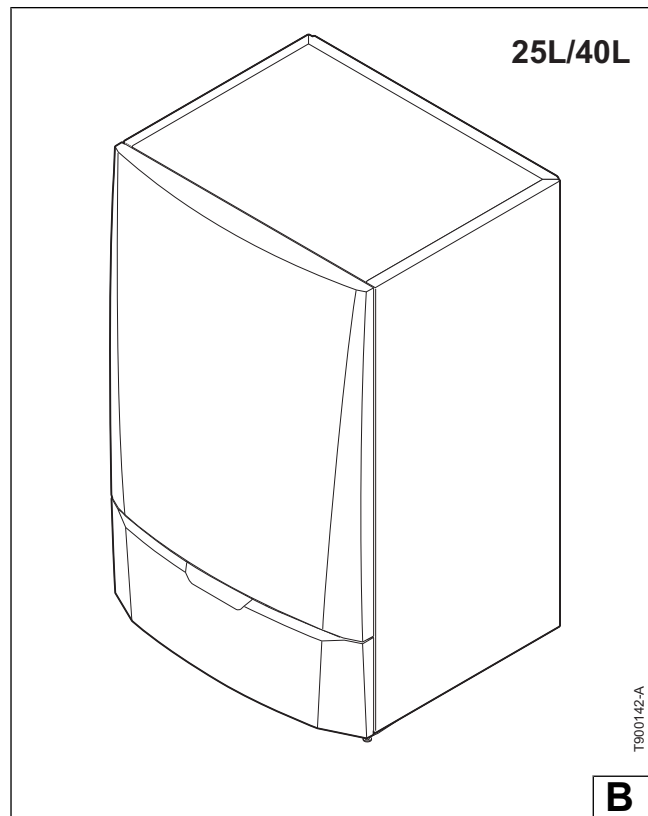


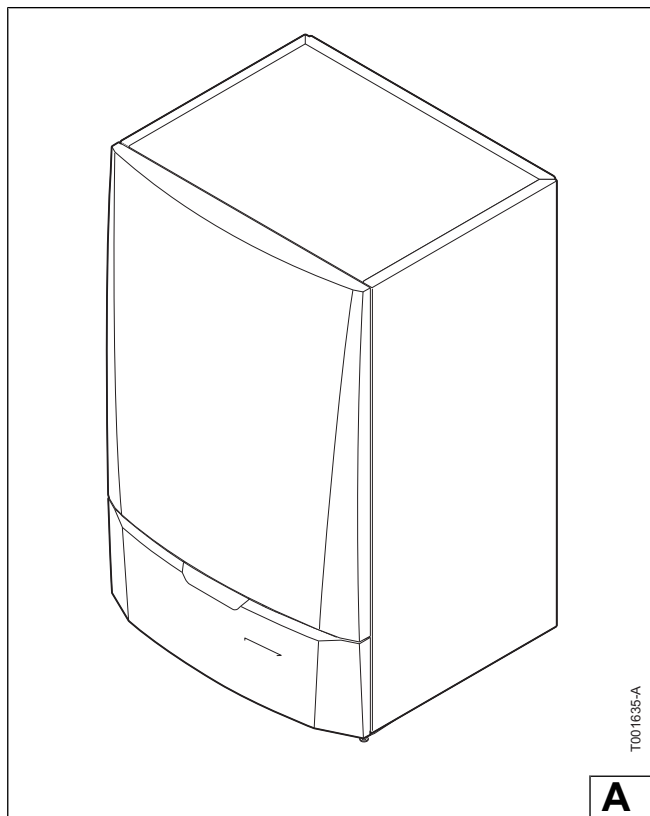


Inhoud verpakking
Set contents
Contenu du kit
Inhalt des Bausatzes
Contenido del paquete
Contenuti del pacchetto



25L/40L/100HL

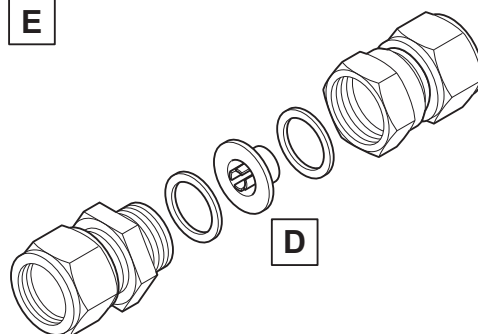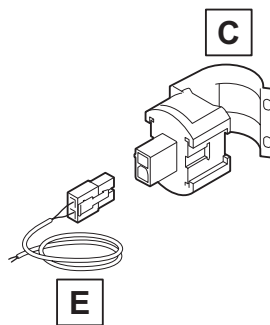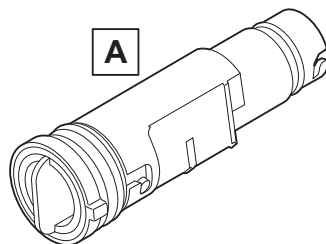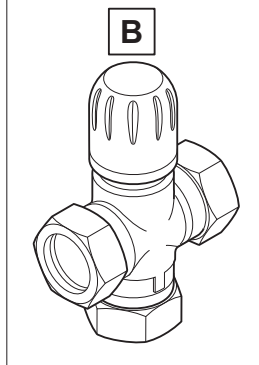

T001735-C

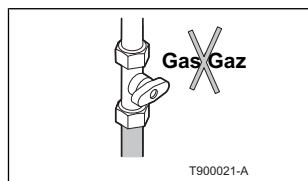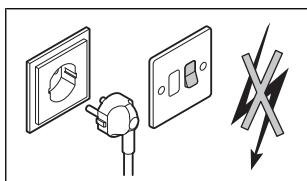  


T900021-A

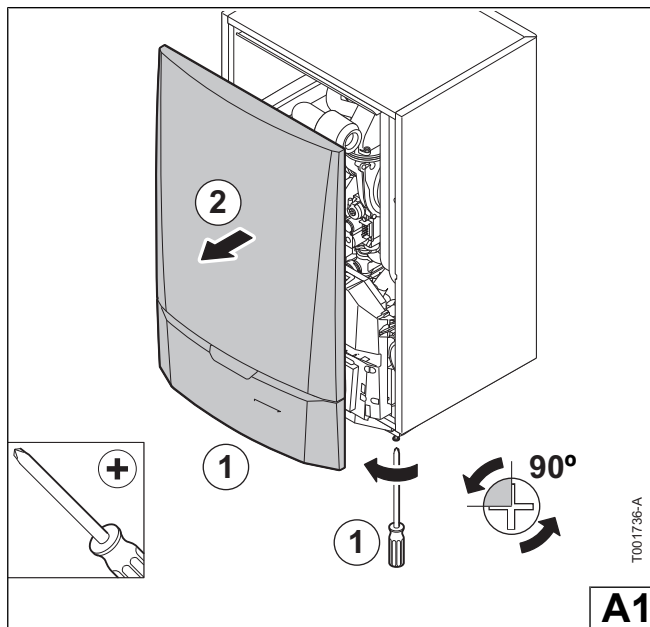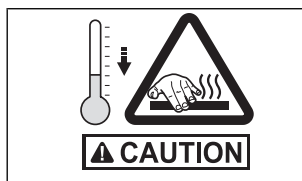  






A1

 T001736-A

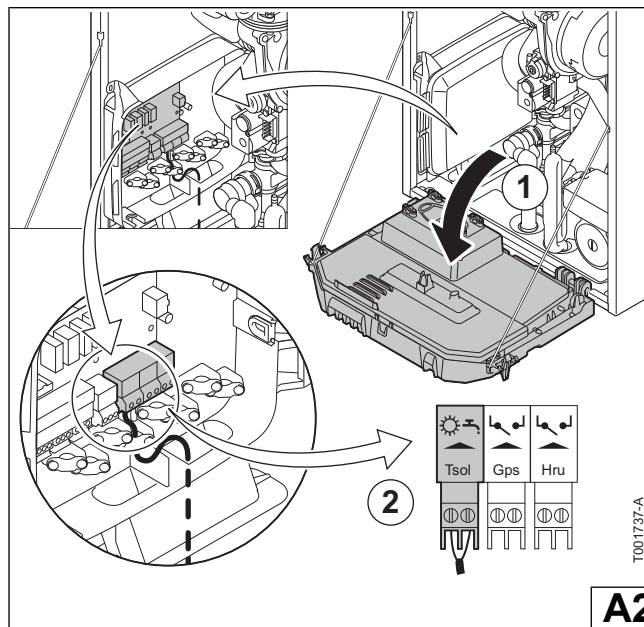


A2

     
T001737-A

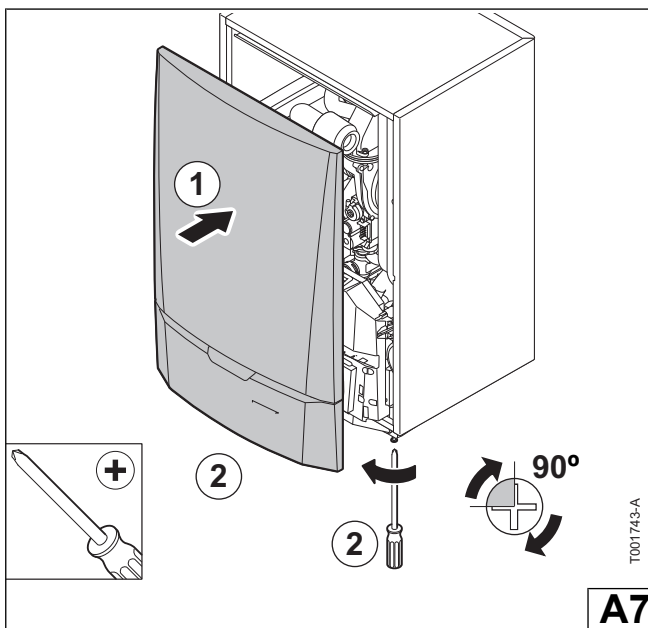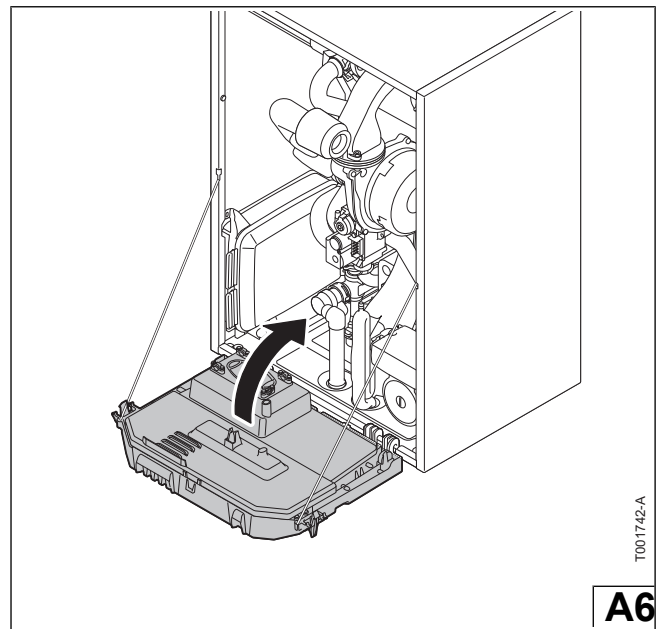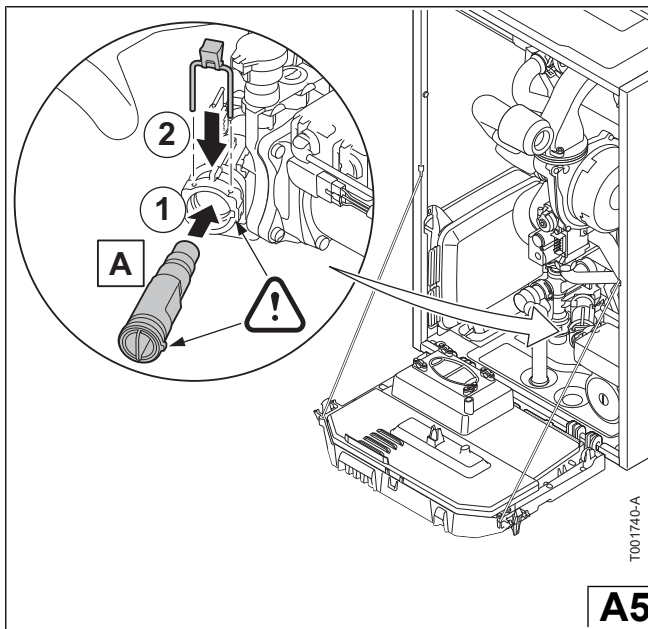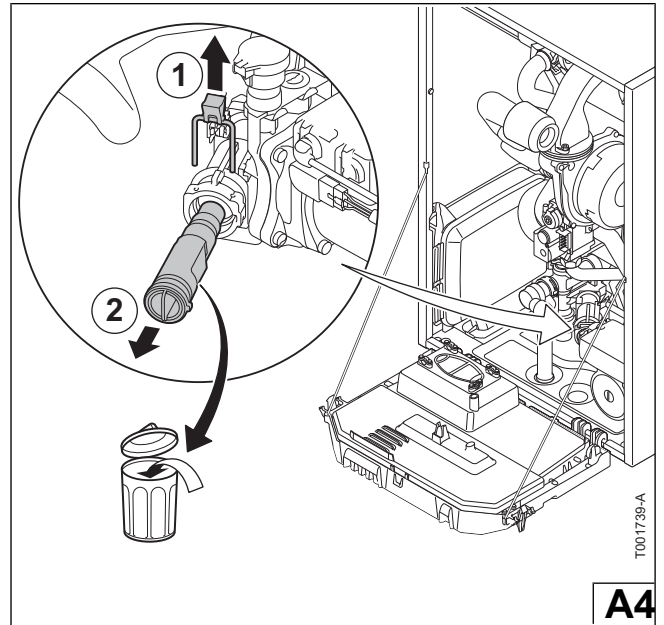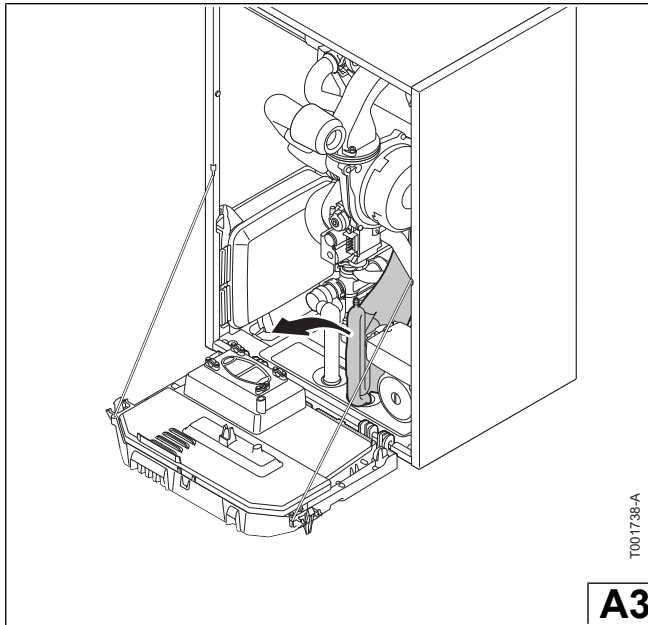



28/40 kW

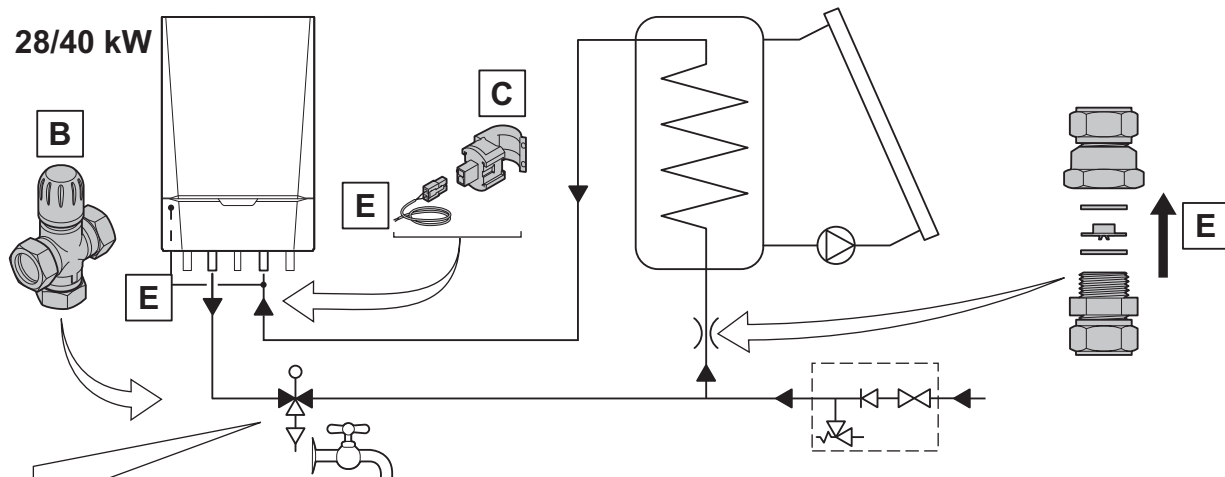 


l/min	CW	kW	Kleur	Colour	Couleur	Farbe	Color	Colore
9	CW4	28	lila/paars	Lilac - Purple	Lilas - Violet	Lila - Violett	Lila - Púrpura	Lillà - Viola
12	CW5	40	wit	White	Blanc	Weiß	Blanco	Bianco

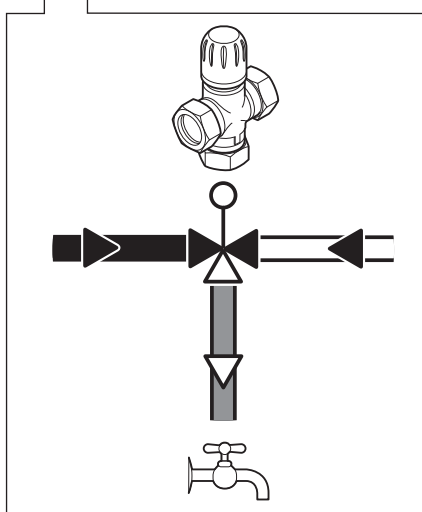 

25L/40L

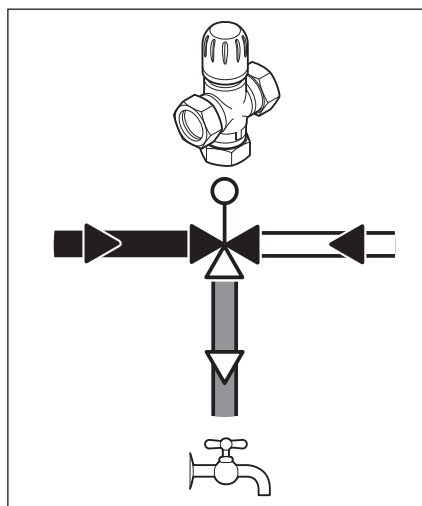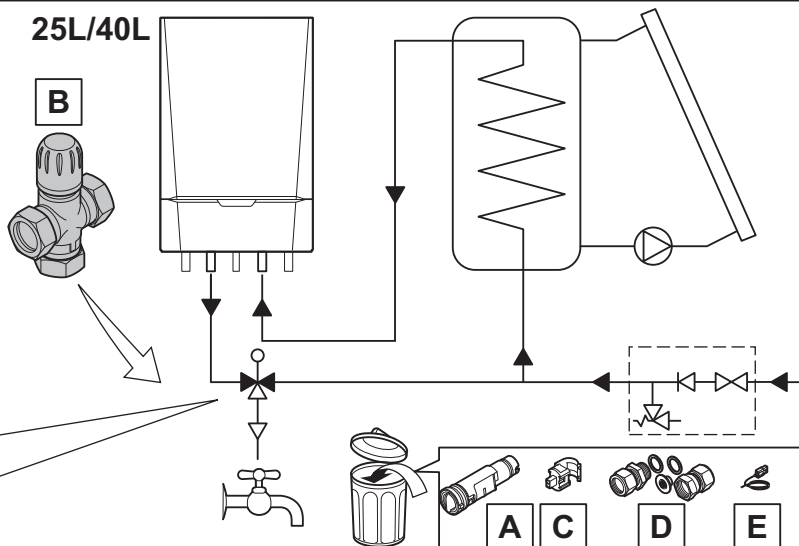  


100L

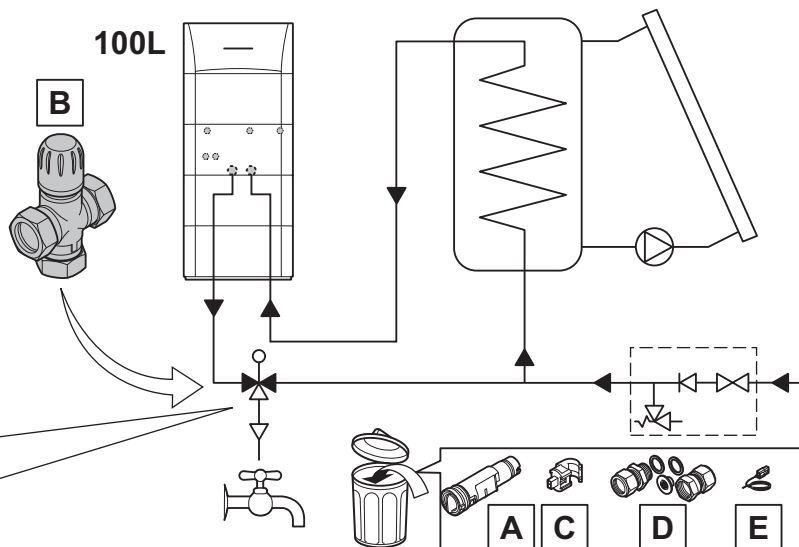 


T001744-J

A/B


 
28/40 kW

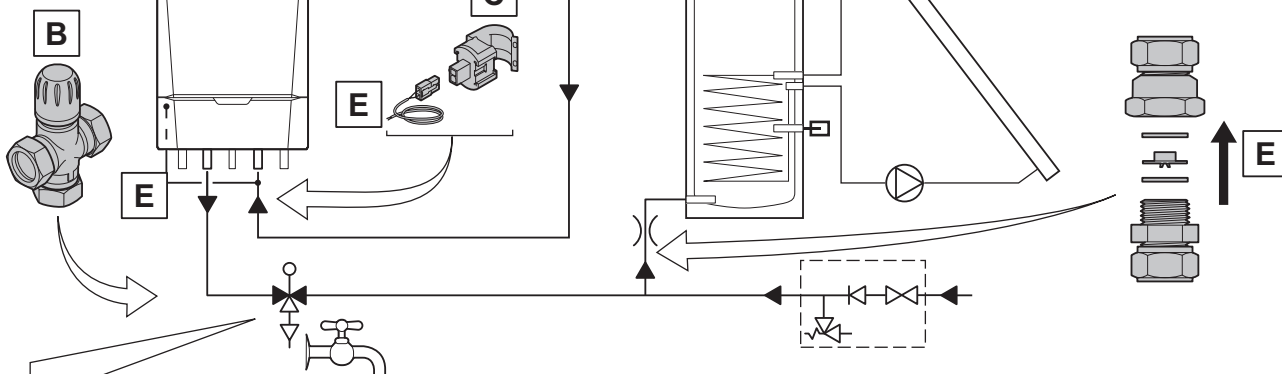


l/min	CW	kW	Kleur	Colour	Couleur	Farbe	Color	Colore
9	CW4	28	lila/paars	Lilac - Purple	Lilas - Violet	Lila - Violett	Lila - Púrpura	Lillà - Viola
12	CW5	40	wit	White	Blanc	Wei	Blanco	Bianco

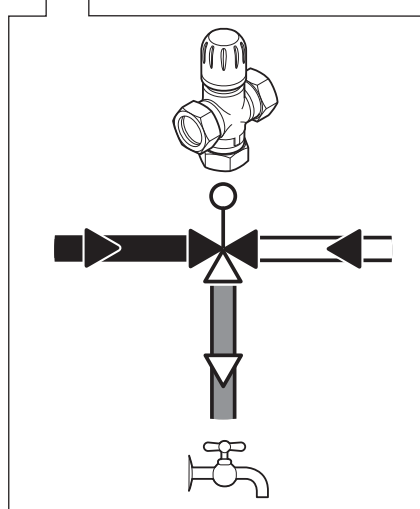 

25L/40L

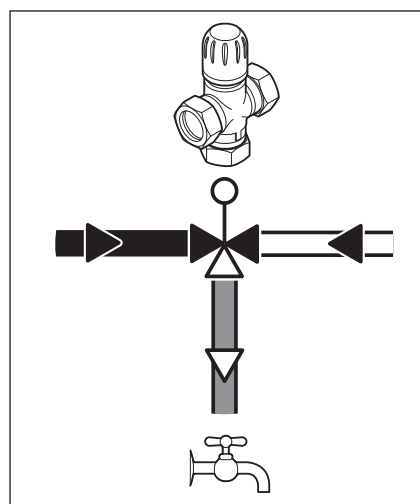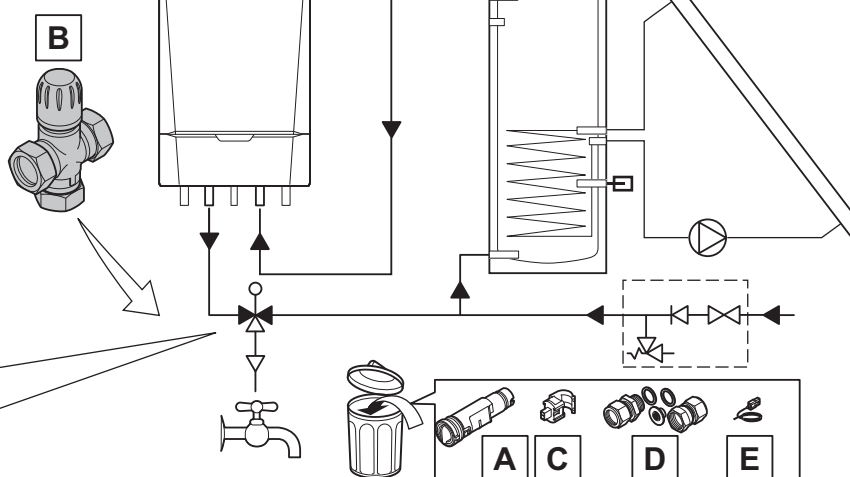  

100L

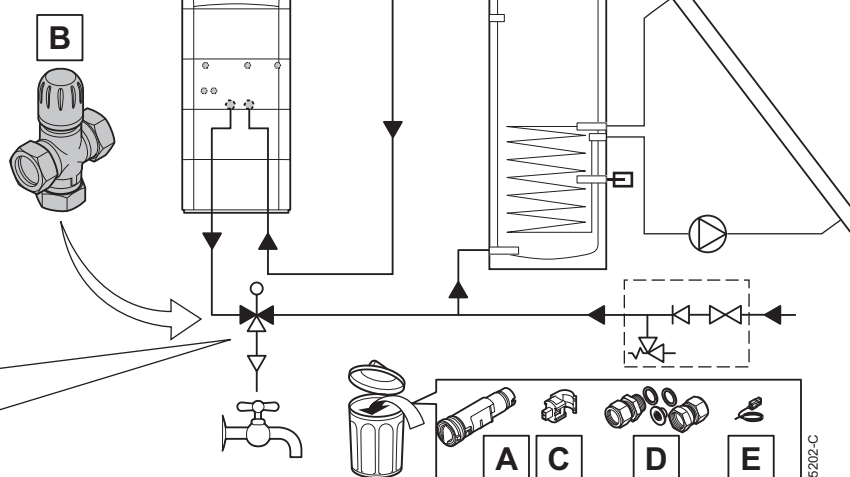 

T005202-C

A/B



Controleer de instelling van de parameters, zie de installatie- en servicehandleiding van de ketel.

Check the parameter settings, refer to the installation and service manual of the boiler.

Contrôler le réglage des paramètres, se reporter à la notice d'installation et d'entretien de la chaudière.

Einstellung der Parameter prüfen, siehe Installations- und Wartungsanleitung des Heizkessels.

Comprobar el ajuste de los parámetros, consultar las instrucciones de instalación y mantenimiento de la caldera.

Controllare la regolazione dei parametri, fare riferimento alle istruzioni di installazione e di manutenzione della caldaia.

Ventiel eerst helemaal open (T=70°C) = max. Dan 2 (2x 360°) slagen dicht met tolerantie $\pm \frac{1}{4}$ slag (T= 60 °C)

 
 
 
First fully open valve (T=70°C) = max. Then turn 2 (2x 360°) to close with a tolerance of $\pm \frac{1}{4}$ turn (T= 60°C)

Valve d'abord complètement ouverte (T=70 °C) = max. Ensuite 2 (2x 360°) fois fermées avec une tolérance de $\pm \frac{1}{4}$ coup (T= 60 °C)

Ventil zuerst ganz öffnen (T=70 °C) = max. Dann 2 (2x 360°) Umdrehungen zudrehen mit $\pm \frac{1}{4}$ -Umdrehung Toleranz (T= 60 °C)

En primer lugar, abrir totalmente la válvula (T=70 °C) = máx. A continuación, girar 2 veces (2x 360°) para cerrar con una tolerancia de giro de $\pm \frac{1}{4}$ (T= 60 °C)

Dapprima, aprire completamente la valvola (T=70 °C) = max. Quindi ruotarla 2 volte (2x 360°) per chiuderla con una tolleranza di $\pm \frac{1}{4}$ di giro (T= 60 °C)

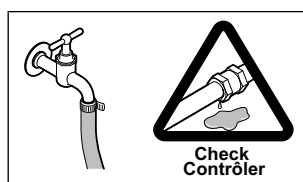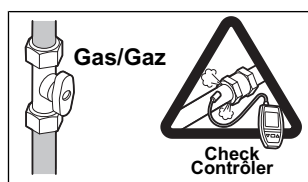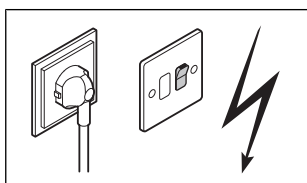

© **Copyright**

All technical and technological information contained in these technical instructions, as well as any drawings and technical descriptions supplied, remain our property and shall not be multiplied without our prior consent in writing.

Ours is a policy of continuous development. We reserve the right to alter specifications without prior notification.

Subject to alterations.

116291-03



116291