

# Double push button for Niko Home Control, cream

100-51036



This push button allows you to control two groups of roll-down shutters, curtains or sunblinds. It is attached to the wall-mounted printed circuit board via a click mechanism. Switch including button. Colour: cream.

## Technical data

Double push button for Niko Home Control, cream.

- Material finishing: polycarbonate (PC) + acrylic-styrene-acrylate (ASA)
- Imprint indication: arrows printed on the top and bottom keys show whether you are raising or lowering the roller shutter or blind. On the middle key(s) a shutter is printed including the favourite button. If you press this key the shutter, sunblinds or blind will go straight to the set position
- Number of lenses: 0
- Colour: cream
- Colour RAL (approximately): 1013
- Colour NCS (approximately): NCS S 1005-Y10R
- Surface treatment: coloured in mass
- Fire safety:
  - all plastic components are self-extinguishing (comply with a filament test of 650°C)
  - all plastic components are halogen-free
- Input voltage: 26 Vdc
- Dismantling method: pull the central plate off the base
- Impact resistance: after mounting, an impact-resistance of IK06 is guaranteed
- Dimensions (HxWxD): 44.5 mm x 44.5 mm x 8.6 mm
- Marking: CE

