


Befestigung -

08 10 10 608 90

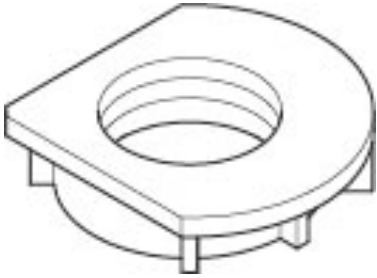



Befestigung -

08 10 10 608 90



Befestigung -

08 10 10 608 90



Befestigung -

08 10 10 608 90



Befestigung -

08 10 10 608 90

Ersatzteilstückliste