

SpaceLogic Sensors

SLP Series Humidity Sensors – BACnet and Modbus

SLP Series Temperature Sensors – BACnet and Modbus



Note: A subset of models shown.

Product Description

The SpaceLogic SLP Series of humidity and temperature sensors for living space is a flexible multisensor platform for use with BAS controllers designed to accept BACnet or Modbus outputs. Housings are available in Medium matte white and Optimum faces available in black and white. All housing types are available with three user interface options: touchscreen, LCD with three buttons and blank. Temperature sensors are included with all SLP Series humidity sensors.

Features

- Medium matte white housing or optimum glass panel housing available in white or black
- Replaceable RH element available in 1% & 2% with NIST certificate
- Temperature output on all models
- 61 mm (2.4") backlit color touchscreen and LCD, three button display options available
 - Digital temperature indication (0.1° display resolution of °F or °C)
 - Digital humidity indication (0.1% RH display resolution)
 - Temperature, RH and fan speed setpoints
 - Configurable screen/button lock and display timeout
 - Override
- Selectable BACnet MSTP and Modbus outputs via RS-485
- 18-24 AWG screw terminals

Available Products Matrix

SLP	Housing	User Interface		RH Sensor*	Example:
	☐	☐	X	☐	SLP ☐ ☐ ☐ ☐
	S = Medium white matte housing	T = Color touchscreen		2 = 2%	
	W = Optimum white housing	L = 3-button LCD display		X = None	
	B = Optimum black housing	X = None			

*Replaceable RH module available to be ordered separately per table below.

Replaceable RH Elements

Model	RH Accuracy	Calibration Certificate	Description
SLXRHS1N	±1%	X	Replaceable RH sensor, 1% with NIST certification
SLXRHS2N	±2%	X	Replaceable RH sensor, 2% with NIST certification
SLXRHS2X	±2%		Replaceable RH sensor, 2%

USA: +1 888-444-1311
 Europe: +46 10 478 2000
 Asia: +65 6484 7877
www.schneider-electric.com

Life Is On

Schneider
Electric

Specifications

Operating Environment	
Input power	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz
Protocol output	BACnet or Modbus via RS-485, selectable
Operating temp. range	0 to 50 °C (32 to 122 °F)
Operating humidity range	0 to 95% RH non-condensing
Housing material	High impact ABS plastic
IP rating	IP 30
Mounting location	For indoor use only. Not suitable for wet locations.
Surface mount	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes
RH Sensor	
HS sensor	Solid state capacitive, replaceable
Accuracy*	±2% from 10 to 80% RH @ 25°C (77 °F)
Hysteresis	1.5% typical
Linearity	Included in accuracy specification
Stability	±1% @ 20°C (68 °F) annually for 2 years
Output range	0 to 100% RH
Temperature coefficient	±0.1% RH/°C above or below 25 °C (77 °F) typical
Temperature Sensor	
Sensor type	Solid state, integrated circuit
Accuracy	±0.2 °C (±0.4 °F) typical
Resolution	0.1 °C (0.1 °F)
Range	0 to 50 °C (32 to 122 °F)
Display Models	
Touchscreen	61 mm (2.4 in), color, backlit, capacitive, 240x300px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
LCD	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
Setpoints**	
Temperature setpoint	Scale: 0 to 50 °C (32 to 122 °F) max., adjustable span
RH setpoint	Scale: 0 to 100% RH
Fan speed setpoint	Off, Low, Med., High, Auto
Override	
Override button	Display models feature a momentary override button
Wiring Terminals	
Terminal blocks	Screw terminals, 18-24 AWG

Screw terminal torque 0.2 N-m (2.0 in-lbF) max.

Regulatory Information


UL 916, European conformance CE:
EN61000-6-2
EN61000-6-3
Agency approvals EN61000 Series - industrial immunity
EN 61326-1
FCC Part 15 Class B, REACH, RoHS, Green Premium, RCM (Australia), ICES-003 (Canada), EAC (Russia), UKCA (UK)

* Humidity sensor measurement uncertainty should include: accuracy, hysteresis, temperature coefficient and stability.


** On display models only.

Dimensions mm (in.)

Optimum Housing

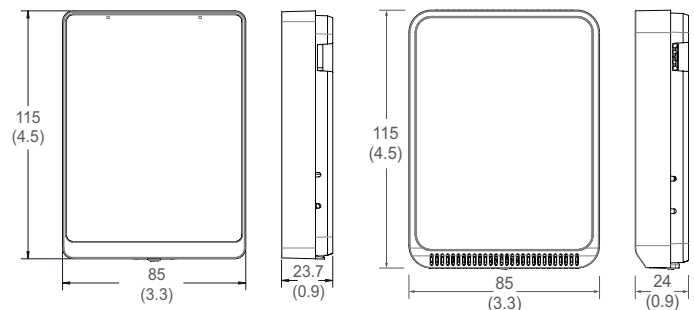

Base Hole Measurement

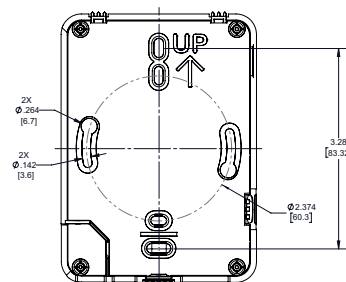

Installation

1. Remove the cover from the base at the bottom of the device.



2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the "UP" arrow facing upward. Lo-

USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

Life Is On

Schneider
Electric

Installation (cont.)


cate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.





3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.



4. Mount the backplate onto the wall using the screws provided.

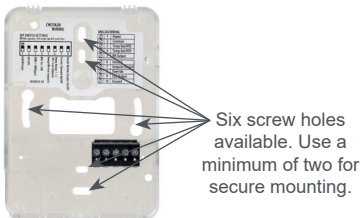

5. Connect the wires to the screw terminals. Do not over-tighten the screws.

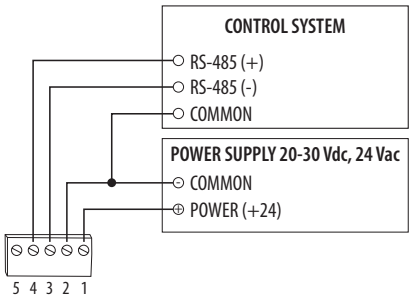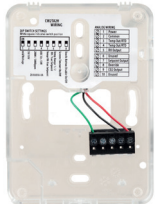


6. Configure the device.

Address Configuration:


Each device on a single network must have a unique address. Set the DIP switch labeled “ADDRESS” to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the “ADDRESS” DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

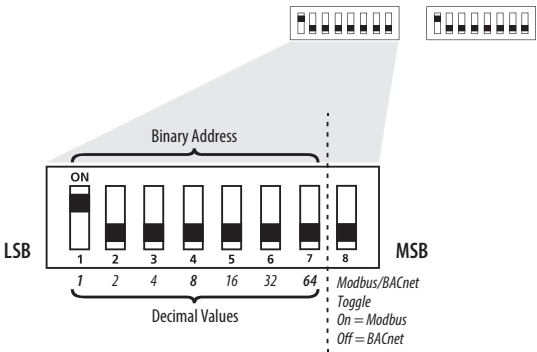

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

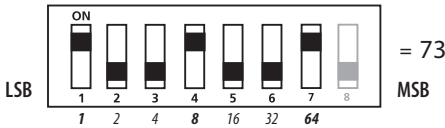


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 (1 + 8 + 64 = 73).

Installation (cont.)

Communications Configuration:

See the Product Diagram section for the location of the DIP switch labeled “CONFIG”. The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

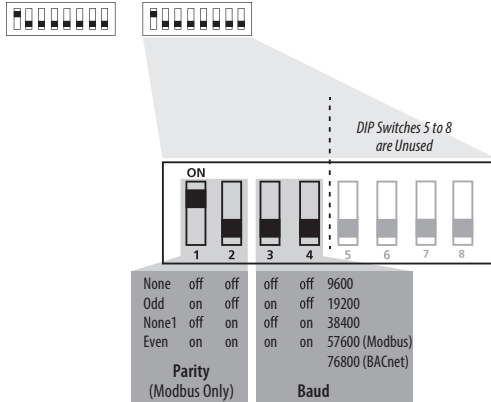

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8
off	off	on	off	off	off	off	off
None		19200 Baud		Unused			

Modbus Point Map

Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

* Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to “read only” holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case.

“Preserved” means the values is maintained through power outages.

32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format
1	Temp reading	32-bit floating point
2		
3	Humidity reading	32-bit floating point
4		
5~8	Unused	NA
9	Model number	4x16-bit ASCII characters as a single query
10		
11		
12	Serial number	4x16-bit ASCII characters as a single query
13~41		
42		
43	Serial number	4x16-bit ASCII characters as a single query
44		
45		

32-Bit Holding Registers (Read/Write):

16-Bit Register Location	Description	Format
1	Temp setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5	Screen color set	32-bit
6		
7~39	Device name	4x16-bit ASCII characters as a single query
40	Fan speed	32-bit
41		

Note: All holding registers are preserved during power outages.

Coils (Read/Write):

Register	Description
3*	Touch button disable
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
12*	Display shows temperature setpoint on main screen

*Preserved during power outages.

Installation (cont.)

BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. “Preserved” means the value is maintained through power outages.

Present_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint	Min_Pres_Value 0	Max_Pres_Value Max_Pres_Value -1
Min_Pres_Value	Min_Pres_Value +1	50
Max_Pres_Value		
Humidity Setpoint	Min_Pres_Value 0	Max_Pres_Value Max_Pres_Value -1
Min_Pres_Value	Min_Pres_Value +1	100
Max_Pres_Value		
Screen Color	1	4
Fan Speed	1	5
Device_Instance	0	4,194,302

Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max Info Frames Max_Master	APDU_Timeout Max_Master Object_Name

Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in Room
Room Humidity	AI 2	Humidity in Room
Temperature Setpoint*	AV 1	Setpoint Value for Temperature
Humidity Setpoint*	AV2	Setpoint Value for Humidity
Touch Disable*	BV2	ACTIVE disables Touch Response INACTIVE enables Touch Response

Object Name	Object Identifier	Object Property
Temperature Units*	BV4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV 6	ACTIVE enables Screen Timeout INACTIVE disables Screen Timeout
Display Humidity*	BV7	ACTIVE displays humidity on Screen INACTIVE removes humidity from Screen
Select Temperature Display*	BV11	ACTIVE displays temperature setpoint on main screen INACTIVE displays temperature setpoint in upper left corner and current temperature on main screen
Screen Color Set*	MSV 1	Selection for Screen Color Theme
Fan Speed*	MSV 2	Fan Speed Selection

* Preserved during power outages.

Device Objects Table:

Object Name	Object Identifier	Object Property	Descrip.
Living Space Room Unit XXXXXXX	Vendor_ID + nnn	Object_Identifier (R/W)	Unique value where nnn initially is the MS/TP address

BACnet Protocol Implementation Conformance Statement

Vendor Name: Schneider Electric

Product Name: Living Space Room Unit

Product Model: SLPXXXX

BACnet Protocol Version : 1

BACnet Protocol Revision: 16

Product Description: Environmental Sensor

BACnet Standardized Device Profile (AnnexL):

BACnet Application Specific Controller (B-ASC)

List All BACnet Interoperability Building Blocks Supported(Annex K):

Installation (cont.)

DS-RP-B, DS-RPM-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B

Data Link Layer Options: MS/TP (Clause 9), baud rates, 9600, 19200, 38400, 76800

Device Address Binding: Static Device binding is not supported.

Networking Options: None

Character Sets supported: ISO 10646 (UTF-8)

7. With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.




8. Install locking screw to secure cover in closed position.




Touchscreen Operation

Main Screen

The touchscreen user interface displays applicable sensor output values (temperature and RH), setpoint value and menu button.

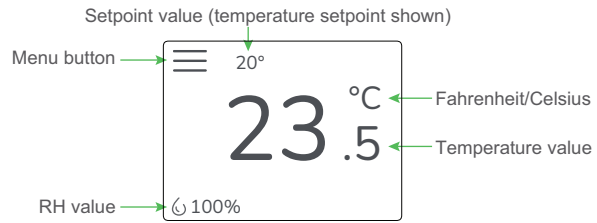

Room Temperature Display Option

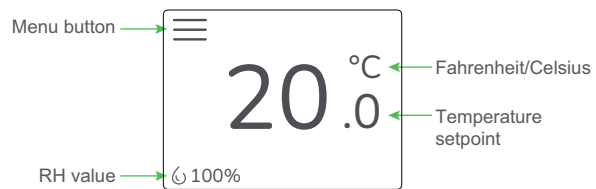

Temperature Setpoint Display Option

Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings and setpoint submenu (temp, RH and fan) are displayed on the menu screen.



Note: RH setpoint will not appear on non-RH models.

Menu Button Functions

 **Integrator's Submenu**
Press this icon to access the Integrator's menu.

Submenu Only

Device

Model SLPSTX2

Serial Number 4E54FB0A

Firmware Revision LSA_APP_REV00800

page 1 of 3

Protocol

Sensor Address 1

Baud Rate 38400

page 2 of 3

Sensors

Temperature C 24.7

Humidity % 100

page 3 of 3

 **Occupied Override Button**
Press this icon to provide momentary signal output to the controller

Single Press Only

 Signals occupied/override call to controller.

 **Fahrenheit/Celsius Switch**
Press this icon to display either °C or °F.

Single Press Only

 Changes units to Fahrenheit when pressed.

 Changes units to Celsius when pressed.

 **Settings**
This icon provides the ability to change the color scheme of the display.

Submenu Only

Color palette selection screen with four color options: green, red, blue, and grey.

Four display screens showing temperature 23.5°C and humidity 100% with different color schemes: green, red, blue, and grey.

Four corresponding menu screens below the displays, each with a different color scheme and icons for Integrator's Submenu, Occupied Override, Fahrenheit/Celsius Switch, and Settings.

 **Temp Setpoint Adjustment**
Click this icon to access the setpoint change menu.

Submenu Only

Temp Setpoint Adjustment screen showing 85.0°F with minus and plus buttons.

 **Humidity Setpoint Adjustment**
Click this icon to access the setpoint change menu.

Submenu Only


Humidity Setpoint Adjustment screen showing 65% with minus and plus buttons.

 **Fan Speed**
Click this icon to access the fan speed menu.


Submenu Only

Fan Speed menu screen showing five fan speed icons. The first icon is highlighted with a green arrow and the word "Selected".

LCD Display Operation
Button Functions

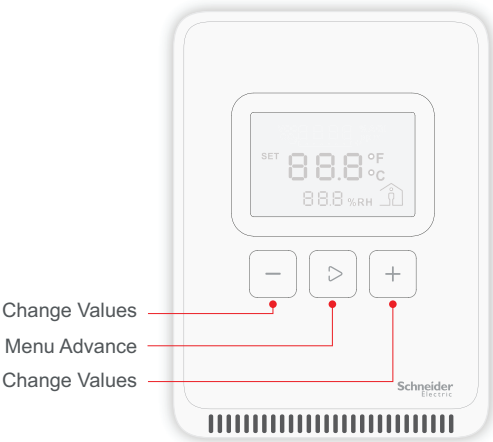


Display Icons
The main screen displays sensor values for RH (if equipped), room temperature or temperature setpoint and Celsius/Fahrenheit.

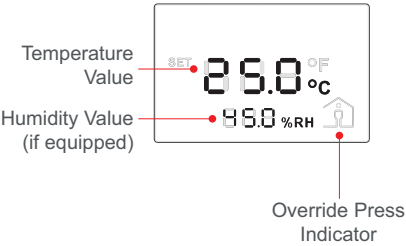


Setpoint Function
The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

Temperature Setpoint Adjustment

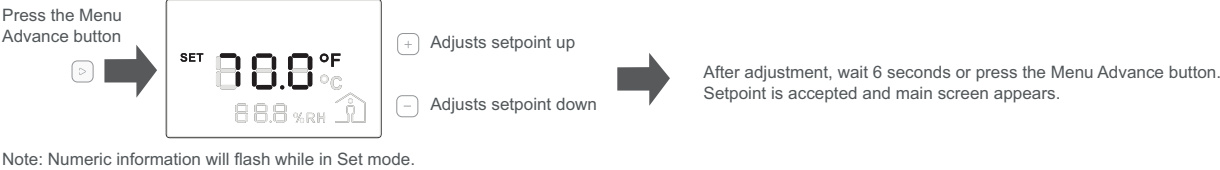


Note: Numeric information will flash while in Set mode.

RH Setpoint Adjustment

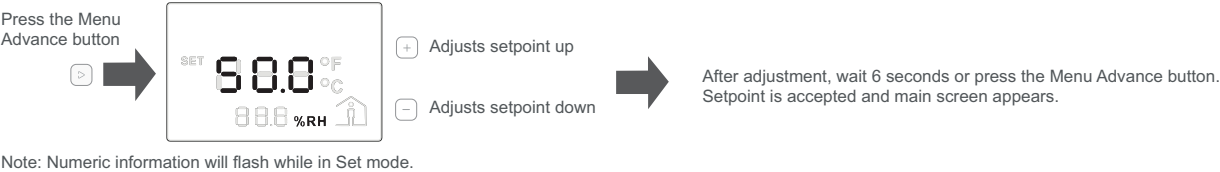

Note: Numeric information will flash while in Set mode.

Fan Speed Setpoint Adjustment

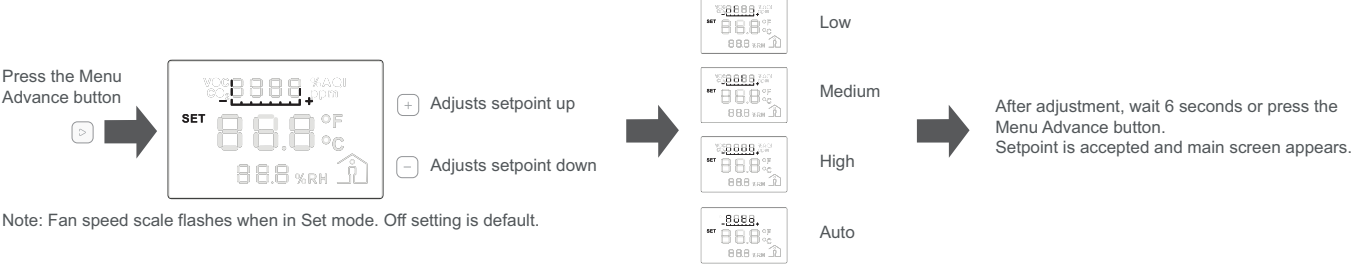

Note: Fan speed scale flashes when in Set mode. Off setting is default.


USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com



Setpoint Function (cont.)


Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

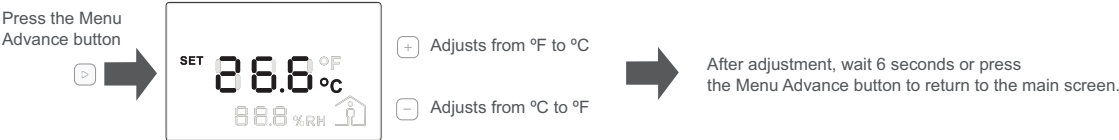

Note: °F or °C text will flash while in Set mode.

Occupied/Override Button

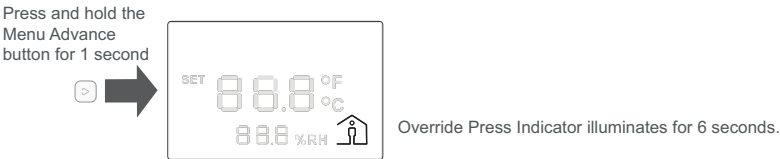

China RoHS Compliance Information
Environment-Friendly Use Period (EFUP) Table

部件名称		有害物质 - Hazardous Substances				
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572规定的限量要求。

(企业可在此处，根据实际情况对上表中打“X”的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B

Schneider Electric Limited
Stafford Park 5
Telford TF3 3BL
United Kingdom

UK
CA

USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

