
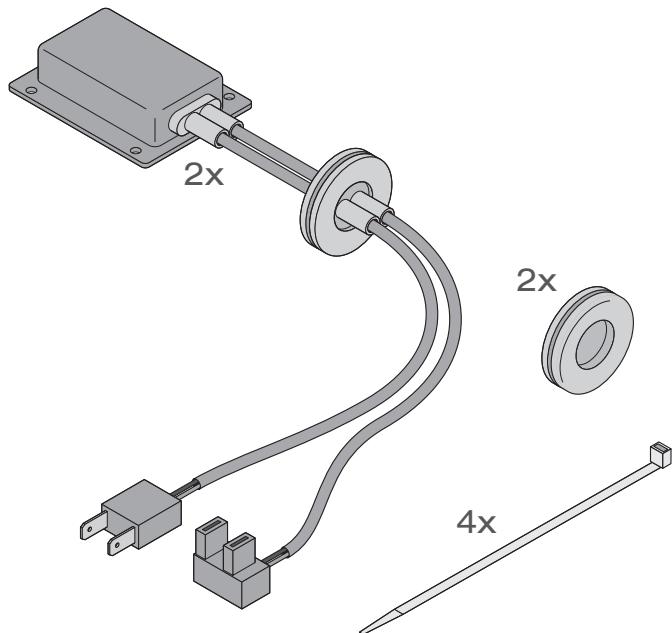


LEDriving® SMART CANBUS


OSRAM

LEDSC01

Mercedes A-Klasse W169

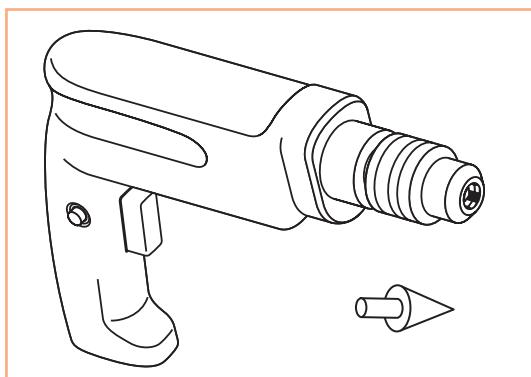

1

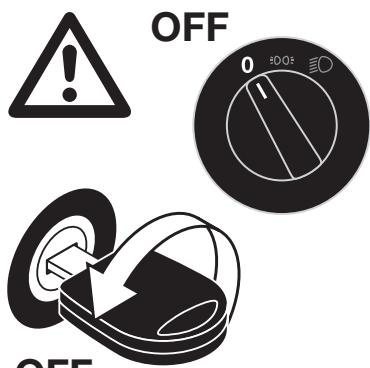


R




L

2

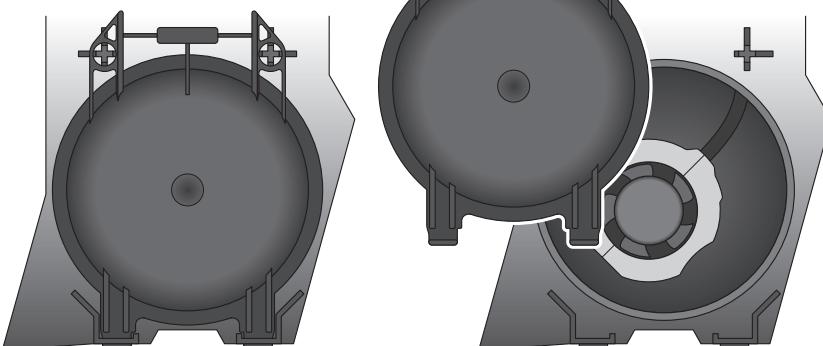


3

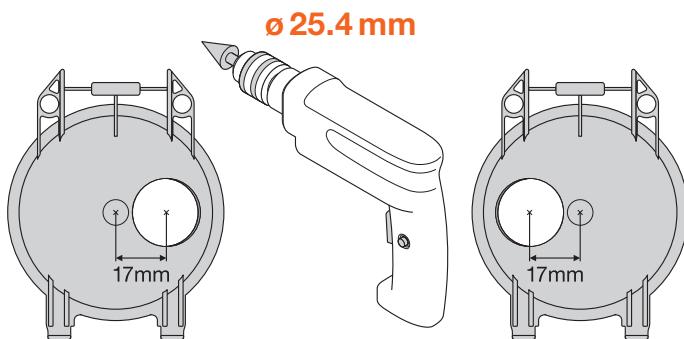R**L**

**Mark the headlight protective cover where the hole needs to be drilled.
Using a step drill, drill the hole needed for the cable to pass through.²⁾**

7

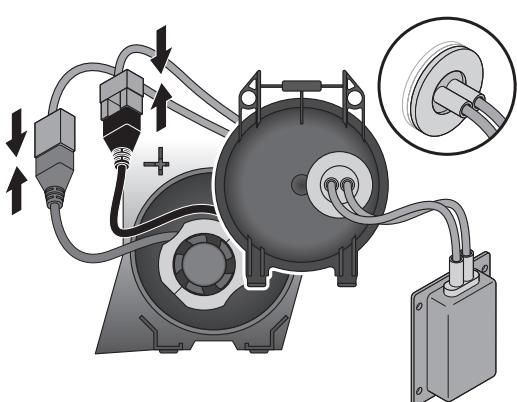


5



Seal using rubber gasket.³⁾



10

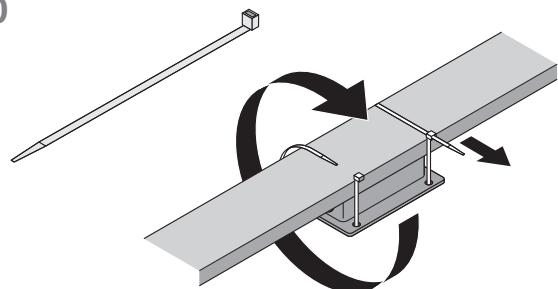

Mount the SMART CANBUS (load resistor) to the vehicle's body (metal).

Please note: Pull the cable ties until they are taut.⁴⁾

5

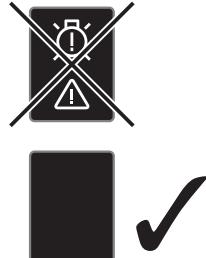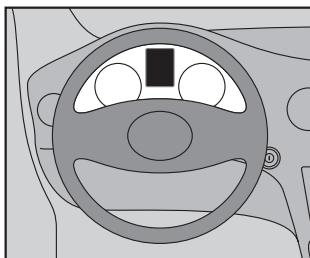

For questions regarding maintenance or technical problems, please contact OSRAM customer service via automotive-service@osram.com.⁵⁾

