

Rotary actuator for rotary valves and butterfly valves

- Torque motor 40 Nm
- Nominal voltage AC/DC 24 V
- Control modulating 0.5...10 V
- Position feedback 0.5...10 V
- Running time motor 35 s
- Optimum weather protection for use outdoors



Technical data

Flootuical	4-4-
Electrical	aata


Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz
Nominal voltage range	AC 19.228.8 V / DC 21.628.8 V
Power consumption in operation	8 W
Power consumption in rest position	2.5 W
Power consumption for wire sizing	11 VA
Connection supply / control	Terminals 4 mm² (cable ø410 mm, 4-wire)
Parallel operation	Yes (note the performance data)
Torque meter	40 Nm

Functional data

Torque motor	40 Nm
Operating range Y	0.510 V
Input impedance	100 kΩ
Position feedback U	0.510 V
Position feedback U note	Max. 0.5 mA
Position accuracy	±5%
Manual override	with push-button, can be locked
Running time motor	35 s / 90°
Sound power level, motor	35 dB(A)
Position indication	Yes

Safety data

Protection class IEC/EN	III, Safety Extra-Low Voltage (SELV)
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP66/67
Degree of protection NEMA/UL	NEMA 4X
Enclosure	UL Enclosure Type 4X
EMC	CE according to 2014/30/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Type of action	Type 1
Rated impulse voltage supply / control	0.8 kV
Pollution degree	4
Ambient humidity	Max. 100% RH
Ambient temperature	-3050°C [-22122°F]
Ambient temperature note	-4050°C for actuator with integrated heating



Technical data		
Safety data	Storage temperature	-4080°C [-40176°F]
	Servicing	maintenance-free
Mechanical data	Connection flange	F05
Weight	Weight	3.3 kg

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
 systems and must not be used outside the specified field of application, especially in aircraft
 or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- Junction boxes must at least correspond with enclosure IP degree of protection!
- The cover of the protective housing may be opened for adjustment and servicing. When it is closed afterwards, the housing must seal tight (see installation instructions).
- The switch for changing the direction of rotation may only be operated by authorised specialists. The direction of rotation must not in particular be reversed in a frost protection circuit.
- The angle of rotation is not permitted to be subjected to mechanical limitation. It is forbidden to alter the mechanical end stops.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The device is not designed for applications where chemical influences (gases, fluids) are present or for utilisation in corrosive environments in general.
- The actuator may not be used in plenary applications (e.g. suspended ceilings or raised floors).
- The materials used may be subject to external influences (temperature, pressure, construction fastening, effect of chemical substances, etc.), which cannot be simulated in laboratory tests or field trials. In case of doubt, we definitely recommend that you carry out a test. This information does not imply any legal entitlement. Belimo will not be held liable and will provide no warranty.
- If cables which are not authorised for UL (NEMA) Type 4X applications are used, then flexible
 metallic cable conduits or suitable threaded cable conduits of equal value are to be used.
- When used under high UV loads, e.g. extreme sunlight, the use of flexible metallic or equivalent cable conduits is recommended.

Product features

Fields of application

The actuator is particularly suitable for utilisation in outdoor applications and is protected against the following weather conditions:

- UV radiation
- Rain / Snow
- Dirt / Dust
- Air humidity
- Alternating climate / frequent and severe temperature fluctuations (Recommendation: use the actuator with integrated factory-installed heating which can be ordered separately to prevent internal condensation)

Operating mode

The actuator is connected with a standard control signal of 0...10 V and drives to the position defined by the control signal. Measuring voltage U serves for the electrical display of the valve position 0.5...100% and as control signal for other actuators.

Simple direct mounting

Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The mounting orientation in relation to the fitting can be selected in 90° steps.



Product features

Manual override Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

The housing cover must be removed for manual override.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops. Standard setting 0...90°. The housing

cover must be removed to set the angle of rotation.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when

the end stop is reached.

Accessories

Electrical accessories	Description	Туре	
	Auxiliary switch 2x SPDT add-on, grey	S2A GR	
	Feedback potentiometer 140 Ω add-on	P140A	
	Feedback potentiometer 1 kΩ add-on	P1000A	
	Feedback potentiometer 10 $k\Omega$ add-on	P10000A	
Options ex works only	Description	Туре	
	Heater, with adjustable thermostat	HT24-MG	
	Heater, with mechanical humidistat	HH24-MG	


Electrical installation



Supply from isolating transformer.


Parallel connection of other actuators possible. Observe the performance data. Direction of rotation switch is covered. Factory setting: Direction of rotation Y2. 3-point control only allowed with ball valves, not allowed with butterfly valves.

Wiring diagrams

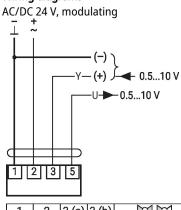


1	2	3 (a)	3 (b)	M M
	7	1		A - AB = 100%
~	~	_/_	_/_	A - AB = 0%
_~		_/_	0.5 V	A - AB = 0%
	_~	_/_	10 V	A - AB = 100%


Override control (frost protection circuit)

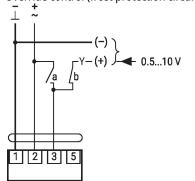



Dimensions

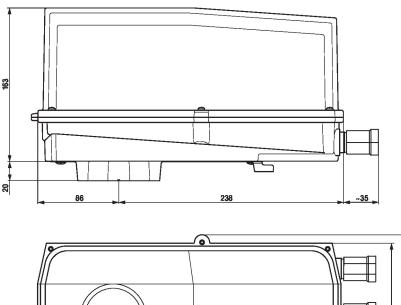

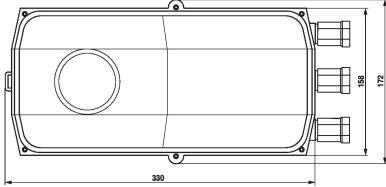

Further documentation

- The complete product range for water applications
- Data sheets for rotary valves and butterfly valves
- Installation instructions for actuators and/or rotary valves and butterfly valves
- General notes for project planning