

Modulating linear actuator for adjusting dampers and slide valves in technical building equipment

- Actuating force 150 N
- Nominal voltage AC/DC 24 V
- Control modulating 2...10 V
- Position feedback 2...10 V
- Length of Stroke Max. 200 mm, fixed setting



Technical	data
i cci ii iicai	uuu

Nominal voltage	AC/DC 24 V	
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.228.8 V / DC 19.228.8 V	
Power consumption in operation	1.5 W	
Power consumption in rest position	0.5 W	
Power consumption for wire sizing	3 VA	
Connection supply / control	Cable 1 m, 4x 0.75 mm <sup>2</sup>	
Parallel operation	Yes (note the performance data)	
Actuating force motor	150 N	

# **Functional data**

Actuating force motor	150 N
Operating range Y	210 V
Input impedance	100 kΩ
Position feedback U	210 V
Position feedback U note	Max. 1 mA
Position accuracy	±5%
Direction of motion motor	selectable with switch
Direction of motion note	Y = 0 V: with switch 0 (extended) / 1 (retracted)
Manual override	with push-button, can be locked
Stroke	200 mm
Length of Stroke	Max. 200 mm, fixed setting
Running time motor	150 s / 100 mm
Sound power level, motor	45 dB(A)

# Safety data

Protection class IFC/FN	III, Safety Extra-Low Voltage (SELV)
Power source UL	Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2
Enclosure	UL Enclosure Type 2
EMC	CE according to 2014/30/EU
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1
	The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
Hygiene test	According to VDI 6022 Part 1 / SWKI VA 104-01, cleanable and disinfectable, low emission
Type of action	Type 1



#### **Technical data** Safety data Rated impulse voltage supply / control 0.8 kV 3 Pollution degree Ambient humidity Max. 95% RH, non-condensing -30...50°C [-22...122°F] Ambient temperature -40...80°C [-40...176°F] Storage temperature Servicing maintenance-free Weight Weight $0.53 \, \text{kg}$

# Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning
  systems and must not be used outside the specified field of application, especially in aircraft or
  in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
  aggressive gases interfere directly with the device and that it is ensured that the ambient
  conditions remain within the thresholds according to the data sheet at any time.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The gear rod and the mechanical end stops must not be removed.
- The rotary supports and coupling pieces available as accessories must always be used if transverse forces are likely. In addition, the actuator must not be tightly bolted to the application. It must remain movable via the rotary support (refer to «Installation notes»).
- If the actuator is exposed to severely contaminated ambient air, appropriate precautions must be taken on the system side. Excessive deposits of dust, soot etc. can prevent the gear rod from being extended and retracted correctly.
- If not installed horizontally, the maual override button may only be actuated when there is no pressure on the gear rod.
- To calculate the actuating force required for air dampers and slide valves, the specifications supplied by the damper manufacturers concerning the cross- section and the design, as well as the installation situation and the ventilation conditions must be observed.
- If a rotary support and/or coupling piece is used, actuation force losses are to be expected.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

### **Product features**

**Mode of operation** The actuator is connected with a standard control signal of 0...10 V and drives to the position

defined by the control signal. Measuring voltage U serves for the electrical display of the

damper position 0...100% and as control signal for other actuators.

**Simple direct mounting** The actuator can be directly connected with the application using the enclosed screws. The head

of the gear rod is connected to the moving part of the ventilating application individually on the

mounting side or with the Z-KS2 coupling piece provided.

Manual override Manual override with push-button possible (the gear train is disengaged for as long as the

button is pressed or remains locked).

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.



#### Accessories **Electrical accessories** Description Type Signal converter voltage/current 100 kΩ 4...20 mA, Supply AC/DC 24 V **Z-UIC** Positioner for wall mounting SGA24 Positioner for built-in mounting SGE24 Positioner for front-panel mounting SGF24 Positioner for wall mounting CRP24-B1 Mechanical accessories Description Type End stop kit, Multipack 20 pcs. Z-AS2 Rotary support, for linear actuator, for compensation of transverse forces Z-DS1 Z-KS2 Coupling piece M6

## **Electrical installation**




Supply from isolating transformer.

Parallel connection of other actuators possible. Observe the performance data.

### Wire colours:

- 1 = black
- 2 = red
- 3 = white
- 5 = orange

# Wiring diagrams

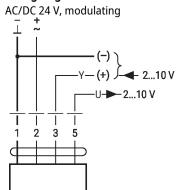

1	2	3		
	7	2 V	₩	<b>*</b>
		10 V	<b></b>	<b>+</b>

# **Installation notes**



If a rotary support and/or coupling piece is used, losses in the actuation force losses are to be expected.

Applications without transverse forces

The linear actuator is screwed directly to the housing at three points. Afterwards, the head of the gear rod is fastened to the moving part of the ventilation application (e.g. damper or slide valve).

Applications with transverse forces

Connect the coupling piece with the internal thread (Z-KS2) to the head of the gear rod. Screw the rotary support (Z-DS1) to the ventilation application. Afterwards, the linear actuator is screwed to the previously mounted rotary support with the enclosed screw. Then, the coupling piece, which is mounted to the head of the gear rod, is attached to the moving part of the ventilating application (e.g. damper or slide valve). The transverse forces can be compensated for to a certain limit with the rotary support and/or coupling piece. The maximum permissible swivel angle of the rotary support and coupling piece is 10°, laterally and upwards.



# Dimensions

