

12. Exploded view and spare parts

The parts of the air heater are shown in an exploded view in figure 31. The table below describes each part and shows the correct article number for a replacement part.

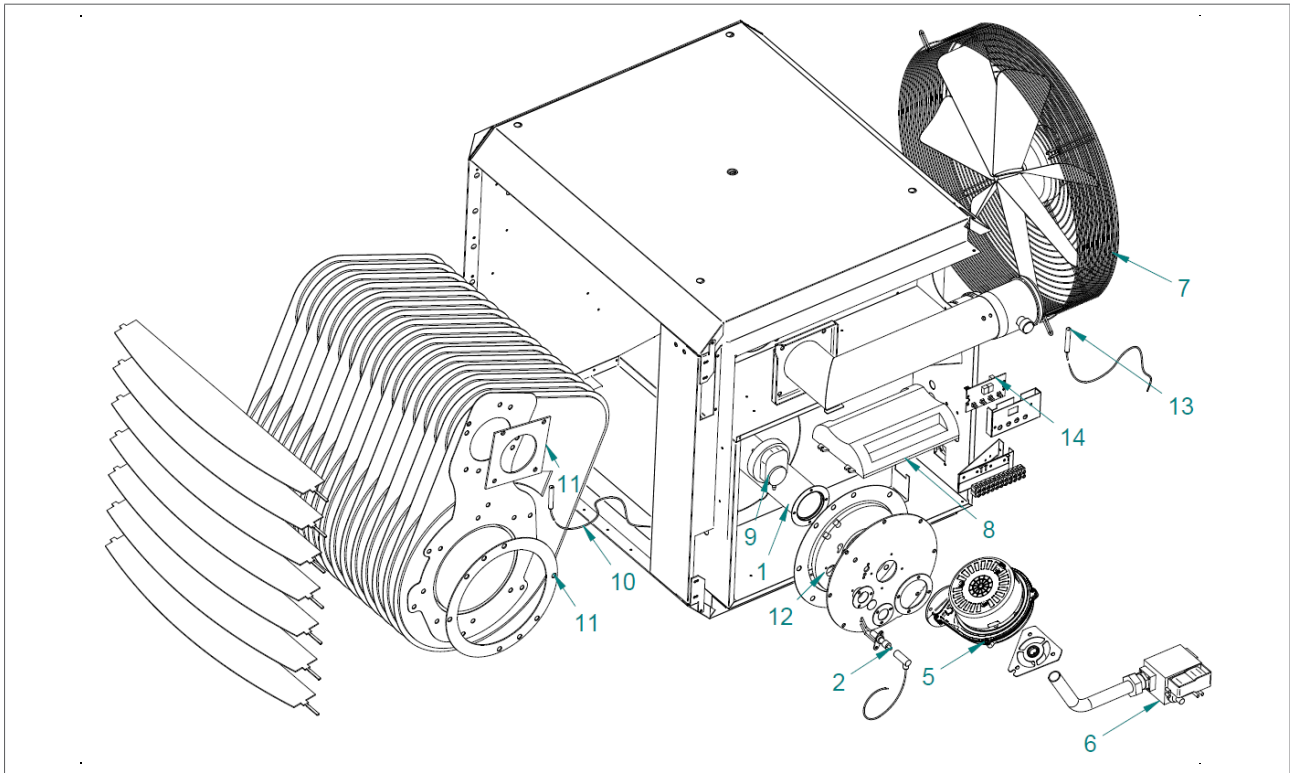


Figure 31 - Exploded view of the XR10+ - XR100+

No.	Description	XR10+	XR20+	XR30+	XR40+	XR50+	XR60+	XR80+	XR100+
1	Burner natural gas	GA3206	GA3207	GA3208	GA3210	GA3210	GA3212	GA3232	GX3214
1	Burner propane	GA3224	GA3226	GA3228	GA3230	GA3230	GA3232	GA3232	GX3214
2	Ignition / ionisation set	GA3460	GA3460	GA3460	GA3460	GA3460	GA3460	GA3460	GA3460
5	Burner fan	GY4523	GY4523	GY4523	GY4523	GY4523	GY4523	IY4502	IY4502
6	Gas valve	GA3000	GA3000	GA3000	GA3000	GA3000	GA3000	GY3002	GY3002
7	System fan	GX4201	GX4204	GX4204	GX4206	GX4217	GX4217	GX4212 (4x)	GX4214 (4x)
8	Burner control unit (EBM966)	GY5901	GY5901	GY5901	GY5901	GY5901	GY5901	GY5901	GY5901
9	Pressure switch	GX3932	GX3932	GX3932	GX3932	GX3932	GX3932	GX3932	GX3932
10	Heat exchange sensor	GY3932	GY3932	GY3932	GY3932	GY3932	GY3932	GY3933	GY3933
11	Gasket set	GA6702	GA6702	GA6702	GA6706	GA6706	GA6706	GA6707	GA6707
12	Burner isolation	GA6700	GA6700	GA6700	GA6704	GA6704	GA6704	IX6731	IX6730
13	Delta-T sensor	GY3931	GY3931	GY3931	GY3931	GY3931	GY3931	GY3931	GY3931
14	Display PCB	GY5902	GY5902	GY5902	GY5902	GY5902	GY5902	GY5902	GY5902
15	Flue sensor XR	GX3931	GX3931	GX3931	GX3931	GX3931	GX3931	GX3931	GX3931