



COMAP

REPLACEMENT KIT

DESCRIPTION

Suitcase allowing to change all COMAP mechanisms: manual valve (Sar), manual valve double regulating (Universar), fixed and preset KV, M30 or M28 thermostatic valves.

VERSIONS


Connection	M28, M30
Manual valve	Eurosar simple et double setting (expet 1"), Universar
Thermostatic valve	Fixed and preset Kv



BENEFITS

- Transform easily a manual valve into a thermostatic valve
- Maintenance under water is possible

COMPOSITION

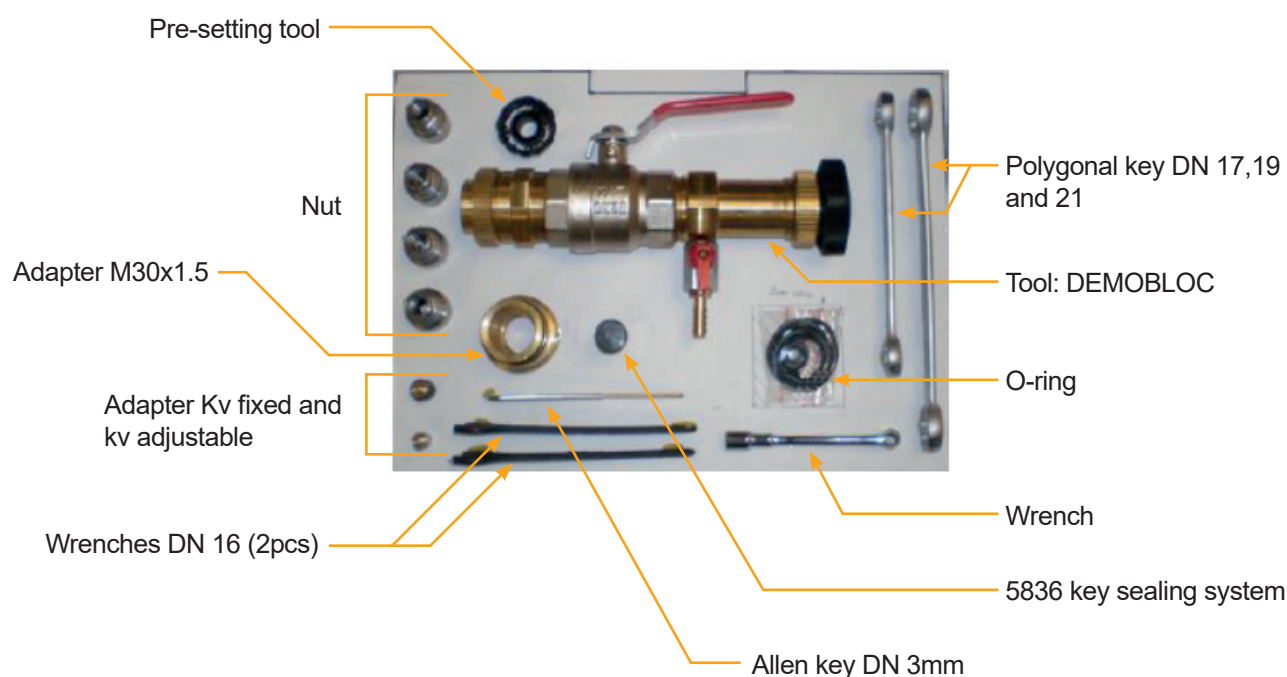




REPLACEMENT KIT

COMAP

DIMENSIONS

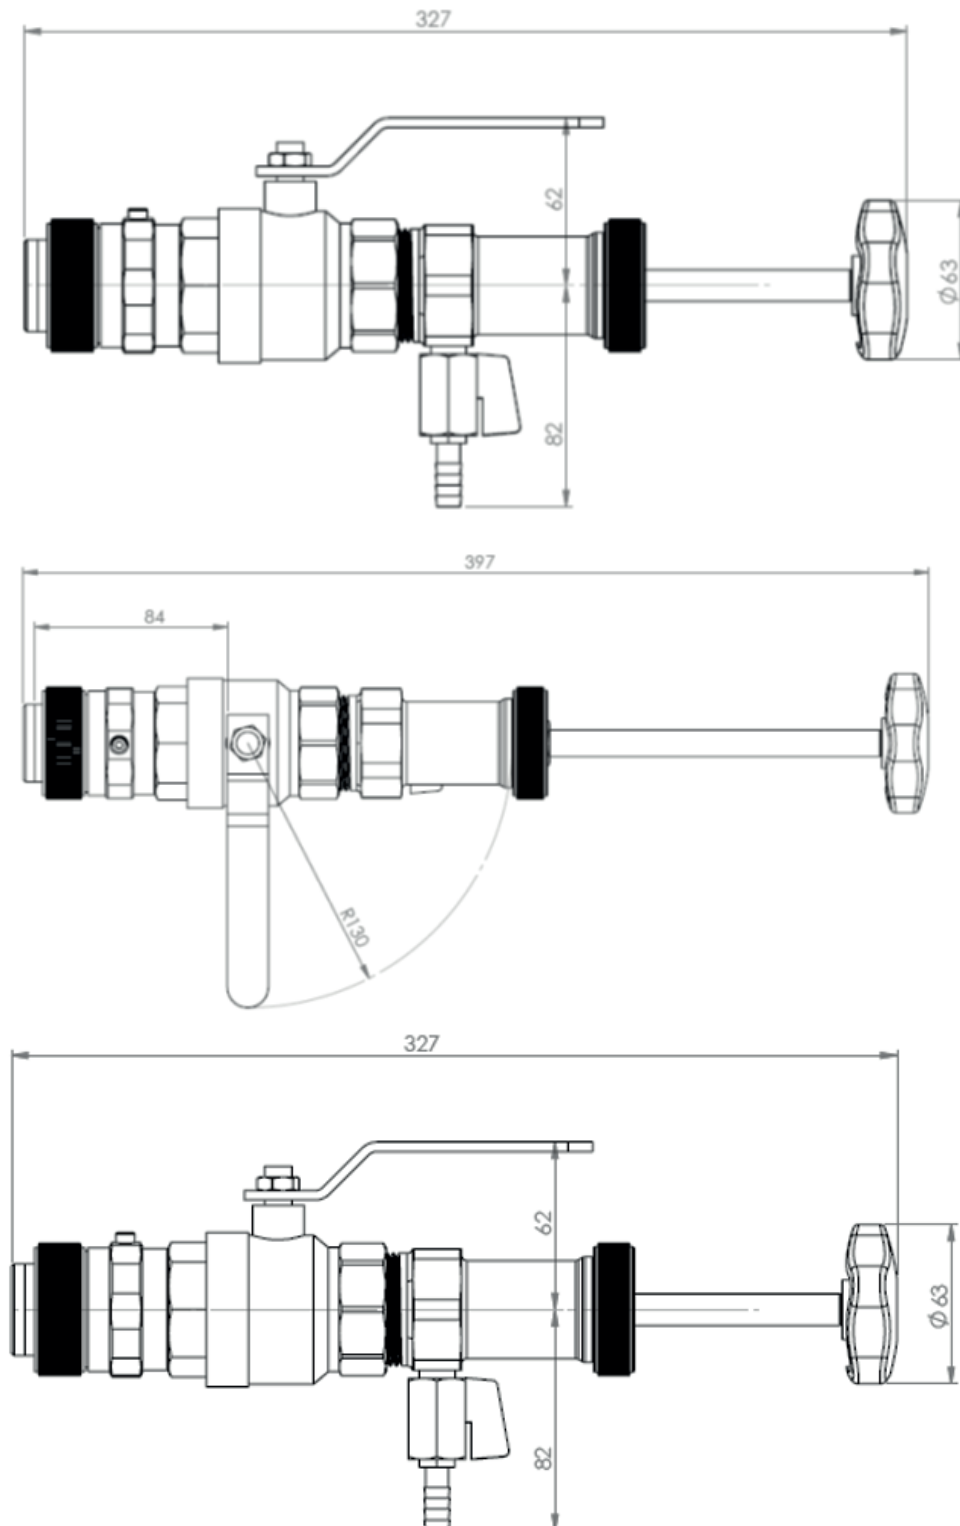




REPLACEMENT KIT

COMAP

PRODUCT RANGE

Photo	Codes
	P120001001

INSTALLATION NOTICE

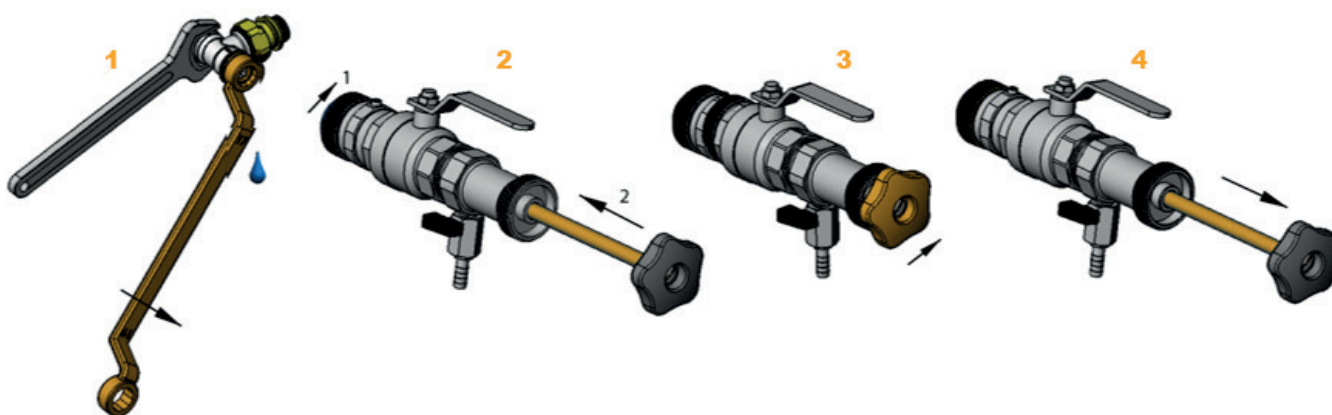

1. Start to unscrew the mechanism using a wrench until the first drop.
2. Rotating the screw thread on the valve tip. Push the plunger until it engages the mechanism
3. Unscrew until the mechanism came out of the body
4. Pull the plunger to the maximum




5. Close the ball valve
6. Open the drain valve
7. Pull out the plunger and remove the mechanism
8. Replace with a new mechanism



REPLACEMENT KIT

COMAP

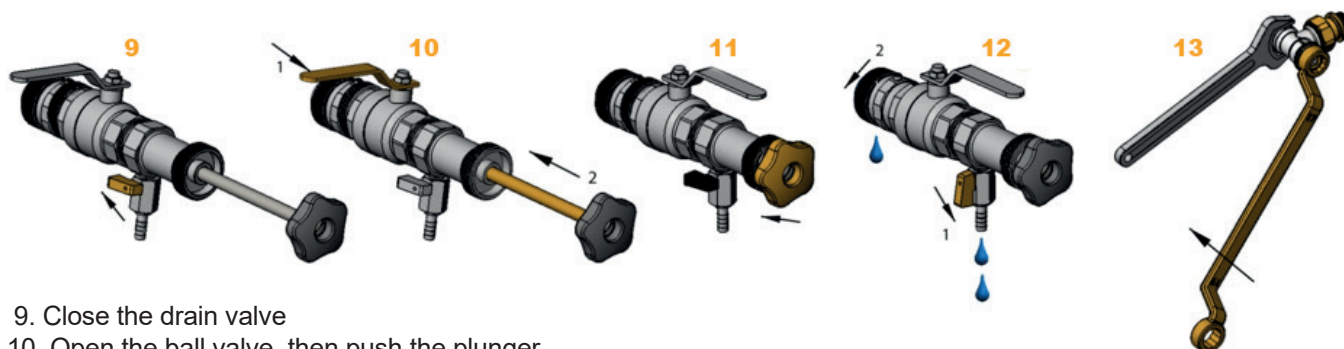

9. Close the drain valve
10. Open the ball valve, then push the plunger
11. Screw in order to put back the mechanism into the body
12. Open the drain valve and unscrew the demobloc
13. Screw the mechanism back using a wrench (max 35 Nm)

ACCESSORIES

Photo	Designation	Dimensions	Codes
	Kit M28-M30 for new mechanism for replacement kit before 01/01/2014	17-19	P120002001
	Compatibility accessories for AutoSar for replacement kit before 01/01/2017		P120004001
	Manual cartridge single regulating 5812	3/8"-1/2" 3/4"	812503 812506
	Manual cartridge for replacement double regulating 5813	3/8"-1/2" 3/4"	813503 813506
	Thermostatic cartridge for EuroSar (408-409-418-419)	3/8"-1/2" Kv 0.03	815503
		3/8"-1/2" Kv 0.06	815506
		3/8"-1/2" Kv 0.13	815513
		3/8" Kv 0.34	815530
		1/2" Kv 0.64	815550
		3/4" Kv 0.95	816590
	Manual cartridge for Universar (448-449)	1/2" Kv standard	819505
		1/2" Kv réduit	819554
	Thermostatic cartridge for replacement Universar	1/2"	581700



REPLACEMENT KIT

COMAP

Photo	Designation	Dimensions		Code
For TRV with 2mm needle diameter (old)				
	Thermostatic cartridge for RTH (before 2013) M28 fixed Kv	3/8"-1/2"	Kv 0.03	815503
		3/8"-1/2"	Kv 0.06	815506
		3/8"-1/2"	Kv 0.13	815513
		3/8"	Kv 0.34	815530
		1/2"	Kv 0.64	815550
		3/4"	Kv 0.95	816590
	Thermostatic cartridge for RTH (before 2013) M28 fixed Kv	3/8" -1/2" -3/4"	Kv 0.025-0.5	581400
	Thermostatic cartridge for RTH (before 2013) M30 fixed Kv	3/8"-1/2"-3/4"	Kv 0.025-0.5	581430
For TRV with 4mm needle diameter (new)				
	Thermostatic cartridge for RTH (after 2013) M28 fixed Kv	3/8"-1/2"	Kv 0.55	R815555
		3/4"	Kv 0.95	R816590
	Thermostatic cartridge for RTH (after 2013) M28 fixed Kv	3/8"-1/2"-3/4"	Kv 0.028-0.49	R581400
	Thermostatic cartridge for RTH (after 2013) M30 fixed Kv	3/8"-1/2"	Kv 0.55	R815532
		3/4"	Kv 0.95	R816532
	Thermostatic cartridge adjustable Kv for Eurosar 0.028-0.49	3/8"-1/2"-3/4"	Kv 0.028-0.49	R581400
	Thermostatic head Senso	M28		R100000
		M30		R100100



REPLACEMENT KIT

COMAP

Photo	Designation	Dimensions	Code
	Color kit MySenso	Stainless	R100080
		Chrome	R100081
		Black	R100082
		Zebra	R100083
		Tangerine	R100084
		Purple	R100085
		Citrus	R100086
		Red Ming	R100087
		Pearl	R100088
		Mauve	R100089
		Skyblue	R100090
		Chocolate	R100091
		Anthracite	R100092