

Rotary actuator for butterfly valves

- Torque motor Max. 90 Nm
- Nominal voltage AC/DC 24 V
- Control Open/close
- Running time motor 35 s
- Optimum weather protection for use outdoors



| Techr | וכטו | けっけつ |
|--------|-------|------|
| IECIII | IILAI | uala |

| Electrical data | Nominal voltage | AC/DC 24 V | |
|-----------------|--|---|--|
| | Nominal voltage frequency | 50/60 Hz | |
| | Nominal voltage range | AC 19.228.8 V / DC 21.628.8 V | |
| | Power consumption in operation | 9 W | |
| | Power consumption in rest position | 2 W | |
| | Power consumption for wire sizing | 12 VA | |
| | Connection supply / control | Cable 1 m, 3x 0.75 mm² (halogen-free) | |
| | Parallel operation | Yes (note the performance data) | |
| Functional data | Torque motor | Max. 90 Nm (not constant) | |
| | Manual override | with push-button, can be locked | |
| | Running time motor | 35 s / 90° | |
| | Sound power level, motor | 62 dB(A) | |
| | Position indication | Yes | |
| Safety data | Protection class IEC/EN | III, Safety Extra-Low Voltage (SELV) | |
| | Power source UL | Class 2 Supply | |
| | Degree of protection IEC/EN | IP66/67 | |
| | Degree of protection NEMA/UL | NEMA 4X | |
| | Enclosure | UL Enclosure Type 4X | |
| | EMC | CE according to 2014/30/EU | |
| | Certification IEC/EN | IEC/EN 60730-1 and IEC/EN 60730-2-14 | |
| | UL Approval | cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1 The UL marking on the actuator depends on the production site, the device is UL-compliant | |
| | | in any case | |
| | Type of action | Type 1 | |
| | Rated impulse voltage supply / control | 0.8 kV | |
| | Pollution degree | 4 | |
| | Ambient humidity | Max. 100% RH | |
| | Ambient temperature | -3050°C [-22122°F] | |
| | Ambient temperature note | -4050°C for actuator with integrated heating | |
| | Storage temperature | -4080°C [-40176°F] | |
| | Servicing | maintenance-free | |
| Mechanical data | Connection flange | F07 | |
| Weight | Weight | 4.8 kg | |



Technical data

Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- Junction boxes must at least correspond with enclosure IP degree of protection!
- The cover of the protective housing may be opened for adjustment and servicing. When it is closed afterwards, the housing must seal tight (see installation instructions).
- The switch for changing the direction of rotation may not be adjusted.
- The angle of rotation is not permitted to be subjected to mechanical limitation. It is forbidden to alter the mechanical end stops.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The device is not designed for applications where chemical influences (gases, fluids) are
 present or for utilisation in corrosive environments in general.
- The actuator may not be used in plenary applications (e.g. suspended ceilings or raised floors).
- The materials used may be subject to external influences (temperature, pressure, construction fastening, effect of chemical substances, etc.), which cannot be simulated in laboratory tests or field trials. In case of doubt, we definitely recommend that you carry out a test. This information does not imply any legal entitlement. Belimo will not be held liable and will provide no warranty.
- Flexible metallic cable conduits or threaded cable conduits of equal value are to be used for UL (NEMA) Type 4X applications.
- When used under high UV loads, e.g. extreme sunlight, the use of flexible metallic or equivalent cable conduits is recommended.

Product features

Fields of application

The actuator is particularly suitable for utilisation in outdoor applications and is protected against the following weather conditions:

- UV radiation
- Rain / Snow
- Dirt / Dust
- Air humidity
- Alternating climate / frequent and severe temperature fluctuations (Recommendation: use the actuator with integrated factory-installed heating which can be ordered separately to prevent internal condensation)

Simple direct mounting

Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments.

Manual override

Manual override with push-button possible (the gear train is disengaged for as long as the button is pressed or remains locked).

The housing cover must be removed for manual override.

High functional reliability


The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.



Product features

Torque not constant

Due to the non-linear torque characteristic the actuator can only be used for butterfly valves and not for other armatures.

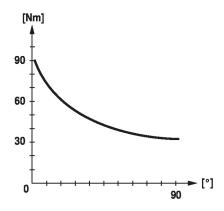

Accessories

| Electrical accessories | Description | Туре | |
|--|---------------------------------------|---------|--|
| | Auxiliary switch 2x SPDT add-on, grey | S2A GR | |
| | Feedback potentiometer 140 Ω add-on | P140A | |
| | Feedback potentiometer 1 kΩ add-on | P1000A | |
| Feedback potentiometer 10 $k\Omega$ add-on | | P10000A | |
| Options ex works only | Description | Туре | |
| | Heater, with adjustable thermostat | HT24-MG | |
| | Heater, with mechanical humidistat | HH24-MG | |

Electrical installation



Supply from isolating transformer.


Wire colours:

1 = black

2 = red

3 = white


Wiring diagrams

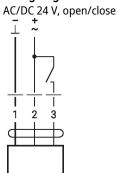

| 1 | 2 | 3 | MM |
|---|---|-----|---------------|
| | 7 | _/_ | A - AB = 0% |
| | ~ | ~ | A - AB = 100% |



Dimensions

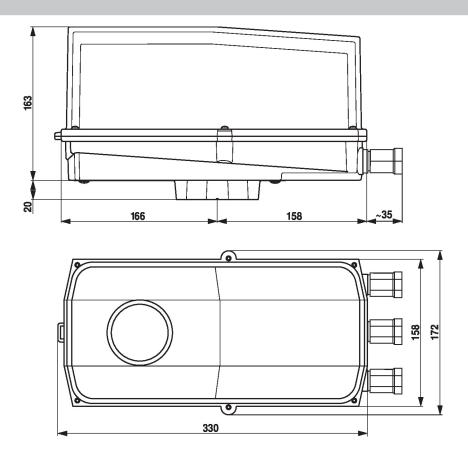

Further documentation

- The complete product range for water applications
- Data sheets for butterfly valves
- Installation instructions for actuators and/or butterfly valves
- General notes for project planning