

# RetroFIT+ rotary actuator for rotary valves and butterfly valves

- Torque motor 20 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close

Technical data

• With 2 integrated auxiliary switches



Electrical data	Nominal voltage	AC 24240 V / DC 24125 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.2264 V / DC 21.6137.5 V
	Power consumption in operation	7 W
	Power consumption in rest position	3.5 W
	Power consumption for wire sizing	18 VA
	Auxiliary switch	2x SPDT, 1x 10% / 1x 11100%
	Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), DC 5 VAC 250 V
	Connection supply / control	Cable 1 m, 2x 0.75 mm <sup>2</sup>
	Connection auxiliary switch	Cable 1 m, 6x 0.75 mm <sup>2</sup>
	Parallel operation	Yes (note the performance data)
Functional data		
Functional data	Torque motor	20 Nm
Functional dat	Torque motor Torque fail-safe	20 Nm 20 Nm
Functional dat		20 Nm selectable:
Functional dat	Torque fail-safe	20 Nm
Functional dat	Torque fail-safe	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%)
Functional dat	Torque fail-safe Direction of motion fail-safe	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%) Deenergised NO, valve open (A – AB = 100%)
Functional dat	Torque fail-safe Direction of motion fail-safe  Manual override	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%) Deenergised NO, valve open (A – AB = 100%) by means of hand crank and locking switch
Functional dat	Torque fail-safe Direction of motion fail-safe  Manual override Running time motor	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%) Deenergised NO, valve open (A – AB = 100%) by means of hand crank and locking switch 75 s / 90°
Functional dat	Torque fail-safe Direction of motion fail-safe  Manual override Running time motor Running time fail-safe	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%) Deenergised NO, valve open (A – AB = 100%) by means of hand crank and locking switch 75 s / 90° <20 s @ -2050°C / <60 s @ -30°C
Functional dat	Torque fail-safe Direction of motion fail-safe  Manual override Running time motor Running time fail-safe Sound power level, motor	20 Nm selectable: Deenergised NC, valve closed (A – AB = 0%) Deenergised NO, valve open (A – AB = 100%) by means of hand crank and locking switch 75 s / 90° <20 s @ -2050°C / <60 s @ -30°C 45 dB(A)

Protection class IEC/EN	II, reinforced insulation	
Protection class UL	II, reinforced insulation	
Protection class auxiliary switch IEC/EN	II, reinforced insulation	
Degree of protection IEC/EN	IP54	
Degree of protection NEMA/UL	NEMA 2	
Enclosure	UL Enclosure Type 2	
EMC	CE according to 2014/30/EU	
Low voltage directive	CE according to 2014/35/EU	
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14	
UL Approval	cULus according to UL60730-1A, UL60730-2-14 and CAN/CSA E60730-1	
	The UL marking on the actuator depends on the production site, the device is UL-compliant in any case	



#### **Technical data** Type 1.AA.B Safety data Type of action Rated impulse voltage supply / control 4 kV Rated impulse voltage auxiliary switch 2.5 kV Pollution degree 3 Ambient humidity Max. 95% RH, non-condensing Ambient temperature 0...50°C [32...122°F] Storage temperature -40...80°C [-40...176°F] Servicing maintenance-free Mechanical data F03/F04/F05 Connection flange Weight Weight 2.3 kg

#### Safety notes



- This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or
  aggressive gases interfere directly with the device and that it is ensured that the ambient
  conditions remain within the thresholds according to the data sheet at any time.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied with during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage
  or at safety extra-low voltage. The combination power supply voltage/safety extra-low voltage
  is not permitted.

#### **Product features**

#### Operating mode

The actuator is equipped with a universal power supply module that can utilise supply voltages of AC 24...240 V and DC 24...125V.

The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

#### **Application**


For rotary valves and butterfly valves with the following mechanical specifications:

- ISO 5211: F03, F04, F05 (hole circle diameter on the flange for mounting the fitting)
- ISO 5211: quadratic, flat head or wedge-shaped spindle head geometry

## **Tappet shaft**

The form fit adapter is not included in the scope of delivery (see «Accessories»).



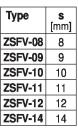



ZSFF-..

Туре	S	d <sub>8</sub>
	[mm]	[mm]
ZSFF-08	8	17
ZSFF-09	9	12
ZSFF-10	10	17
ZSFF-11	11	14
ZSFF-14	14	18



ZSFK-..

**d**7 [mm]

12



#### **Product features**

**Simple direct mounting** Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The

mounting orientation in relation to the fitting can be selected in 90° steps.

Manual override By using the hand crank the valve can be operated manually and engaged with the locking

switch at any position. Unlocking is carried out manually or automatically by applying the

operating voltage.

Adjustable angle of rotation Adjustable angle of rotation with mechanical end stops.

High functional reliability The actuator is overload protected, requires no limit switches and automatically stops when the

end stop is reached.

Flexible signalling The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch.

They permit a 10% or 11...100% angle of rotation to be signaled.

## Accessories

Description	Time
Description	Туре
Form fit adapter square 8x8x55 mm (LxWxH)	ZSFV-08
Form fit adapter square 9x9x55 mm (LxWxH)	ZSFV-09
Form fit adapter square 10x10x55 mm (LxWxH)	ZSFV-10
Form fit adapter square 11x11x55 mm (LxWxH)	ZSFV-11
Form fit adapter square 12x12x55 mm (LxWxH)	ZSFV-12
Form fit adapter square 14x14x55 mm (LxWxH)	ZSFV-14
Form fit adapter flat head 8xø17x55 mm (WxøxH)	ZSFF-08
Form fit adapter flat head 9xø12x55 mm (WxøxH)	ZSFF-09
Form fit adapter flat head 10xø17x55 mm (WxøxH)	ZSFF-10
Form fit adapter flat head 11xø14x55 mm (WxøxH)	ZSFF-11
Form fit adapter flat head 14xø18x55 mm (WxøxH)	ZSFF-14
Form fit adapter wedge groove ø12x4x55 mm (øxWxH)	ZSFK-12
Form fit adapter wedge groove ø14x5x55 mm (øxWxH)	ZSFK-14

#### **Electrical installation**



Mechanical accessories

Caution: Power supply voltage!

Parallel connection of other actuators possible. Observe the performance data.

#### Wire colours:

1 = blue

2 = brown

S1 = violet

S2 = red

S3 = white

S4 = orange

S5 = pink


S6 = grey




#### **Electrical installation**


#### Wiring diagrams

AC 24...240 V / DC 24...125 V, open/ Auxiliary switch

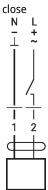

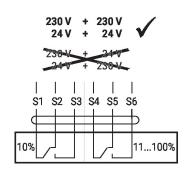

# Operating controls and indicators

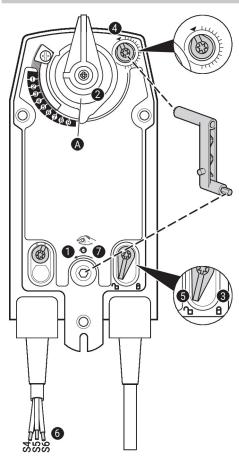

## **Auxiliary switch settings**

1

Note: Perform settings on the actuator only in deenergised state.

For the auxiliary switch position settings, carry out points 1 to 7 successively.

Manual override

Turn the hand crank until the desired switching position is set.

2 Shaft clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable


Connect continuity tester to S4 + S5 or to S4 + S6.

7 Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



# **Dimensions**

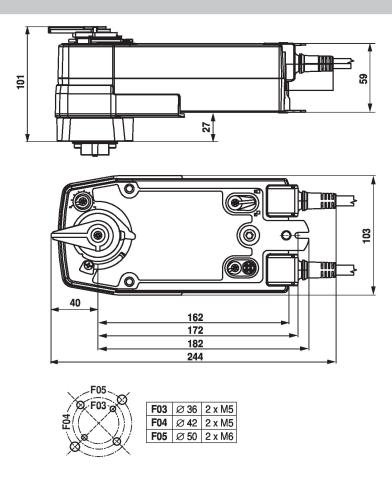

# **Further documentation**

• General notes for project planning