
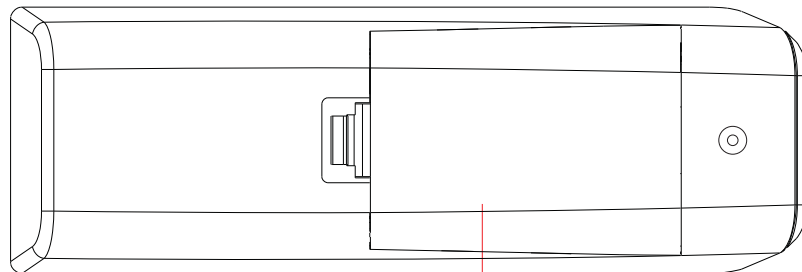


TRONIX

RF RGBW Remote Controller

Important: Read All Instructions Prior to Installation

Function introduction

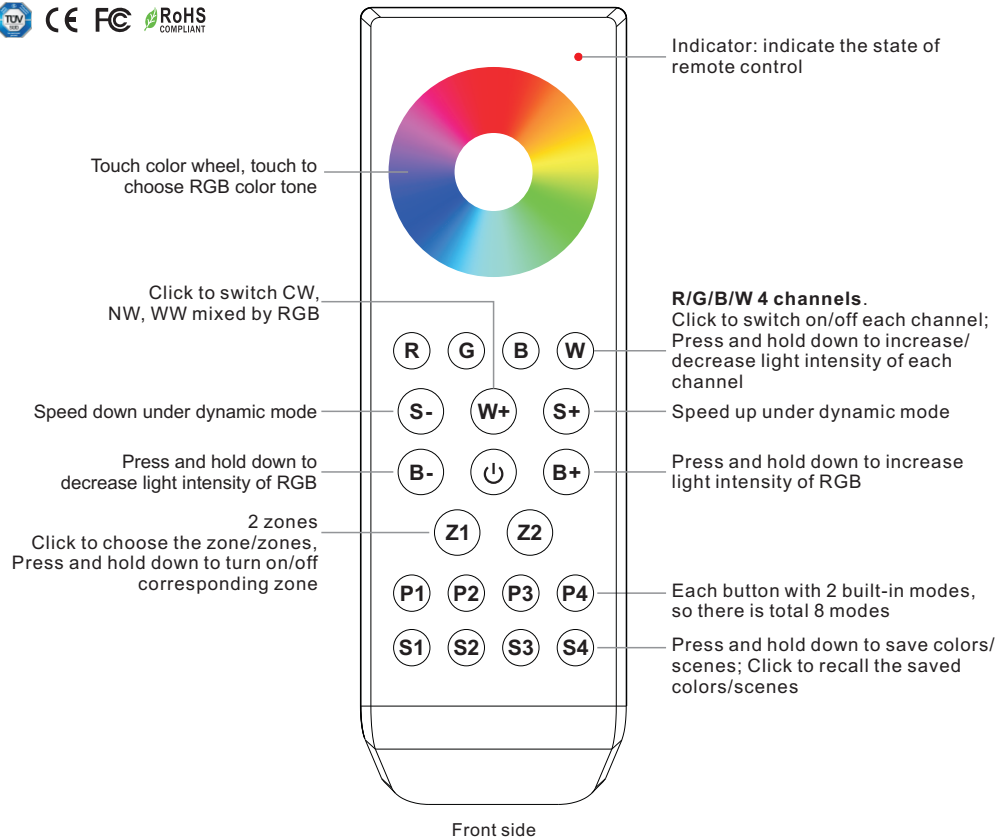

Product Data

Output	RF signal
Operation Frequency	869.5MHz
Max. output power (dBm)	-0.32dBm
Max. output power (mW)	0.93mW
Pmax Limit (mW)	20mW
Power Supply	4.5V(3xAAA battery)
Operating temperature	-10~55°C
Relative humidity	8% to 80%
Dimensions	131.4x43.8x24.3mm
IP rate	IP20

Features

- High sensitive & high stable touch color wheel, fast & precise color control.
- Enable to control 2 zones separately.
- 8 changing modes. Enable to stay at any color under situation of color changing modes.
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.

Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.
- Do not store near small children

Pair with RF receiver(Method 1)



Step 1: Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

Step 5: Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 2 successfully.


Step 2: Click **ON/OFF** button to activate the remote

Step 4: Choose and click a zone number (e.g. zone 2)

Step 3: Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status



Pair with RF receiver(Method 2)

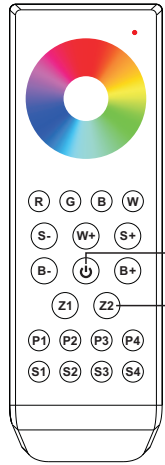

Step 1: Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).




Step 3: Power off and power on the receiver

Step 2: Click **ON/OFF** button to activate the remote

Step 4: Choose and click a zone number (e.g. zone 2) twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 2 successfully.

Save color/scene/mode

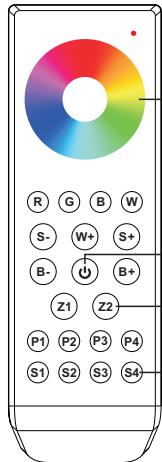

Step 3: Touch the color wheel or click the other buttons to select the scene you like

Step 1: Click **ON/OFF** button to activate the remote

Step 2: Choose and click one or multiple paired zone numbers (e.g. zone 2)

Step 4: Press and hold any scene buttons of **S1-S4** (e.g. **S4**), LED lights connected with the RF receiver flicker once means the color/scene was saved successfully.

Recall the saved colors/scenes



Step 1: Click **ON/OFF** button to activate the remote

Step 2: Choose and click one or multiple paired zone numbers (e.g. zone 2)


Step 3: Click any scene buttons of **S1-S4** (e.g. **S4**) to recall the saved scene

If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1 or 2

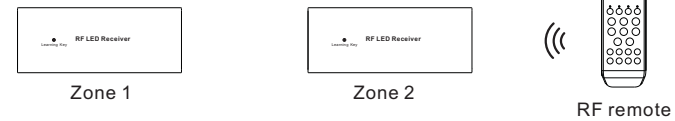

How to stop running mode of single color LED light caused by RGBW sender interference:

1. When pairing single color LED light to a single color remote, it might be interfered and paired by nearby RGBW senders, which might control the single color light into running mode. The running mode can not be stopped by the paired single color remote or by delete pairing.
2. Then we need this remote, and pair the remote to the receiver via above "Pair with RF receiver(Method 2)", then touch the color wheel to stop the running mode.
3. Then delete pairing and pair the receiver to the single color remote again, it can be controlled by the remote again.

SIMPLIFIED EU DECLARATION OF CONFORMITY

The undersigned,

Tronix Lighting B.V.

declares that the radio equipment referred to in this manual is in conformity with Directive 2014/53/EU