

Flextronic Connectivity guide

FRA Guide d'installation et mode d'emploi

- Passerelle Flamconnect
- Sorties analogiques
- Sorties numériques (distinctes)
- Interface de Gestion Technique de Bâtiment (GTB)

that's excellence.



Icônes de sécurité



Attention



Haute tension



Surface chaude



Corrosif



Champ
magnétique



Objet tranchant



Ecrasement des
mains



Blessure à la
main dans la
presse



Basse
température



Matière toxique



Vapeur chaude



Contenu chaud



Panneau
d'interdiction
générale



Ne pas toucher



Pas de flamme
nue



Pas d'outil



Ne pas pousser



Ne pas fixer la
source lumineuse



Signe général
d'obligation
d'agir



Connecter une
borne de terre
au sol



Débrancher la
fiche de la prise
de courant



Se référer
au manuel
d'instructions



Se laver les
mains



Porter une
protection de
la tête



Porter des
protections
auditives



Porter des
lunettes de
protection



Protection des
pieds



Porter des gants
de protection



Porter un
masque



Porter une
protection
respiratoire



Regarder
attentivement



230V requis



2 personnes
transport



Lourd



Fragile



Ne pas jeter à la
poubelle



Tournevis
cruciforme



Tournevis à tête
plate



Clé à molette



Perceuse



Un installateur
qualifié est
requis

Table des matières

- 1. Utilisation correcte5
- 2. Description du produit6
 - 2.1. Détails du câblage..... 6
 - 2.2. Passerelle Flamconnect..... 7
 - 2.3. Connectivité GTB Modbus et Bacnet 9
 - 2.4. Automates Flamco interconnectés..... 9
 - 2.5. Signaux de sorties analogiques (client) 10
 - 2.6. Signaux de sorties numériques (distincts)..... 11
- 3. Configuration sans fil et paramètres12
 - 3.1. Paramètres de l'interface de communication..... 12
 - 3.2. Programmation des sorties numériques (distinctes)..... 13
- 4. Tableau de correspondance Modbus14
 - 4.1. Flamcomat 14
 - 4.2. Flexfiller..... 16
 - 4.3. Vacumat Eco G4 21
- 5. Tableau de correspondance Bacnet Flamcomat27
 - 5.1. Flamcomat 27
 - 5.2. Flexfiller..... 30
 - 5.3. Vacumat Eco G4 34

Ce document est destiné à compléter le guide d'installation et le mode d'emploi.

Cette instruction concerne spécifiquement le Flamcomat G4 en termes de sécurité, d'utilisation et de fonctionnement.

Pour les instructions d'installation et d'autres documents en diverses langues, veuillez consulter www.flamco.aalberts-hfc.com/manuals. D'autres informations de production peuvent être sollicitées auprès des bureaux Flamco respectifs.

Légende:

-  Accueil
-  Réglages
-  Général
-  Info service

1. Utilisation correcte

L'unité de commande Flextronic doit être utilisée conformément à ce manuel. La déclaration de conformité de la documentation originale est toujours valable.

2. Description du produit

Flextronic est une unité de commande universelle pour les automates Flamco. Elle dispose d'un large éventail d'options de communication qui peuvent être activées dans le menu des accessoires Flextronic :

Les ports non mentionnés sont destinés à des accessoires spécifiques des automates ou à d'autres fins de fonctionnement. Ils ne doivent pas être utilisés pour l'interface client ou les communications.

2.1. Détails du câblage



1. Port Ethernet pour l'intégration GTB qui communique selon le protocole Modbus ou Bacnet.
2. Port USB pour l'enregistrement du journal de fonctionnement ou la mise à jour du micrologiciel.
3. Ports Canbus (couplés en guirlande) pour l'interconnexion de plusieurs automates Flamco.
4. Ports RS-485 (couplés en guirlande) pour la connexion à la passerelle de service à distance Flamco (Flamconnect) ou pour l'intégration GTB via Modbus ou Bacnet.
5. Interface sans fil (2,400 à 2,485 GHz) pour le couplage avec un smartphone ou une tablette.
6. Signaux de sorties de tension analogiques pour l'indication à distance du niveau du ballon et de la pression du système (0-10 V).
7. Signaux de sorties numériques (distinctes) (250 VAC, 5 A max., sans potentiel). Les erreurs et les avertissements personnalisés peuvent être configurés sur les trois ports dans le menu Alarmes de Flextronic.


L'installation, le traitement des données et la mise en service doivent être effectués par du personnel formé, qualifié et compétent. Les normes, réglementations et règles nationales applicables doivent être respectées. Pour les instructions d'installation et d'autres documents en diverses langues, veuillez consulter www.flamco.aalberts-hfc.com/manuals.

- Les câbles supplémentaires ne sont ni inclus ni fournis par Flamco.
- Flamco recommande l'utilisation d'un câble blindé à paire unique torsadée.
- La résistance de terminaison a une valeur de 120 Ohm.
- La longueur maximale autorisée des câbles est de 500 m.

2.2. Passerelle Flamconnect

Conditions requises pour un fonctionnement correct:

- Il doit y avoir une bonne couverture GSM là où se trouve la passerelle. Si ce n'est pas le cas, l'article 90009 peut être commandé. Il s'agit d'une antenne avec câble, le câble peut être connecté à la passerelle, l'antenne peut être placée à un endroit avec un bon réseau GSM.
- Vérifiez si l'antenne est correctement connectée à la passerelle.
- La communication depuis le Vacumat Eco G4 via le port RS485 doit être réglée sur « passerelle ».
- Le numéro de série requis lors de l'enregistrement se trouve au dos de la passerelle.

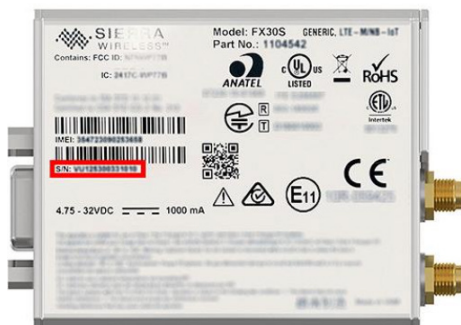

Sécurité

Quelles sont les mesures de sécurité?


Nous prenons vos données très au sérieux, c'est pourquoi nous avons mis en place une série de mesures de sécurité pour garantir la protection de vos données. Vous trouverez ci-dessous un petit sous-ensemble de ces mesures pour donner une idée de leur portée :

- L'équipe du portail se concentre quotidiennement sur la sécurité, avec des évaluations par les pairs, une vérification statique du code, des tests automatisés, etc.
- La sécurité est intégrée dans le portail à plusieurs niveaux. Les développeurs, par exemple, doivent coder explicitement pour les situations où ils ont besoin de données qui ne seraient normalement pas accessibles à l'utilisateur connecté, car sinon ces données sont simplement « invisibles ».
- Tous les accès sont protégés par un mot de passe. Tous les utilisateurs sont autorisés à


l'aide de rôles et de permissions en utilisant des solutions certifiées Microsoft standard.

- Les connexions IoT sont cryptées avec TLS et des clés d'accès ou des certificats (selon les exigences du Client).
- Notre portail dispose de mesures de protection active contre les CORS, XSS, le sniffing de type de contenu, le framing, etc.
- Les actions sur les données sensibles (par exemple, les données de l'appareil / les comptes d'utilisateur) sont enregistrées dans une piste d'audit.
- Les déploiements sont entièrement automatisés pour éviter les erreurs de configuration qui pourraient conduire à des failles de sécurité.
- La sécurité interne et externe est activement contrôlée au moyen de tests d'intrusion et d'audits de sécurité.
- En plus de nos mesures de sécurité intégrées, nous pouvons également configurer des mesures supplémentaires, par exemple Cloudflare pour se protéger contre les attaques DDOS ou Azure API Management pour limiter les clients API qui font trop de requêtes.
- Enfin et surtout, nous utilisons Microsoft Azure et tout ce qu'il a à offrir en termes de sécurité, données cryptées au repos, coffres-forts de clés, aucun accès physique pratique et bien sûr leur équipe d'experts en sécurité de classe mondiale !

En utilisant Flamconnect Remote, vous acceptez le contrat et les conditions d'utilisation.

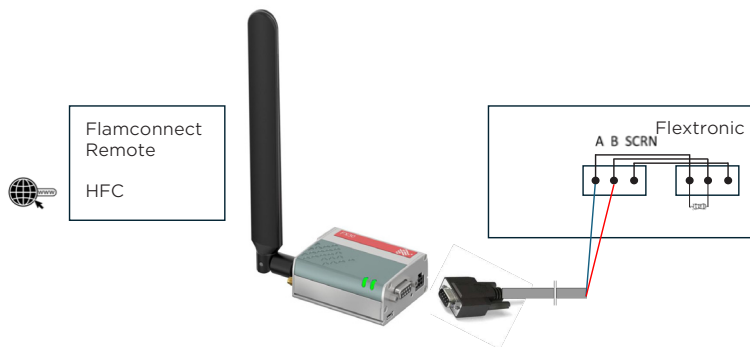

2.3. Connectivité GTB Modbus et Bacnet

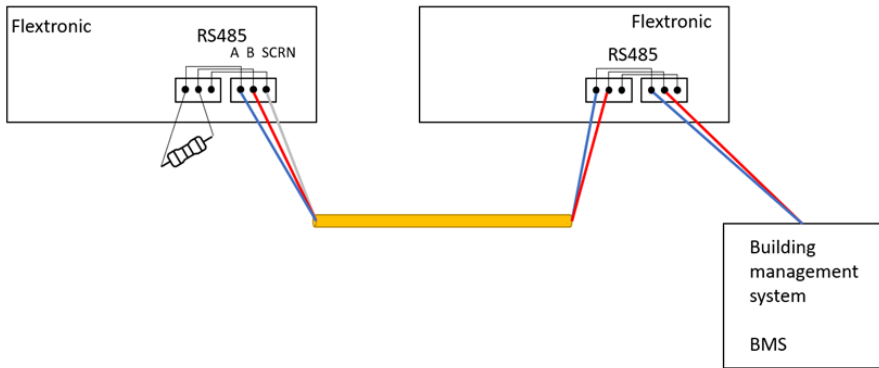

La communication Modbus et Bacnet simultanée n'est pas possible sur le BUS RS-485. Si les deux protocoles sont nécessaires, l'un des protocoles doit fonctionner sur la connexion Ethernet (IP).

Lorsque la passerelle de service à distance Flamconnect est utilisée, le port RS485 est dédié à cette fonction. Si Modbus ou Bacnet est également requis, cela ne peut se faire qu'en utilisant la connexion Ethernet (IP).

2.4. Automates Flamco interconnectés

Please note that automats first need to be commissioned as a standalone automat, before the Co-Operation mode can be initiated. Make sure the automats intended for the Co-Operation mode are connected hydraulically to the same system.

All automats must be wired and connected via the same network. According to the Connectivity Guide the total cable length should not exceed 500m. Flamco does not provide a cable (Flamco recommends twisted single pair shielded cable).

In the Flextronic controller, the CAN-bus interface is used for the Co-Operation network. The termination resistor (120Ω) is provided by default on each Flextronic. The resistor should be installed only at the ends of the line as illustrated in the image below.


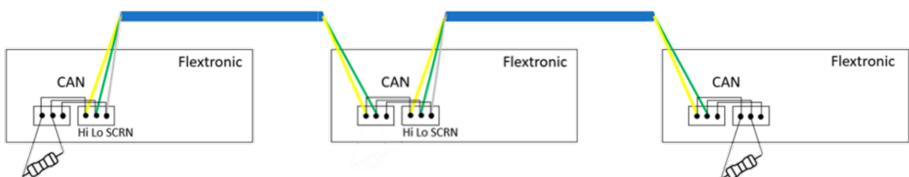


Figure: Connection example of CAN-bus interface

2.5. Signaux de sorties analogiques (client)

Pour obtenir le signal de tension analogique de la pression du système et du niveau du ballon.

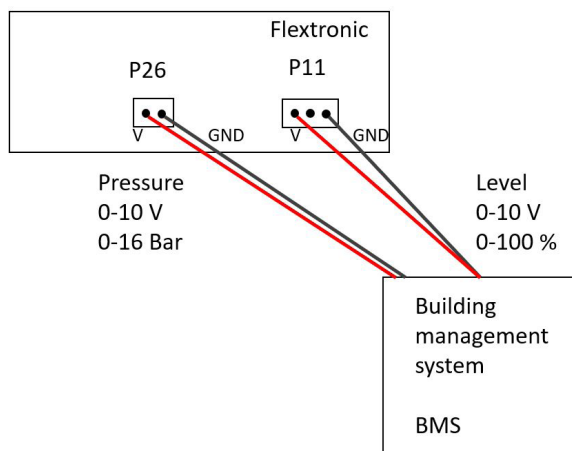



2.6. Signaux de sorties numériques (distincts)

GUI settings:
Invert polarity: off

Specifications of VFC:
5A @ 240VAC (non-inductive)

↑ Incoming signal from BMS
↓ Returning signal to BMS
— relay

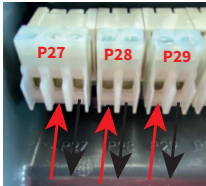

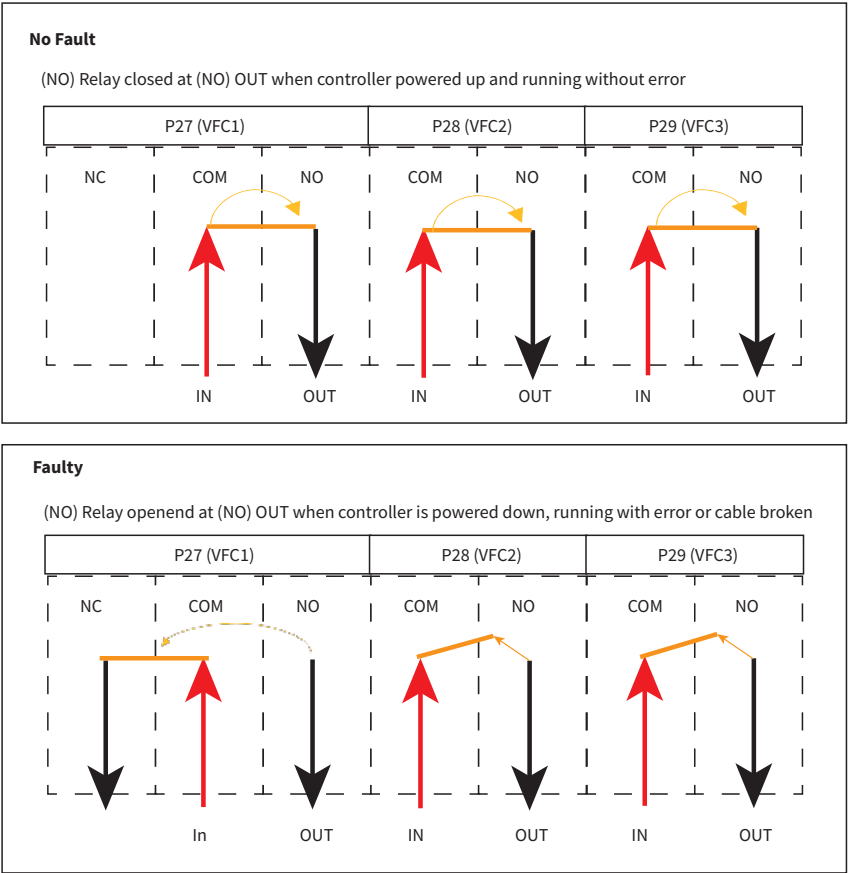

Pour obtenir le statut de l'automate. Le défaut personnalisé peut être attribué à chaque sortie. La sortie P29 est un signal de verrouillage de la chaudière du mode >110 °C ; elle n'est pas disponible pour l'alarme dans ce mode.

3. Configuration sans fil et paramètres

La configuration est possible via l'application Flamconnect.

Pour le couplage : saisir le code d'accès. Il se trouve sur l'étiquette du code QR sur l'automate ou s'affiche à l'écran.

	Info système	Sert à consulter les informations sur l'automate et le contrôleur	 
--	--------------	---	---

La configuration des interfaces client et des protocoles de communication est accessible dans le menu du contrôleur.

	Accessoires	Sert à activer les accessoires avancés de l'automate	   
--	-------------	--	--

3.1. Paramètres de l'interface de communication

Ethernet:

Adresse IP	192.168.100.150
Masque IP	255.255.255.0
Passerelle IP	192.168.100.1

RS-485:

Flextronic est esclave.

ID de l'appareil	sélectionnable
Taux de baud	19200
Parité	8-n-1

Il est possible d'attribuer un seul protocole à la fois à la même interface. Lorsque la Passerelle de service à distance est connectée, Modbus et Bacnet ne sont pas disponibles sur le RS-485. Veuillez plutôt utiliser le port Ethernet pour l'intégration GTB.



Note: Modbus has a U16 Limit therefore some U32 values are stored on 2 register addresses, these need to be combined to receive the actual U32 value (see Modbus tables in chapter 4).

3.2. Programmation des sorties numériques (distinctes)

Il est possible d'attribuer des défauts personnalisés (erreurs et avertissements) aux sorties numériques (distinctes) sans potentiel. Si plusieurs défauts sont attribués à la même sortie, la sortie devient active si l'un des défauts attribués est actif pour cette sortie.

La configuration des défauts est disponible dans le menu Flextronic :

	Alarmes	Sert à attribuer le(s) message(s) d'alarme aux sorties sans potentiel	    
---	---------	---	---

4. Tableau de correspondance Modbus

4.1. Flamcomat

Register	Access	Name	Type	Unit	Range
0x0001	R	Current working pressure	UINT16	cbar	0..16000
0x0002	R	Current vessel level	UINT16	%	0..100
0x0003	R	Outputs state (1-on)	UINT16		Bit0: Motor 1 active Bit1: Motor 2 active Bit2: Valve 1 active Bit3: Valve 2 active Bit4: Valve 3 active Bit8: Degassing On (Enabled) Bit9: Degassing mode (0-normal, 1-turbo)
0x0004	R	Error table 1 (1-error active)	UINT16		Bit 0: Single pump/ compressor maximum run time error Bit 1: Redundant pumps/ compressor maximum run time error Bit 2: Load dependant pumps/ compressor maximum run time error Bit 3: Single pump/ compressor current error Bit 4: Pump A current error (double pump/ compressor configuration) Bit 5: Pump B current error (double pump/ compressor configuration) Bit 6: Pumps A and B current error (double pump/ compressor configuration) Bit 7: Pump C/ compressor current error Bit 8: Self-learning valve correction error Bit 9: Self-learning pump correction error Bit 10: Pressure sensor current exceeded Bit 11: Pressure sensor no current Bit 12: Load cell current exceeded Bit 13: Load cell no current Bit 14: Pump A/ compressor power consumption too high Bit 15: Pump B/ compressor power consumption too high

Register	Access	Name	Type	Unit	Range
0x0005	R	Error table 2 (1-error active)	UINT16		Bit 0: Pump C power consumption too high Bit 1: Maximum Runtime P35 M1 exeeded Bit 2: Maximum Runtime P36 M2 exeeded Bit 3: Maximum supplation threaded water amount exeeded Bit 4: Pump running, no decrease of water level in vessel* Bit 5: Valve open, no increase of water level in vessel* Bit 6: Maximum runtime P33 V1 exeeded Bit 7: Maximum runtime P34 V2 exeeded Bit 8: To run quick fill* Bit 9: To run system fill* Bit 10: System run in auto mode Bit 11: Quick system filling active, V to stop* Bit 12: System filling active, V to stop* Bit 13: Manual mode active, press V to start automat Bit 14: Diaphragm rupture Bit 15: Spare
0x0006	R	Error table 3(1-error active)	UINT16		Bit 0: Water level increase in vessel without Flamcomat activity* Bit 1: Water level decrease in vessel without Flamcomat activity* Bit 2: Maintenance 1 is due Bit 3: Initial fill failed Bit 4: Maximum refill time exeeded Bit 5: Maximum drain time exeeded* Bit 6: No refill flow Bit 7: Amount refill water too much Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Initial fill active Bit 12: Manual initial fill active Bit 13: System fill timer expired Bit 14: Quick fill timer expired* Bit 15: Maintenance 2 is due
0x0007	R	Error table 4 (1-error active)	UINT16		Bit 0: Maintenance 3 is due Bit 1: Maintenance 4 is due Bit 2: Spare Bit 3: Spare Bit 4: Spare Bit 5: Spare Bit 6: Spare Bit 7: Spare Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Spare Bit 12: Spare Bit 13: Spare Bit 14: Spare Bit 15: Spare
0x0008	R	Operational hours total	UINT16	hours	

Register	Access	Name	Type	Unit	Range
0x0009	R	Availability (0 - No, 1 - Yes)	UINT16		Bit 0: P35 M1 pressure increase Bit 1: P36 M2 Pressure increase Bit 2: P33 V1 (pressure decrease/ compressor valve) Bit 3: P34 V2 (pressure decrease/ compressor valve) Bit 4: P31 V3 (filling pump/ valve) Bit 8: Minimum pressure limiter Bit 9: Diaphragm rupture sensor Bit 10: Maximum temperature sensor
0x000A	R	Pressure setpoint	UINT16	cbar	0..16000
0x000B	R	Minimum water level (absolute)	UINT16	%	
0x000C	R	Level refeeding On (absolute)	UINT16	%	
0x000D	R	Level refeeding Off (absolute)	UINT16	%	
0x000E	R	Minimum level alarm limit	UINT16	%	
0x000F	R	Maximum level alarm limit	UINT16	%	
0x0010	R	Nominal volume of vessel	UINT16	l	
0x0011	R	Operational mode	UINT16		0 - single mode, 1 - redundant mode 2 - load-dependent
0x0012	R	Total refill liters	UINT16	l	
0x0013	R	Total refill minutes	UINT16	minute	

* Not applicable for the Flamcomat MK-U G4

4.2. Flexfiller

Register	Access	Name	Type	Unit	Formatting
0x0000	R	SystemPressure	U16	mbar	Decimal
0x0001	R	SupplyPressure	U16	mbar	Decimal
0x0002	R	TankLevel	U16	%	Decimal
0x0003	R	VacuumPressure	U16	mbar	Decimal
0x000A	R	PressureSetpoint	U16	mbar	Decimal
0x000B	R	SafetyValveSetting	U16	mbar	Decimal
0x000C	R	Calculated_LowPressureAlarm	U16	mbar	Decimal
0x000D	R	Calculated_High PressureAlarm	U16	mbar	Decimal
0x000E	R	VesselVolume	U16	l	Decimal

Register	Access	Name	Type	Unit	Formatting
0x0030	R	DigitalInput	U16	Binary	NA
0x0031	R	DigitalOutput	U16	Binary	Bit 0: P36 (Pump 2 / NC) Bit 1: P35 (Pump 1/Direct drain valve) Bit 2: P34 (NC) Bit 3: P33 (NC) Bit 4: P32 (NC) Bit 5: P31(Refill / Inlet valve) Bit 6: P29 (VFC 1) Bit 7: P28 (VFC 2) Bit 8: P27 (VFC 3)
0x0032	R	AccessoryPresenceMask	U16	Binary	NA
0x0033	R	AccessoryPresenceMask	U16	Binary	NA
0x0034	R	DaysToTheNextMaintenance1	U16	count	Decimal
0x0035	R	DaysToTheNextMaintenance2	U16	count	Decimal
0x0036	R	DaysToTheNextMaintenance3	U16	count	Decimal
0x0037	R	DaysToTheNextMaintenance4	U16	count	Decimal
0x0040	R	Errors_3	U16	Binary	NA (For Future Use)
0x0041	R	Errors_2	U16	Binary	NA (For Future Use)
0x0042	R	Errors_1	U16	Binary	NA (For Future Use)
0x0043	R	Errors_0	U16	Binary	Bit 0: ALR_SYSTEM_PRESSURE_LOW Bit 1: ALR_SYSTEM_PRESSURE_BELOW_MINIMUM Bit 2: ALR_SYSTEM_PRESSURE_SENSOR_OOB_LOW Bit 3: ALR_SYSTEM_PRESSURE_SENSOR_OOB_HIGH Bit 4: ALR_SYSTEM_PRESSURE_HIGH Bit 5: ALR_SYSTEM_FILL_TIMER_EXPIRED Bit 6: ALR_SAFETY_VALVE_ACTIVE Bit 7: ALR_VESSEL_PRECHARGE_LOST Bit 8: ALR_PUMP_1_OVER_CURRENT Bit 9: ALR_PUMP_2_OVER_CURRENT Bit 10: ALR_PUMP_1_NO_CURRENT Bit 11: ALR_PUMP_2_NO_CURRENT
0x0044	R	Warnings_0	U16	Binary	NA (For Future Use)

Register	Access	Name	Type	Unit	Formatting
0x0045	R	Warnings_1	U16	Binary	Bit 0: WRN_SYPHON_FLUSH_DETECTED
0x0046	R	Warnings_2	U16	Binary	Bit 0: WRN_SYSTEM_FILL_ACTIVE Bit 1: WRN_SYSTEM_FILL_ON_HOLD Bit 2: WRN_ANTI_LEGIONELLA_RUNNING Bit 3: WRN_DEVICE_REBOOT Bit 4: WRN_TANK_LEVEL_SENSOR_OOB_LOW Bit 5: WRN_TANK_LEVEL_SENSOR_OOB_HIGH Bit 6: WRN_PUMP_DRY_RUN Bit 8: WRN_MANUAL_SYSTEM_FILL
0x0046	R	Warnings_2	U16	Binary	Bit 9: WRN_PUMP_1_RUNTIME Bit 10: WRN_PUMP_2_RUNTIME Bit 11: WRN_ANTI_LEGIONELLA_RECOVERY Bit 12: WRN_VACUUM_PRESSURE_SENSOR_OOB_LOW Bit 13: WRN_VACUUM_PRESSURE_SENSOR_OOB_HIGH Bit 14: WRN_FILTER_FULL Bit 15: WRN_VACUUM_ERROR
0x0047	R	Warnings_3	U16	Binary	Bit 0: WRN_SYSTEM_PRESSURE_HIGH Bit 1: WRN_MAX_AMOUNT_TOPUP_WATER Bit 2: WRN_SYSTEM_PRESSURE_LOW Bit 3: WRN_NUMBER_OF_TOPUPS Bit 4: WRN_SUPPLY_PRESSURE_TOO_LOW Bit 5: WRN_SUPPLY_PRESSURE_TOO_HIGH Bit 6: WRN_SUPPLY_PRESSURE_SENSOR_OOB_LOW Bit 7: WRN_SUPPLY_PRESSURE_SENSOR_OOB_HIGH Bit 8: WRN_SYSTEM_FILL_SELF_LEARNING Bit 9: WRN_MANUAL_MODE Bit 10: WRN_MAXIMUM_TOPUP_TIME_EXCEEDED Bit 11: WRN_NO_TOPUP_FLOW Bit 12: WRN_MAINTENANCE_1_DUE
0x0047	R	Warnings_3	U16	Binary	Bit 13: WRN_MAINTENANCE_2_DUE Bit 14: WRN_MAINTENANCE_3_DUE Bit 15: WRN_MAINTENANCE_4_DUE

0x0050	R	OverallRuntime_H	U16	h	Decimal (Combine 0x0050&0x0051 to read the full U32 value)
0x0051	R	OverallRuntime_L	U16	h	Decimal (Combine 0x0050&0x0051 to read the full U32 value)
0x0052	R	TotalFilledVolume_H	U16	ml	Decimal (Combine 0x0052&0x0053 to read the full U32 value)
0x0053	R	TotalFilledVolume_L	U16	ml	Decimal (Combine 0x0052&0x0053 to read the full U32 value)
0x0054	R	TotalFillTime_H	U16	s	Decimal (Combine 0x0054&0x0055 to read the full U32 value)
0x0055	R	TotalFillTime_L	U16	s	Decimal (Combine 0x0054&0x0055 to read the full U32 value)
0x0056	R	ActivationsMv1_H	U16	count	Decimal (Combine 0x0056&0x0057 to read the full U32 value)
0x0057	R	ActivationsMv1_L	U16	count	Decimal (Combine 0x0056&0x0057 to read the full U32 value)
0x0058	R	ActivationsMv2_H	U16	count	Decimal (Combine 0x0058&0x0059 to read the full U32 value)
0x0059	R	ActivationsMv2_L	U16	count	Decimal (Combine 0x0058&0x0059 to read the full U32 value)
0x005A	R	RuntimeMv1_H	U16	s	Decimal (Combine 0x005A&0x005B to read the full U32 value)
0x005B	R	RuntimeMv1_L	U16	s	Decimal (Combine 0x005A&0x005B to read the full U32 value)
0x005C	R	RuntimeMv2_H	U16	s	Decimal (Combine 0x005C&0x005D to read the full U32 value)
0x005D	R	RuntimeMv2_L	U16	s	Decimal (Combine 0x005C&0x005D to read the full U32 value)
0x005E	R	ActivationsPump1_H	U16	count	Decimal (Combine 0x005E&0x005F to read the full U32 value)
0x005F	R	ActivationsPump1_L	U16	count	Decimal (Combine 0x005E&0x005F to read the full U32 value)
0x0060	R	ActivationsPump2_H	U16	count	Decimal (Combine 0x0060&0x0061 to read the full U32 value)
0x0061	R	ActivationsPump2_L	U16	count	Decimal (Combine 0x0060&0x0061 to read the full U32 value)
0x0062	R	ActivationsValve1_H	U16	count	Decimal (Combine 0x0062&0x0063 to read the full U32 value)

0x0063	R	ActivationsValve1_L	U16	count	Decimal (Combine 0x0062&0x0063 to read the full U32 value)
0x0064	R	RuntimePump1_H	U16	s	Decimal (Combine 0x0064&0x0065 to read the full U32 value)
0x0065	R	RuntimePump1_L	U16	s	Decimal (Combine 0x0064&0x0065 to read the full U32 value)
0x0066	R	RuntimePump2_H	U16	s	Decimal (Combine 0x0066&0x0067 to read the full U32 value)
0x0067	R	RuntimePump2_L	U16	s	Decimal (Combine 0x0066&0x0067 to read the full U32 value)
0x0068	R	RuntimeValve1_H	U16	s	Decimal (Combine 0x0068&0x0069 to read the full U32 value)
0x0069	R	RuntimeValve1_L	U16	s	Decimal (Combine 0x0068&0x0069 to read the full U32 value)
0x006A	R	NrOfNormalTopUps_H	U16	count	Decimal (Combine 0x006A&0x006B to read the full U32 value)
0x006B	R	NrOfNormalTopUps_L	U16	count	Decimal (Combine 0x006A&0x006B to read the full U32 value)
0x006C	R	NrOfEmergencyStops_H	U16	count	Decimal (Combine 0x006C&0x006D to read the full U32 value)
0x006D	R	NrOfEmergencyStops_L	U16	count	Decimal (Combine 0x006C&0x006D to read the full U32 value)
0x006E	R	SafetyValveActivations_H	U16	count	Decimal (Combine 0x006E&0x006F to read the full U32 value)
0x006F	R	SafetyValveActivations_L	U16	count	Decimal (Combine 0x006E&0x006F to read the full U32 value)
0x0070	R	ActivationsVfc1_H	U16	count	Decimal (Combine 0x0070&0x0071 to read the full U32 value)
0x0071	R	ActivationsVfc1_L	U16	count	Decimal (Combine 0x0070&0x0071 to read the full U32 value)
0x0072	R	ActivationsVfc2_H	U16	count	Decimal (Combine 0x0072&0x0073 to read the full U32 value)
0x0073	R	ActivationsVfc2_L	U16	count	Decimal (Combine 0x0072&0x0073 to read the full U32 value)
0x0074	R	ActivationsVfc3_H	U16	count	Decimal (Combine 0x0074&0x0075 to read the full U32 value)
0x0075	R	ActivationsVfc3_L	U16	count	Decimal (Combine 0x0074&0x0075 to read the full U32 value)

4.3. Vacumat Eco G4

Function code	Adress	Access	Name	Type	Unit	Formatting
Input register 0x04	0x0000	R	System Pressure	S16	mbar	Decimal
Input register 0x04	0x0001	R	Vacuum Pressure	S16	mbar	Decimal
Input register 0x04	0x0002	R	Temperature	S16	cdeg C	Decimal
Input register 0x04	0x000A	R	Pressure Setpoint	U16	mbar	Decimal
Input register 0x04	0x000B	R	SafetyValve Setting	U16	mbar	Decimal
Input register 0x04	0x000C	R	LowPressure AlarmLimit	U16	mbar	Decimal
Input register 0x04	0x000D	R	HighPressure AlarmLimit	U16	mbar	Decimal

Input register 0x04	0x0030	R	DigitalInput	U16	Binary	Bit 0	P18 level switch
						Bit 1	P19 Water meter input
						Bit 2	P20 NA
						Bit 3	P21 External Top-up in
						Bit 4	P22 Gassensor
						Bit 5	P23 NA
						Bit 6	P24 Pump Fault Contact
						Bit 7	P25 Standby input
						Bit 8-15	NA
Input register 0x04	0x0031	R	DigitalOutput	U16	Binary	Bit 0	P36 (Pump 2 ENA only)
						Bit 1	P35 (Pump 1)
						Bit 2	P34 (NA)
						Bit 3	P33 (Vacumat: 3 way valve / ENA: Valve1)
						Bit 4	P32 (NA)
						Bit 5	P31 (Vacumat: NA / ENA: System fill)
						Bit 6	P29 (VFC 1)
						Bit 7	P28 (VFC 2)
						Bit 8	P27 (VFC 3)
						Bit 9-15	NA
Input register 0x04	0x0032	R	AccessoryPresence Mask	U16	Binary	NA	
Input register 0x04	0x0033	R	AccessoryPresence Mask	U16	Binary	NA	

Function code	Adress	Access	Name	Type	Unit	Formatting
Input register 0x04	0x0034	R	DaysToTheNext Maintenance1	U16	count	Decimal
Input register 0x04	0x0035	R	DaysToTheNext Maintenance2	U16	count	NA (For Future Use)
Input register 0x04	0x0036	R	DaysToTheNext Maintenance3	U16	count	NA (For Future Use)
Input register 0x04	0x0037	R	DaysToTheNext Maintenance4	U16	count	NA (For Future Use)
Input register 0x04	0x0040	R	Errors_3	U16	Binary	NA (For Future Use)
Input register 0x04	0x0041	R	Errors_2	U16	Binary	NA (For Future Use)
Input register 0x04	0x0042	R	Errors_1	U16	Binary	NA (For Future Use)

Function code	Adress	Access	Name	Type	Unit	Formatting	
Input register 0x04	0x0043	R	Errors_0	U16	Binary	Bit 0	ALR_SYSTEM_PRESSURE_LOW
						Bit 1	ALR_SYSTEM_PRESSURE_BELOW_MINIMUM
						Bit 2	ALR_SYSTEM_PRESSURE_SENSOR_OOB_LOW
						Bit 3	ALR_SYSTEM_PRESSURE_SENSOR_OOB_HIGH
						Bit 4	ALR_SYSTEM_PRESSURE_HIGH
						Bit 5	ALR_VACUUM_PRESSURE_SENSOR_OOB_LOW
						Bit 6	ALR_VACUUM_PRESSURE_SENSOR_OOB_HIGH
						Bit 7	ALR_TEMPERATURE_SENSOR_OOB_LOW
						Bit 8	ALR_TEMPERATURE_SENSOR_OOB_HIGH
						Bit 9	ALR_PUMP_OVER_CURRENT
						Bit 10	ALR_PUMP_NO_CURRENT
						Bit 11	ALR_VACUUM_ERROR
						Bit 12	ALR_LOW_WATER_LEVEL
						Bit 13	ALR_TEMPERATURE_RANGE_UNDERSHOT
						Bit 14	ALR_TEMPERATURE_RANGE_OVERSHOT
						Bit 15	ALR_VACUUM_TEST_FAILED

Function code	Adress	Access	Name	Type	Unit	Formatting	
Input register 0x04	0x0044	R	Warnings_3	U16	Binary	NA (For Future Use)	
Input register 0x04	0x0045	R	Warnings_2	U16	Binary	NA (For Future Use)	
Input register 0x04	0x0046	R	Warnings_1	U16	Binary	Bit 0	WRN_VACUUM_PRESSURE_TOO_LOW
						Bit 1	WRN_VACUUM_PRESSURE_TOO_HIGH
						Bit 2	WRN_CONSTANTLY_GAS_DETECTED
						Bit 3	WRN_VACUUM_TEST_IN_PROGRESS
						Bit 4-15	NA
Input register 0x04	0x0047	R	Warnings_0	U16	Binary	Bit 0	WRN_SYSTEM_PRESSURE_LOW
						Bit 1	WRN_SYSTEM_PRESSURE_HIGH
						Bit 2	WRN_NO_REFILL_FLOW
						Bit 3	WRN_TIME_BETWEEN_REFILLS
						Bit 4	WRN_NUMBER_OF_REFILLS
						Bit 5	WRN_FILLING_WITHOUT_REQUEST
						Bit 6	WRN_MAX_AMOUNT_REFILL_WATER
						Bit 7	WRN_REFILL_RUNTIME_EXCEEDED
						Bit 8	WRN_MAINTENANCE_1_DUE
						Bit 9	WRN_TP_MOTOR
						Bit 10	WRN_MANUAL_MODE
						Bit 11	WRN_DEVICE_REBOOT
						Bit 12	NA
						Bit 13	WRN_FILTER_FULL
						Bit 14	WRN_EXTERNAL_STANDBY_REQUEST
						Bit 15	WRN_INTERNAL_STANDBY

Function code	Address	Access	Name	Type	Unit	Formatting
Input register 0x04	0x0050	R	OverallRuntime_H	U16	H	Decimal
Input register 0x04	0x0051	R	OverallRuntime_L	U16	H	Decimal
Input register 0x04	0x0052	R	TotalFilledVolume_H	U16	L	Decimal
Input register 0x04	0x0053	R	TotalFilledVolume_L	U16	L	Decimal
Input register 0x04	0x0054	R	TotalFillTime_H	U16	S	Decimal
Input register 0x04	0x0055	R	TotalFillTime_L	U16	S	Decimal
Input register 0x04	0x0056	R	Total number degassing cycles_H	U16	count	Decimal
Input register 0x04	0x0057	R	TotalNumber DegassingCycles_L	U16	count	Decimal
Input register 0x04	0x0058	R	nr of topups_H	U16	count	Decimal
Input register 0x04	0x0059	R	nr of topups_L	U16	count	Decimal
Input register 0x04	0x005A	R	ActivationsPump_H	U16	count	Decimal
Input register 0x04	0x005B	R	ActivationsPump_L	U16	count	Decimal
Input register 0x04	0x005C	R	ActivationsValve1_H	U16	count	Decimal
Input register 0x04	0x005D	R	ActivationsValve1_L	U16	count	Decimal
Input register 0x04	0x005E	R	ActivationsValve2_H	U16	count	Decimal
Input register 0x04	0x005F	R	ActivationsValve2_L	U16	count	Decimal
Input register 0x04	0x0060	R	RuntimePump_H	U16	S	Decimal
Input register 0x04	0x0061	R	RuntimePump_L	U16	S	Decimal
Input register 0x04	0x0062	R	RuntimeValve1_H	U16	S	Decimal
Input register 0x04	0x0063	R	RuntimeValve1_L	U16	S	Decimal
Input register 0x04	0x0064	R	RuntimeValve2_H	U16	S	Decimal
Input register 0x04	0x0065	R	RuntimeValve2_L	U16	S	Decimal
Input register 0x04	0x0066	R	SumOfGasEvacuation Times_H	U16	count	Decimal
Input register 0x04	0x0067	R	SumOfGasEvacuation Times_L	U16	count	Decimal
Input register 0x04	0x0068	R	NA (For Future Use)		-	NA (For Future Use)
Input register 0x04	0x0069	R	NA (For Future Use)		-	NA (For Future Use)
Input register 0x04	0x006A	R	LevelSwitchActivations_H	U16	count	Decimal

Function code	Adress	Access	Name	Type	Unit	Formatting
Input register 0x04	0x006B	R	LevelSwitchActivations_L	U16	count	Decimal
Input register 0x04	0x006C	R	GasSensorActivations_H	U16	count	Decimal
Input register 0x04	0x006D	R	GasSensorActivations_L	U16	count	Decimal
Input register 0x04	0x006E	R	ActivationsVfc1_H	U16	count	Decimal
Input register 0x04	0x006F	R	ActivationsVfc1_L	U16	count	Decimal
Input register 0x04	0x0070	R	ActivationsVfc2_H	U16	count	Decimal
Input register 0x04	0x0071	R	ActivationsVfc2_L	U16	count	Decimal
Input register 0x04	0x0072	R	ActivationsVfc3_H	U16	count	Decimal
Input register 0x04	0x0073	R	ActivationsVfc3_L	U16	count	Decimal

5. Tableau de correspondance Bacnet Flamcomat

5.1. Flamcomat

Object ID	Access	Object Name	Type	Unit	Range
OBJECT_ANALOG_VALUE:0	R	Current working pressure	UINT16	cbar	0..16000
OBJECT_ANALOG_VALUE:1	R	Current vessel level	UINT16	%	0..100
OBJECT_ANALOG_VALUE:2	R	Outputs state (1-on)	UINT16		Bit 0: P35 M1 active (pump/ compressor) Bit 1: P36 M2 active (pump/ compressor) Bit 2: P33 V1 active (valve 1) Bit 3: P34 V2 active (valve 2) Bit 4: P31 V3 active (valve 3) Bit 8: Degassing On (Enabled)* Bit 9: Degassing mode (0-normal, 1-turbo)*
OBJECT_ANALOG_VALUE:3	R	Error table 1 (1-error active)	UINT16		Bit 0: Single pump/ compressor maximum run time error Bit 1: Redundant pumps/ compressor maximum run time error Bit 2: Load dependent pumps/ compressor maximum run time error Bit 3: Single pump/compressor current error Bit 4: Pump A current error (double pump/ compressor configuration) Bit 5: Pump B current error (double pump/ compressor configuration) Bit 6: Pumps A and B/ compressor current error (double pump c configuration) Bit 7: Pump C/ compressor current error Bit 8: Self-learning valve correction error Bit 9: Self-learning pump/ compressor correction error Bit 10: Pressure sensor current exceeded Bit 11: Pressure sensor no current Bit 12: Load cell current exceeded Bit 13: Load cell no current Bit 14: Pump A/ compressor power consumption too high Bit 15: Pump B/ compressor power consumption too high

Object ID	Access	Object Name	Type	Unit	Range
OBJECT_ ANALOG_ VALUE:4	R	Error table 2 (1-error active)	UINT16		Bit 0: Pump C/ compressor power consumption too high Bit 1: Maximum runtime P35 M1 exeeded Bit 2: Maximum runtime P36 M2 exeeded Bit 3: Maximum supplation threaded water amount exceeded Bit 4: Pump/ compressor running, no decrease of water level in vessel Bit 5: Valve open, no increase of water level in vessel Bit 6: Maximum runtime P33 V1 exeeded Bit 7: Maximum runtime P34 V2 exeeded Bit 8: To run quick fill* Bit 9: To run system fill* Bit 10: System run in auto mode Bit 11: Quick system filling active, V to stop* Bit 12: System filling active, V to stop* Bit 13: Manual mode active, press V to start automat Bit 14: Diaphragm rupture Bit 15: Spare
OBJECT_ ANALOG_ VALUE:5	R	Error table 3 (1-error active)	UINT16		Bit 0: Water level increase in vessel without Flamcomat activity* Bit 1: Water level decrease in vessel without Flamcomat activity* Bit 2: Maintenance 1 is due Bit 3: Initial fill failed Bit 4: Maximum refill time exceeded Bit 5: Maximum drain time exceeded* Bit 6: No refill flow Bit 7: Amount refill water too much Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Initial fill active Bit 12: Manual initial fill active Bit 13: System fill timer expired* Bit 14: Quick fill timer expired* Bit 15: Maintenance 2 is due
OBJECT_ ANALOG_ VALUE:6	R	Error table 4 (1-error active)	UINT16		Bit 0: Maintenance 3 is due Bit 1: Maintenance 4 is due Bit 2: Spare Bit 3: Spare Bit 4: Spare Bit 5: Spare Bit 6: Spare Bit 7: Spare Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Spare Bit 12: Spare Bit 13: Spare Bit 14: Spare Bit 15: Spare

Object ID	Access	Object Name	Type	Unit	Range
OBJECT_ ANALOG_ VALUE:7	R	Operational hours total	UINT16	hours	
OBJECT_ ANALOG_ VALUE:8	R	Availability (0 - No, 1 - Yes)	UINT16		Bit 0: P35 M1 pressure increase Bit 1: P36 M2 Pressure increase Bit 2: P33 V1 (pressure decrease/ compressor valve) Bit 3: P34 V2 (pressure decrease/ compressor valve) Bit 4: P31 V3 (filling pump/ valve) Bit 8: Minimum pressure limiter Bit 9: Diaphragm rupture sensor Bit 10: Maximum temperature sensor
OBJECT_ ANALOG_ VALUE:9	R	Pressure setpoint	UINT16	cbar	0..16000
OBJECT_ ANALOG_ VALUE:10	R	Minimum water level (absolute)	UINT16	%	
OBJECT_ ANALOG_ VALUE:11	R	Level refueling On (absolute)	UINT16	%	
OBJECT_ ANALOG_ VALUE:12	R	Level refueling Off (absolute)	UINT16	%	
OBJECT_ ANALOG_ VALUE:13	R	Minimum level alarm limit	UINT16	%	
OBJECT_ ANALOG_ VALUE:14	R	Maximum level alarm limit	UINT16	%	
OBJECT_ ANALOG_ VALUE:15	R	Nominal volume of vessel	UINT16	l	
OBJECT_ ANALOG_ VALUE:16	R	Operational mode	UINT16		0 - single mode, 1 - redundant mode 2 - load-dependent
OBJECT_ ANALOG_ VALUE:17	R	Total refill liters	UINT16	l	
OBJECT_ ANALOG_ VALUE:18	R	Total refill minutes	UINT16	minute	

* Not applicable for the Flamcomat MK-U G4

5.2. Flexfiller

Object ID	Access	Object name	Type	Unit	Formatting
OBJECT_ ANALOG_ VALUE:0	R	"alarms"	U64	Binary	Bit 0: ALR_SYSTEM_PRESSURE_LOW Bit 1: ALR_SYSTEM_PRESSURE_BELOW_ MINIMUM Bit 2: ALR_SYSTEM_PRESSURE_ BELOW_ MINIMUM Bit 3: ALR_SYSTEM_PRESSURE_ SENSOR_OOB_HIGH Bit 4: ALR_SYSTEM_PRESSURE_HIGH Bit 5: ALR_SYSTEM_FILL_TIMER_ EXPIRED Bit 6: ALR_SAFETY_VALVE_ACTIVE Bit 7: ALR_VESSEL_PRECHARGE_LOST Bit 8: ALR_PUMP_1_OVER_CURRENT Bit 9: ALR_PUMP_2_OVER_CURRENT Bit 10: ALR_PUMP_1_NO_CURRENT Bit 11: ALR_PUMP_2_NO_CURRENT
OBJECT_ ANALOG_ VALUE:1	R	"warnings"	U64	Binary	Bit 0: WRN_SYSTEM_PRESSURE_HIGH Bit 1: WRN_MAX_AMOUNT_TOPUP_ WATER Bit 2: WRN_SYSTEM_PRESSURE_LOW Bit 3: WRN_NUMBER_OF_TOPUPS Bit 4: WRN_SUPPLY_PRESSURE_TOO_ LOW Bit 5: WRN_SUPPLY_PRESSURE_TOO_ HIGH Bit 6: WRN_SUPPLY_PRESSURE_ SENSOR_OOB_LOW Bit 7: WRN_SUPPLY_PRESSURE_ SENSOR_OOB_HIGH Bit 8: WRN_SYSTEM_FILL_SELF_ LEARNING Bit 9: WRN_MANUAL_MODE Bit 10: WRN_MAXIMUM_TOPUP_TIME_ EXCEEDED Bit 11: WRN_NO_TOPUP_FLOW

Object ID	Access	Object name	Type	Unit	Formatting
OBJECT_ANALOG_VALUE:1	R	"warnings"	U64	Binary	Bit 12: WRN_MAINTENANCE_1_DUE Bit 13: WRN_MAINTENANCE_2_DUE Bit 14: WRN_MAINTENANCE_3_DUE Bit 15: WRN_MAINTENANCE_4_DUE Bit 16: WRN_SYSTEM_FILL_ACTIVE Bit 17: WRN_SYSTEM_FILL_ON_HOLD Bit 18: WRN_ANTI_LEGIONELLA_RUNNING Bit 19: WRN_DEVICE_REBOOT Bit 20: WRN_TANK_LEVEL_SENSOR_OOB_LOW Bit 21: WRN_TANK_LEVEL_SENSOR_OOB_HIGH Bit 22: WRN_PUMP_DRY_RUN Bit 23: WRN_TANK_OVERFLOW Bit 24: WRN_MANUAL_SYSTEM_FILL Bit 25: WRN_PUMP_1_RUNTIME Bit 26: WRN_PUMP_2_RUNTIME Bit 27: WRN_ANTI_LEGIONELLA_RECOVERY Bit 28: WRN_VACUUM_PRESSURE_SENSOR_OOB_LOW Bit 29: WRN_VACUUM_PRESSURE_SENSOR_OOB_HIGH Bit 30: WRN_FILTER_FULL Bit 31: WRN_VACUUM_ERROR Bit 32: WRN_SYPHON_FLUSH_DETECTED
OBJECT_ANALOG_VALUE:2	R	"current system pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:3	R	"current supply pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:4	R	"current tank level"	U16	%	Decimal
OBJECT_ANALOG_VALUE:5	R	"current vacuum pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:6	R	"pressure setpoint"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:7	R	"safety valve setting"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:8	R	"low pressure alarm limit"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:9	R	"high pressure alarm limit"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:10	R	"vessel volume"	U16	l	Decimal
OBJECT_ANALOG_VALUE:11	R	"digital input"	U16	Binary	NA

Object ID	Access	Object name	Type	Unit	Formatting
OBJECT_ ANALOG_ VALUE:12	R	"digital output"	U16	Binary	Bit 0: P36 (Pump 2 / NC) Bit 1: P35 (Pump 1/MV1 topup valve) Bit 2: P34 (NC) Bit 3: P33 (NC) Bit 4: P32 (NC) Bit 5: P31 (Inlet valve/MV2 Drain Valve) Bit 6: P29 (VFC 1) Bit 7: P28 (VFC 2) Bit 8: P27 (VFC 3)
OBJECT_ ANALOG_ VALUE:13	R	"accessories"	U32	Binary	NA
OBJECT_ ANALOG_ VALUE:14	R	"days to next maintenance 1"	U16	count	Decimal
OBJECT_ ANALOG_ VALUE:15	R	"days to next maintenance 2"	U16	count	Decimal
OBJECT_ ANALOG_ VALUE:16	R	"days to next maintenance 3"	U16	count	Decimal
OBJECT_ ANALOG_ VALUE:17	R	"days to next maintenance 4"	U16	count	Decimal
OBJECT_ ANALOG_ VALUE:18	R	"overall runtime"	U32	h	Decimal
OBJECT_ ANALOG_ VALUE:19	R	"total filled volume"	U32	ml	Decimal
OBJECT_ ANALOG_ VALUE:20	R	"total fill time"	U32	s	Decimal
OBJECT_ ANALOG_ VALUE:21	R	"activations MV1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:22	R	"activations MV2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:23	R	"runtime MV1"	U32	s	Decimal
OBJECT_ ANALOG_ VALUE:24	R	"runtime MV2"	U32	s	Decimal
OBJECT_ ANALOG_ VALUE:25	R	"activations Pump1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:26	R	"activations Pump2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:27	R	"activations Valve1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:28	R	"runtime Pump1"	U32	s	Decimal

Object ID	Access	Oject name	Type	Unit	Formatting
OBJECT_ ANALOG_ VALUE:29	R	"runtime Pump2"	U32	s	Decimal
OBJECT_ ANALOG_ VALUE:30	R	"runtime Valve1"	U32	s	Decimal
OBJECT_ ANALOG_ VALUE:31	R	"nrOfNormalTopUps"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:32	R	"nrOfEmergencyStops"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:33	R	"safetyValveActivations"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:34	R	"activationsVfc1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:35	R	"activationsVfc2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:36	R	"activationsVfc3"	U32	count	Decimal

5.3. Vacumat Eco G4

Object ID	Access	Name	Type	Unit	Formatting	
OBJECT_ ANALOG_ VALUE:0	R	"alarms"	U64	Binary	Bit 0	ALR_SYSTEM_PRESSURE_ LOW
					Bit 1	ALR_SYSTEM_PRESSURE_ BELOW_MINIMUM
					Bit 2	ALR_SYSTEM_PRESSURE_ SENSOR_OOB_LOW
					Bit 3	ALR_SYSTEM_PRESSURE_ SENSOR_OOB_HIGH
					Bit 4	ALR_SYSTEM_PRESSURE_ HIGH
					Bit 5	ALR_VACUUM_PRESSURE_ SENSOR_OOB_LOW
					Bit 6	ALR_VACUUM_PRESSURE_ SENSOR_OOB_HIGH
					Bit 7	ALR_TEMPERATURE_ SENSOR_OOB_LOW
					Bit 8	ALR_TEMPERATURE_ SENSOR_OOB_HIGH
					Bit 9	ALR_PUMP_OVER_CURRENT
					Bit 10	ALR_PUMP_NO_CURRENT
					Bit 11	ALR_VACUUM_ERROR
					Bit 12	ALR_LOW_WATER_LEVEL
					Bit 13	ALR_TEMPERATURE_ RANGE_UNDERSHOT
OBJECT_ ANALOG_ VALUE:0	R	"alarms"	U64	Binary	Bit 14	ALR_TEMPERATURE_ RANGE_OVERSHOT
					Bit 15	ALR_VACUUM_TEST_FAILED
					Bit 16-63	NA

Object ID	Access	Name	Type	Unit	Formatting	
OBJECT_ ANALOG_ VALUE:1	R	"warnings"	U64	Binary	Bit 0	WRN_SYSTEM_PRESSURE_ LOW
					Bit 1	WRN_SYSTEM_PRESSURE_ HIGH
					Bit 2	WRN_NO_REFILL_FLOW
					Bit 3	WRN_TIME_BETWEEN_ REFILLS
					Bit 4	WRN_NUMBER_OF_REFILLS
					Bit 5	WRN_FILLING_WITHOUT_ REQUEST
					Bit 6	WRN_MAX_AMOUNT_ REFILL_WATER
					Bit 7	WRN_REFILL_RUNTIME_ EXCEEDED
					Bit 8	WRN_MAINTENANCE_1_DUE
					Bit 9	WRN_TP_MOTOR
					Bit 10	WRN_MANUAL_MODE
					Bit 11	WRN_DEVICE_REBOOT
					Bit 12	WRN_PUMP_RUNTIME
					Bit 13	WRN_FILTER_FULL
					Bit 14	WRN_TOO_DEEP_VACUUM
					Bit 15	WRN_EXTERNAL_ STANDBY_REQUEST
					Bit 16	WRN_INTERNAL_STANDBY
					Bit 17	WRN_VACUUM_PRESSURE_ TOO_LOW
					Bit 18	WRN_VACUUM_PRESSURE_ TOO_HIGH
					Bit 19	WRN_CONSTANTLY_GAS_ DETECTED
					Bit 20-63	NA
OBJECT_ ANALOG_ VALUE:2	R	"current system pressure"	S16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:3	R	"current vacuum pressure"	S16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:4	R	"Current teperature pressure"	S16	cDeg C	Decimal	

Object ID	Access	Name	Type	Unit	Formatting	
OBJECT_ ANALOG_ VALUE:5	R	"pressure setpoint"	U16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:6	R	"safety valve setting"	U16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:7	R	"low pressure alarm limit"	U16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:8	R	"high pressure alarm limit"	U16	mbar	Decimal	
OBJECT_ ANALOG_ VALUE:9	R	"digital input"	U16	Binary	Decimal	
OBJECT_ ANALOG_ VALUE:10	R	"digital output"	U16	Binary	Bit 0	P36 (NA)
					Bit 1	P35 (Pump 1)
					Bit 2	P34 (NA)
					Bit 3	P33 (3 way valve)
					Bit 4	P32 (NA)
					Bit 5	P31 (System fill)
					Bit 6	P29 (VFC 1)
					Bit 7	P28 (VFC 2)
					Bit 8	P27 (VFC 3)
OBJECT_ ANALOG_ VALUE:11	R	"accessories"	U32	Binary	NA	
OBJECT_ ANALOG_ VALUE:12	R	"days to next maintenance 1"	U16	count	Decimal	
OBJECT_ ANALOG_ VALUE:13	R	"days to next maintenance 2"	U16	count	Decimal (NA future use)	
OBJECT_ ANALOG_ VALUE:14	R	"days to next maintenance 3"	U16	count	Decimal (NA future use)	
OBJECT_ ANALOG_ VALUE:15	R	"days to next maintenance 4"	U16	count	Decimal (NA future use)	
OBJECT_ ANALOG_ VALUE:16	R	"overall runtime"	U32	H	Decimal	
OBJECT_ ANALOG_ VALUE:17	R	"total filled volume"	U32	L	Decimal	
OBJECT_ ANALOG_ VALUE:18	R	"total fill time"	U32	S	Decimal	
OBJECT_ ANALOG_ VALUE:19	R	"total nr of degassing cycles"	U32	count	Decimal	

Object ID	Access	Name	Type	Unit	Formatting
OBJECT_ ANALOG_ VALUE:20	R	"nr of topups"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:21	R	"activations pump"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:22	R	"activations valve1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:23	R	"activations valve2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:24	R	"runtime pump"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:25	R	"runtime valve1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:26	R	"runtime valve2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:27	R	"sum of gas evacuation times"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:28	R	"level switch activations"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:29	R	"gas sensor activations"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:30	R	"activations vfc1"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:31	R	"activations vfc2"	U32	count	Decimal
OBJECT_ ANALOG_ VALUE:32	R	"activations vfc3"	U32	count	Decimal

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Remarques

[illegible]

Aalberts hydronic flow control**Headquarters**

Postbus 30110 / 1303 AC Almere
Fort Blauwkapel 1 / 1358 AD Almere
Netherlands

+31 (0)36 526 2300 /
nl.info@aalberts-hfc.com

flamco.aalberts-hfc.com

België / Belgique

+32 (0)2 371 01 61
be.info@aalberts-hfc.com

Северна Македонија

+389 2 30 77 407
balkan@aalberts-hfc.com

Ceska Republika

+420 284 00 10 81
cz.info@aalberts-hfc.com

Danmark

+45 44 94 02 07
dk.info@aalberts-hfc.com

Deutschland

+49 342 927 130
de.info@aalberts-hfc.com

Eesti

+372 568 838 38
ee.info@aalberts-hfc.com

España

+34 902 89 89 89
es.info@aalberts-hfc.com

France

+33 (0) 986 000 400
fr.info@aalberts-hfc.com

Magyarország

+36 23 880 981
hu.info@aalberts-hfc.com

Österreich

+43 664 8822 8566
at.info@aalberts-hfc.com

Polska

+48 65 529 49 89
pl.info@aalberts-hfc.com

Slovensko

+421 475 634 043
sk.info@aalberts-hfc.com

Suomi

+358 010 320 99 90
fi.info@aalberts-hfc.com

Svenska

+46 050 042 89 95
se.info@aalberts-hfc.com

Switzerland

+41 41 854 30 50
ch.info@aalberts-hfc.com

United Arab Emirates

+971 56 6821500
ae.info@aalberts-hfc.com

United Kingdom

+44 17 447 447 44
uk.info@aalberts-hfc.com

Україна

+38 044 353-92-97
ua.info@aalberts-hfc.com